



Control User Guide

Unidrive M200/M201

Variable Speed AC drive for induction motors

Part Number: 0478-0351-02

Issue: 2

Original Instructions

For the purposes of compliance with the EU Machinery Directive 2006/42/EC, the English version of this manual is the Original Instructions. Manuals in other languages are Translations of the Original Instructions.

Documentation

Manuals are available to download from the following locations:

http://www.emersonindustrial.com/en-EN/controltechniques/downloads/userquidesandsoftware/Pages/downloads.aspx

http://www.emersonindustrial.com/en-EN/leroy-somer-motors-drives/downloads/Pages/manuals.aspx

The information contained in the manuals is believed to be correct at the time of printing and does not form part of any contract. The manufacturer reserves the right to change the specification of the product and its performance, and the contents of the manual, without notice.

Incorrect installation and operation

The manufacturer accepts no liability for any consequences resulting from inappropriate, negligent or incorrect installation or incorrect adjustment of the operating parameters.

Environmental policy

We operate an Environmental Management System (EMS) certified to the International Standard ISO 14001.

Further information on our Environmental Policy can be found at:

http://www.emersonindustrial.com/en-EN/controltechniques/aboutus/environment/environmentalpolicyctuk/Pages/environmentalpolicyctuk.aspx

Disposal and Recycling



When electronic products reach the end of their useful life, they must not be disposed of along with domestic waste but should be recycled by a specialist recycler of electronic equipment. The products are designed to be easily dismantled into their major component parts for efficient recycling. The majority of materials used in the product are suitable for recycling.



Product packaging is of good quality and can be re-used. Large products are packed in wooden crates. Smaller products are packaged in strong cardboard cartons which have a high recycled fibre content. Cartons can be re-used and recycled. Polythene, used in protective film and bags for wrapping the product, can be recycled. When preparing to recycle or dispose of any product or packaging, please observe local legislation and best practice.

REACH legislation

EC Regulation 1907/2006 on the Registration, Evaluation, Authorisation and restriction of Chemicals (REACH) requires the supplier of an article to inform the recipient if it contains more than a specified proportion of any substance which is considered by the European Chemicals Agency (ECHA) to be a Substance of Very High Concern (SVHC) and is therefore listed by them as a candidate for compulsory authorisation.

Further information on our compliance with REACH can be found at:

www.emersonindustrial.com/en-EN/controltechniques/aboutus/environment/reachregulation/Pages/reachregulation.aspx

Control Techniques Ltd The Gro Newtown Powys SY16 3BE

Usine des Agriers Boulevard Marcellin Leroy CS10015 16915 Angouleme Cedex 9

Moteurs Leroy-Somer

France

Registered in England and Wales. Company Reg. No. 01236886.

Copyright

UK

The contents of this publication are believed to be correct at the time of printing. In the interests of a commitment to a policy of continuous development and improvement, the manufacturer reserves the right to change the specification of the product or its performance, or the contents of the guide, without notice.

All rights reserved. No parts of this guide may be reproduced or transmitted in any form or by any means, electrical or mechanical including photocopying, recording or by an information storage or retrieval system, without permission in writing from the publisher.

Copyright: © May 2017 Control Techniques Ltd

Issue Number: 2


How to use this guide

This guide is intended to be used in conjunction with the appropriate Power Installation Guide. The Power Installation Guide gives information necessary to physically install the drive. This guide gives information on drive configuration, operation and optimization.

NOTE

There are specific safety warnings throughout this guide, located in the relevant sections. In addition, Chapter 1 *Safety information* contains general safety information. It is essential that the warnings are observed and the information considered when working with or designing a system using the drive.

This map of the user guide helps to find the right sections for the task you wish to complete, but for specific information, refer to Contents on page 4:

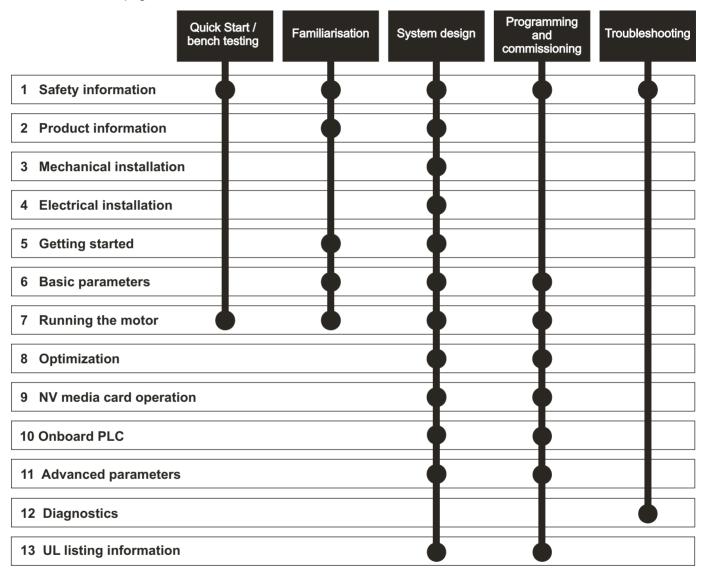

Contents

1	Safety information	7	8	Optimization	48
1.1	Warnings, Cautions and Notes	7	8.1	Motor map parameters	48
1.2	Installation and Use		8.2	Maximum motor rated current	
1.3	Enclosure		8.3	Current limits	
1.4	Competence of the installer		8.4	Motor thermal protection	
1.5	Electric Shock and Fire Hazards		8.5	Switching frequency	
1.6	Electrical installation		8.6	CT Modbus RTU specification	
1.7	Setting up, commissioning and maintenance				
1.8	Safety of machinery, safety-critical applications		9	NV Media Card	61
1.9	Electromagnetic compatibility (EMC)		9.1	Introduction	61
1.10	Copyright		9.2	SD card support	
	., ,		9.3	NV Media Card parameters	
2	Product information	9	9.4	NV Media Card trips	
2.1	Introduction	9	9.5	Data block header information	
2.2	Model number				
2.3	Ratings		10	Onboard PLC	65
2.4	Operating modes		10.1	Onboard PLC and Machine Control Studio	65
2.5	Keypad and display		10.2	Benefits	
2.6	Nameplate description		10.3	Features	
2.7	Options		10.4	Onboard PLC parameters	
			10.5	Onboard PLC trips	
3	Mechanical installation	.15			
3.1	Installing / removing options	15	11	Advanced parameters	67
3.2	Real time clock battery replacement		11.1	Parameter ranges and Variable minimum/ maximums:	70
4	Electrical installation	.19	11.2	Menu 1: Frequency reference	
4.1	24 Vdc supply	19	11.3	Menu 2: Ramps	
4.2	Communication connections		11.4	Menu 3: Frequency control	
4.3	Control connections		11.5	Menu 4: Torque and current control	
			11.6	Menu 5: Motor control	
5	Getting started	.23	11.7	Menu 6: Sequencer and clock	
5.1	Understanding the display		11.8	Menu 7: Analog I/O	
5.2	Keypad operation		11.9	Menu 8: Digital I/O	
5.3	Menu structure			Menu 9: Programmable logic, motorized pot,	
5.4	Menu 0			binary sum and timers	108
5.5	Advanced menus		11.11	Menu 10: Status and trips	
5.6	Changing the operating mode			Menu 11: General drive set-up	
5.7	Saving parameters			Menu 12: Threshold detectors, variable	
5.8	Restoring parameter defaults			selectors and brake control function	115
5.9	Parameter access level and security		11 14	Menu 14: User PID controller	
5.10	Displaying parameters with non-default values			Menu 15: Option module set-up	
	only	27	11 16	Menu 18: Application menu 1	124
5.11	Displaying destination parameters only			Menu 20: Application menu 2	
5.12	Communications			Menu 21: Second motor parameters	
				Menu 22: Additional Menu 0 set-up	
6	Basic parameters	.29		Menu 24: Option Module Application	
6.1	Menu 0: Basic parameters	29	0	mond 2 n. option modulo , tppiloditon	0
6.2	Parameter descriptions				
6.3	Control terminal configurations and wiring				
7	Running the motor				
7.1	Quick start connections				
7.2	Changing the operating mode				
7.3	Quick start commissioning / start-up	46			

12	Diagnostics	129
12.1	Status modes (Keypad and LED status)	.129
12.2	Trip indications	.129
12.3	Identifying a trip / trip source	.129
12.4	Trips, Sub-trip numbers	.130
12.5	Internal / Hardware trips	.150
12.6	Alarm indications	.150
12.7	Status indications	.151
12.8	Displaying the trip history	
12.9	Behaviour of the drive when tripped	.152
13	UL Listing	153
13.1	UL file reference	.153
13.1 13.2	UL file reference	
		.153
13.2	Option modules, kits and accessories	.153 .153
13.2 13.3	Option modules, kits and accessories	.153 .153 .153 .153
13.2 13.3 13.4	Option modules, kits and accessories Enclosure ratings	.153 .153 .153 .153
13.2 13.3 13.4 13.5	Option modules, kits and accessories	.153 .153 .153 .153
13.2 13.3 13.4 13.5 13.6	Option modules, kits and accessories	153 153 153 153
13.2 13.3 13.4 13.5 13.6	Option modules, kits and accessories Enclosure ratings Mounting Environment Electrical Installation Motor overload protection and thermal memory retention External Class 2 supply	.153 .153 .153 .153 .153
13.2 13.3 13.4 13.5 13.6 13.7	Option modules, kits and accessories Enclosure ratings Mounting Environment Electrical Installation Motor overload protection and thermal memory retention	.153 .153 .153 .153 .153

EU Declaration of Conformity

Nidec Control Techniques Ltd, The Gro, Newtown, Powys, UK. SY16 3BE.

This declaration is issued under the sole responsibility of the manufacturer. The object of the declaration is in conformity with the relevant Union harmonization legislation. The declaration applies to the variable speed drive products shown below:

Model number	Interpretation	Nomenclature aaaa - bbc ddddde
aaaa	Basic series	M100, M101, M200, M201, M300, M400, M600, M700, M701, M702, M708, M709, M750, M751, M753, M754, F300, H300, E200, E300, HS30, HS70, HS71, HS72, M000, RECT
bb	Frame size	01, 02, 03, 04, 05, 06, 07, 08, 09, 10, 11
С	Voltage rating	1 = 100 V, 2 = 200 V, 4 = 400 V, 5 = 575 V, 6 = 690 V
ddddd	Current rating	Example 01000 = 100 A
е	Drive format	A = 6P Rectifier + Inverter (internal choke), D = Inverter, E = 6P Rectifier + Inverter (external choke), T = 12P Rectifier + Inverter (external choke)

The model number may be followed by additional characters that do not affect the ratings.

The variable speed drive products listed above have been designed and manufactured in accordance with the following European harmonized standards:

EN 61800-5-1:2007	Adjustable speed electrical power drive systems - Part 5-1: Safety requirements - Electrical, thermal and energy
EN 61800-3: 2004+A1:2012	Adjustable speed electrical power drive systems - Part 3: EMC requirements and specific test methods
EN 61000-6-2:2005	Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments
EN 61000-6-4: 2007+ A1:2011	Electromagnetic compatibility (EMC) - Part 6-4: Generic standards - Emission standard for industrial environments
EN 61000-3-2:2014	Electromagnetic compatibility (EMC) - Part 3-2: Limits for harmonic current emissions (equipment input current ≤16 A per phase)
EN 61000-3-3:2013	Electromagnetic compatibility (EMC) - Part 3-3: Limitation of voltage changes, voltage fluctuations and flicker in public, low voltage supply systems, for equipment with rated current ≤16 A per phase and not subject to conditional connection

EN 61000-3-2:2014 Applicable where input current < 16 A. No limits apply for professional equipment where input power ≥1 kW.

These products comply with the Restriction of Hazardous Substances Directive (2011/65/EU), the Low Voltage Directive (2014/35/EU) and the Electromagnetic Compatibility Directive (2014/30/EU).

G Williams

Vice President, Technology

Joign wlland

Date: 25th April 2017

These electronic drive products are intended to be used with appropriate motors, controllers, electrical protection components and other equipment to form complete end products or systems. Compliance with safety and EMC regulations depends upon installing and configuring drives correctly, including using the specified input filters.

The drives must be installed only by professional installers who are familiar with requirements for safety and EMC. Refer to the Product Documentation. An EMC data sheet is available giving detailed information. The assembler is responsible for ensuring that the end product or system complies with all the relevant laws in the country where it is to be used.

Safety information Product Mechanical Electrical Gettina Basic Running the NV Media Onboard Advanced **UL** Listing Optimization Diagnostics parameters moto PLC

1 Safety information

1.1 Warnings, Cautions and Notes



A Warning contains information which is essential for avoiding a safety hazard.



A Caution contains information which is necessary for avoiding a risk of damage to the product or other equipment.

NOTE

A Note contains information which helps to ensure correct operation of the product.

1.2 Installation and Use

The information given in this publication is derived from tests and calculations on sample products. It is provided to assist in the correct application of the product, and is believed to correctly reflect the behaviour of the product when operated in accordance with the instructions. The provision of this data does not form part of any contract or undertaking. Where a statement of conformity is made with a specific standard, the manufacturer takes all reasonable measures to ensure that its products are in conformance. Where specific values are given these are subject to normal engineering variations between samples of the same product. They may also be affected by the operating environment and details of the installation arrangement.

The manufacturer accepts no liability for any consequences resulting from inappropriate, negligent or incorrect installation of the equipment.



WARNING - This warning applies to products intended to be used with variable speed drives.

The adjustable speed drive uses high voltages and currents, carries a high level of stored electrical energy, and is used to control mechanical plant which can cause injury.

Close attention is required to the electrical installation and the system design to avoid hazards either in normal operation or in the event of equipment malfunction.

System design, installation, commissioning and maintenance must be carried out by personnel who have the necessary training and experience. They must read this safety information and the instruction manual carefully. Failure to observe the following instructions can cause physical injury or death, or damage to the equipment.

1.3 Enclosure

Unless stated otherwise in the installation instructions, the product is intended to be mounted in an enclosure which prevents access except by trained and authorized personnel, and which prevents the ingress of contamination. It is designed for use in an environment classified as pollution degree 2 in accordance with IEC 60664-1. This means that only dry, non-conducting contamination is acceptable.

1.4 Competence of the installer

Installation should be carried out by professional installers who are familiar with the requirements for safety and EMC. The installer is responsible for ensuring that the end product or system complies with all the relevant laws in the country where it is to be used.

1.5 Electric Shock and Fire Hazards



WARNING - Dangerous voltage

Where products are supplied by or connected to mains voltages, the voltages used can cause severe electrical shock and/or burns, and could be lethal. Extreme care is necessary at all times when working with or adjacent to the equipment. Refer to the relevant documentation.

1.5.1 AC supply

The AC supply must be isolated before any servicing work is performed, other than adjustments to the settings or parameters specified in the manual

1.5.2 Live terminals

Some types of signal and control lines carry hazardous voltages (120/240 V) and can cause severe electric shock and may be lethal.

1.5.3 Stored charge

Some products contain capacitors that remain charged to a potentially lethal voltage after the power supply has been disconnected. It is recommended that the power supply is isolated at least ten minutes before working on the equipment.

1.6 Electrical installation

1.6.1 Protective Ground (Earth) connection

The ground loop impedance must conform to the requirements of local safety regulations. The equipment must be grounded by a connection capable of carrying the prospective fault current until the protective device (fuse or circuit breaker) disconnects the supply. The ground connections must be inspected and tested at appropriate intervals.

1.6.2 Fuses

The supply to the equipment must be installed with suitable protection against overload and short-circuits. The tables in the relevant documentation show recommended fuse ratings. Failure to observe these installation instructions could result in fire.

1.6.3 Cables

The cable sizes in the relevant documentation are only a guide. The mounting and grouping of cables affects their current-carrying capacity, in some cases smaller cables may be acceptable but in other cases a larger cable is required to avoid excessive temperature or voltage drop. Refer to local wiring regulations for the correct size of cables. Failure to observe these installation instructions could result in fire.

1.6.4 Terminal connections and torque settings

Loose power connections can be a fire risk. Always ensure that terminals are tightened to the specified torques. Refer to the tables in the relevant documentation.

1.6.5 High voltage insulation (flash) testing

High voltage insulation (flash) testing should not be carried out on the equipment.

1.6.6 ELV terminals

The ELV terminals are insulated from the mains supply by a single isolation barrier.

These terminals must be prevented from human contact by an additional isolation barrier, for example a terminal cover.

1.6.7 SELV terminals

SELV terminals can be safely connected to other SELV equipment and further protection against human contact is not required.

If an ELV terminal is connected directly to a SELV circuit (on the drive or other equipment), the combined circuit is ELV.

For this reason, ELV terminals should not be connected to SELV circuits unless it is acceptable to compromise the SELV circuit.

Safety Product Mechanical Electrical Getting Basic Running the NV Media Advanced Onboard **UL** Listing Ontimization Diagnostics information information installation installation Card PLC parameters

1.6.8 Products connected by plug and socket

An electric shock hazard exists if mains-supplied equipment is supplied via a plug and socket. When unplugged, the pins of the plug may carry a potentially lethal voltage until the internal capacitors have discharged. This can take up to 10 minutes.

It is recommended that a shrouded plug is used that prevents contact with the pins.

1.7 Setting up, commissioning and maintenance



It is essential that changes to the settings are given careful consideration. Depending on the application, a change could have an impact on safety. Appropriate precautions must be taken against inadvertent changes or tampering. Some specific settings which require particular care are listed below. This is not an exclusive list. Other settings may have an impact on safety in specific applications.

1.7.1 Lifting and handling

Some items of equipment weigh in excess of 15 kg (33 lb). Use appropriate safeguards when lifting these models. A full list of weights can be found in the installation instructions.

1.7.2 Output circuit and motor protection

Control parameters that are related to motor overload and protection must be set correctly to avoid a risk of overheating and fire in the event of motor overload. In some applications motor temperature protection may also be required.

1.7.3 STOP, Enable and Safe Torque Off functions (where applicable)

These functions do not remove dangerous voltages from the equipment or any external option unit, nor do they isolate the motor from dangerous voltages.

Automatic start

Some parameter settings may cause the motor to start unexpectedly.

Restore default parameter set

Depending on the application, this may cause unpredictable or hazardous operation.

1.8 Safety of machinery, safety-critical applications

Within the European Union all machinery in which this product is used must comply with Machinery Directive 2006/42/EC.

The design of safety-related control systems must only be done by personnel with the required training and experience. The Safe Torque Off function will only ensure the safety of a machine if it is correctly incorporated into a complete safety system. The system must be subject to a risk assessment to confirm that the residual risk of an unsafe event is at an acceptable level for the application.

1.9 Electromagnetic compatibility (EMC)

The product is designed to comply with international standards in a typical installation. Installation instructions are provided in the User Guide. If the installation is poorly designed or other equipment does not comply with international standards for EMC, the product might cause or suffer from disturbance due to electromagnetic interaction with other equipment. It is the responsibility of the installer to ensure that the equipment or system into which the product is incorporated complies with the relevant EMC legislation in the country of use.

Within the European Union, equipment into which this product is incorporated must comply with the Electromagnetic Compatibility Directive 2014/30/EU.

1.10 Copyright

The contents of this publication are believed to be correct at the time of printing. In the interests of a commitment to a policy of continuous development and improvement, the manufacturer reserves the right to change the specification of the product or its performance, or the contents of the guide, without notice.

All rights reserved. No parts of this publication may be reproduced or transmitted in any form by any means, electrical or mechanical including photocopying, recording or by an information storage or retrieval system, without permission in writing from the publisher.

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISTING

2 Product information

2.1 Introduction

Open loop AC drive

Unidrive M200 and Unidrive M201 deliver maximum machine performance with open loop vector and sensorless induction motor control, for dynamic and efficient machine operation.


Features

- · Flexible machine integration through communications
- NV Media Card for parameter copying and data storage
- 24 Vdc backup supply (optional)
- EIA 485 serial communications interface (optional)

2.2 Model number

The way in which the model numbers for the Unidrive M range are formed is illustrated below:

Figure 2-1 Model number

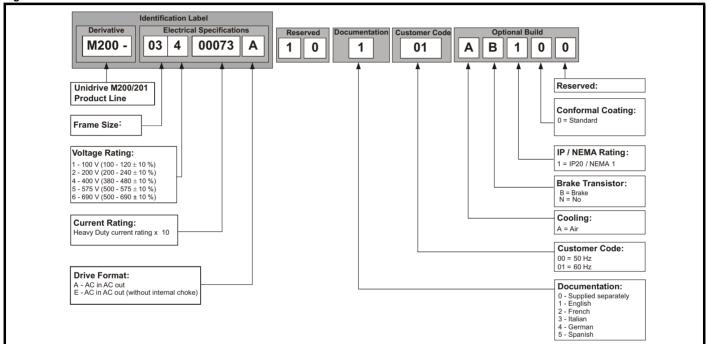

Safety Product Mechanical Electrical Gettino Basic Running the **NV** Media Advanced Optimization Diagnostics **UL** Listina information information installation installation paramete moto Card parameters


2.3 Ratings

The size 1 to 4 drive is Heavy Duty rated only.

The size 5 to 9 drive is dual rated.

The setting of the motor rated current determines which rating applies - Heavy Duty or Normal Duty.

The two ratings are compatible with motors designed to IEC60034. The graph aside illustrates the difference between Normal Duty and Heavy Duty with respect to continuous current rating and short term overload limits

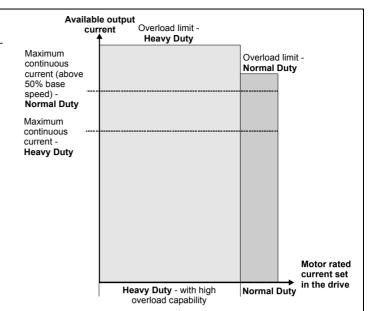

Normal Duty

For applications which use Self ventilated (TENV/TEFC) induction motors and require a low overload capability, and full torque at low speeds is not required (e.g. fans, pumps).

Self ventilated (TENV/TEFC) induction motors require increased protection against overload due to the reduced cooling effect of the fan at low speed. To provide the correct level of protection the $\rm I^2t$ software operates at a level which is speed dependent. This is illustrated in the graph below.

NOTE

The speed at which the low speed protection takes effect can be changed by the setting of *Low Speed Thermal Protection Mode* (04.025). The protection starts when the motor speed is below 15 % of base speed when Pr 04.025 = 0 (default) and below 50 % when Pr 04.025 = 1.

Heavy Duty (default)

For constant torque applications or applications which require a high overload capability, or full torque is required at low speeds (e.g. winders, hoists).

The thermal protection is set to protect force ventilated induction motors by default.


NOTE

If the application uses a self ventilated (TENV/TEFC) induction motor and increased thermal protection is required for speeds below 50 % base speed, then this can be enabled by setting *Low Speed Thermal Protection Mode* (04.025) = 1.

Operation of motor I²t protection


Motor I²t protection is fixed as shown below and is compatible with:

Self ventilated (TENV/TEFC) induction motors

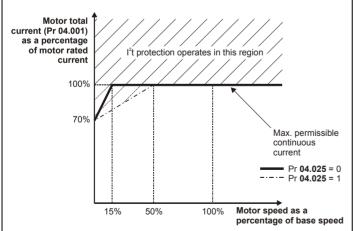

Motor I²t protection defaults to be compatible with:

Forced ventilation induction motors

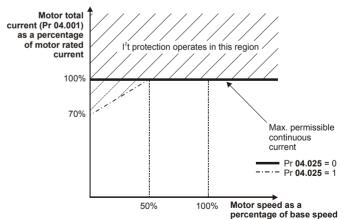

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostica	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

2.4 Operating modes

The drive is designed to operate in any of the following modes:

1. Open loop mode

Open loop vector mode Fixed V/F mode (V/Hz) Square V/F mode (V/Hz)

2. RFC - A

Without position feedback sensor

2.4.1 Open loop mode

The drive applies power to the motor at frequencies varied by the user. The motor speed is a result of the output frequency of the drive and slip due to the mechanical load. The drive can improve the speed control of the motor by applying slip compensation. The performance at low speed depends on whether V/F mode or open loop vector mode is selected.

Open loop vector mode

The voltage applied to the motor is directly proportional to the frequency except at low speed where the drive uses motor parameters to apply the correct voltage to keep the flux constant under varying load conditions.

Typically 100 % torque is available down to 1 Hz for a 50 Hz motor.

Fixed V/F mode

The voltage applied to the motor is directly proportional to the frequency except at low speed where a voltage boost is provided which is set by the user. This mode can be used for multi-motor applications.

Typically 100 % torque is available down to 4 Hz for a 50 Hz motor.

Square V/F mode

The voltage applied to the motor is directly proportional to the square of the frequency except at low speed where a voltage boost is provided which is set by the user. This mode can be used for running fan or pump applications with quadratic load characteristics or for multi-motor applications. This mode is not suitable for applications requiring a high starting torque.

2.4.2 RFC-A mode


Rotor Flux Control for Asynchronous (induction) motors (RFC-A) encompasses closed loop vector control without a position feedback device

Rotor flux control provides closed loop control without the need for position feedback by using current, voltages and key motor parameters to estimate the motor speed. It can eliminate instability traditionally associated with open loop control for example when operating large motors with light loads at low frequencies.

2.5 Keypad and display


The keypad and display provide information to the user regarding the operating status of the drive and trip codes, and provide the means for changing parameters, stopping and starting the drive, and the ability to perform a drive reset.

Figure 2-2 Unidrive M200 keypad detail

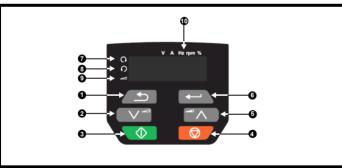

- 1. Escape button
- 2. Down button
- 3. Start button (green)
- 4. Stop / Reset button (red)
- 5. Up button
- 6. Enter button
- 7. Run forward indicator
- 8. Run reverse indicator
- 9. Keypad reference indicator
- 10. Unit indicators



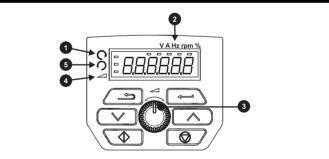


- 1. Run forward indicator
- 2. Unit indicators
- 3. Speed reference potentiometer
- 4. Keypad reference indicator
- 5. Run reverse indicator

1	Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Advanced	Diagnostics	UL Listina
	information	information	installation	installation	started	parameters	motor	Optimization	Card	parameters	Diagnostics	OL LISTING

2.6 Nameplate description

Figure 2-4 Typical drive rating labels for size 2

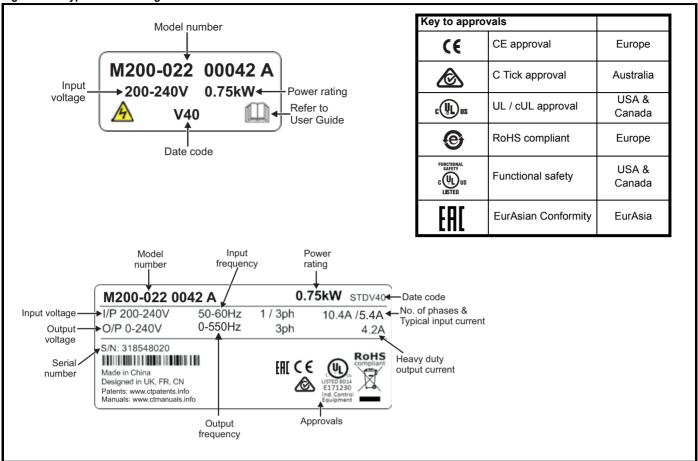

Refer to Figure 2-1 Model number on page 9 for further information relating to the labels.

NOTE

Date code format

The date code is four numbers. The first two numbers indicate the year and the remaining numbers indicate the week of the year in which the drive was built. This new format started in 2017.


Example:

A date code of **1710** would correspond to week 10 of year 2017.

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

2.7 **Options**

Figure 2-5 Options available with the drive

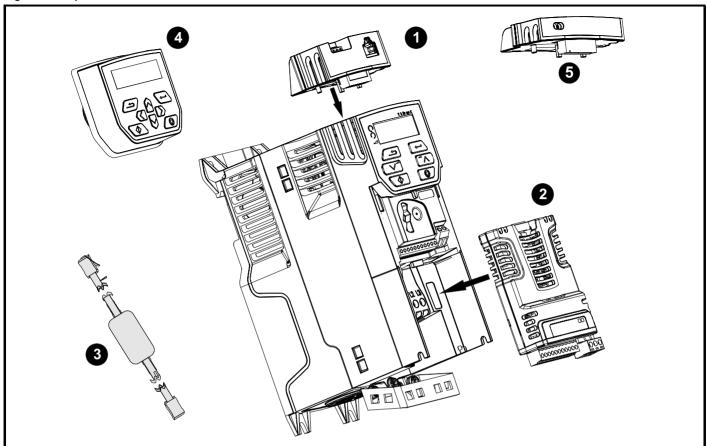

- 1. AI-485 adaptor
- Option module (SI)
 CT USB comms cable
- 4. Remote mountable LCD keypad5. Al-Backup adaptor module

1	Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Advanced	Diagnostics	UL Listina
	information	information	installation	installation	started	parameters	motor	Optimization	Card	parameters	Diagnostics	OL LISTING

Table 2-1 System Integration Option module identification

Туре	Option module	Color	Name	Further details		
	PET	Purple	SI-PROFIBUS	Profibus option PROFIBUS adaptor for communications with the drive		
		Medium Grey	SI-DeviceNet	DeviceNet option DeviceNet adaptor for communications with the drive		
Fieldbus		Light Grey	SI-CANopen	CANopen option CANopen adaptor for communications with the drive		
i leidbus		Yellow Green	SI-PROFINET V2	PROFINET V2 option PROFINET V2 adapter for communications with the drive		
		Beige	SI-Ethernet	External Ethernet module that supports EtherNet/IP, Modbus TCP/IP and RTMoE. The module can be used to provide global connectivity and integration with IT network technologies, such as wireless networking		
	Brown Red SI-Et		SI-EtherCAT	EtherCAT option EtherCAT adapter for communications with the drive		
Automation (I/O expansion)	and the second s	Orange	SI-I/O	Extended I/O Increases the I/O capability by adding the following combinations: Digital I/O Digital Inputs Analog Inputs (differential or single ended) Relays		

Table 2-2 Adaptor Interface (AI) option module identification

Type	Option module	Name	Further details
	- A	AI-485 adaptor	EIA 485 serial communications option Provides a EIA 485 serial communications interface via an RJ45 connector or alternative screw terminals.
Communications		AI-485 24V adaptor	EIA 485 serial communications option Provides a EIA 485 serial communications interface via an RJ45 connector or alternative screw terminals. It also provides a 24 V Backup supply input.
Dealous	•	Al-Backup adaptor	+24 V Backup and SD card interface Provides a +24 V Backup supply input and SD card interface.
Backup		Al-Smart adaptor	+24 V Backup and SD card interface Supplied with 4 GB SD Card for parameter copying and an input for 24 V Backup.

Table 2-3 Keypad identification

Туре	Keypad	Name	Further Details
Keypad		Remote-Keypad	Remote LCD keypad option Remote Keypad with a LCD display
псурац		Remote-Keypad RTC	Remote LCD keypad option Remote Keypad with a LCD display and real time clock

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISHING


3 **Mechanical installation**

3.1 Installing / removing options



Power down the drive before installing / removing the SI option module. Failure to do so may result in damage to the product.

Figure 3-1 Installation of an SI option module (size 2 to 4)

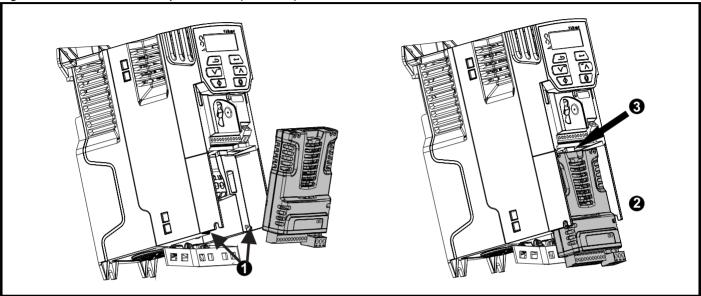


Installing the option module

- With the option module tilted slightly backwards, align and locate the two holes in the rear of the option module onto the two tabs (1) on the drive.
- Press the option module onto the drive as shown in (2) until the connector mates with the drive, ensuring that the tab (3) retains the option module in place.

Check that the option module is securely located on the drive. Always ensure that the terminal cover is always replaced before use as this ensures that the option module is firmly secured.


Figure 3-2 Removing the SI-Option module (size 2 to 4)

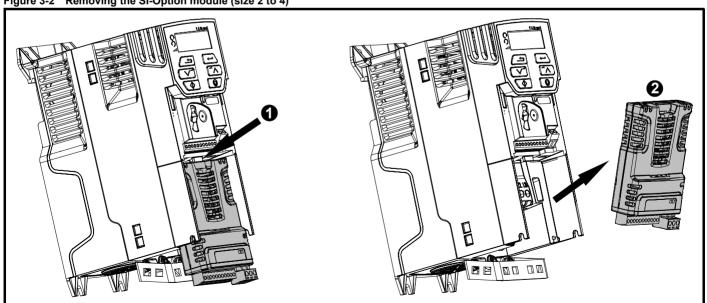

- Press down on the tab (1) to release the option module from the drive housing as shown.
- Tilt the option module slightly towards you and pull away from the drive housing (2).


4	1											
Safety	Product	Mechanical	Electrical	Getting	Basic	Running the		NV Media	Onboard	Advanced		
ou.or,				ooug	200.0	. turning tire	Optimization		01100010	, .a.a	Diagnostics	I UL Listina I
information	information	installation	installation	started	parameters	motor	Optimization	Card		narametere	Diagnostics	OL LISTING
IIIIOIIIIalioii	IIIIOIIIIatioii	IIIStallation	IIIStaliation	Starteu	parameters	motor		Caru	I LC	parameters		1

Figure 3-3 Installation of an SI option module (size 5 to 9)

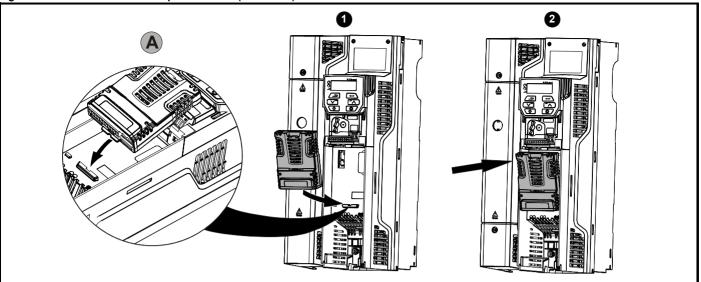

- Move the option module in the direction shown (1).
- · Align and insert the option module tab into the slot provided (2), This is shown in the detailed view (A).
- Press down on the option module until it clicks in place.


Figure 3-4 Removal of an SI option module (size 5 to 9)

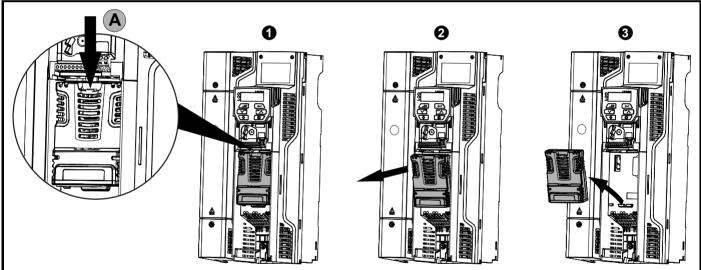

- To release the option module from the drive housing, press down on the tab (1) as shown in detailed view (A).
- Tilt the option module towards you as shown in (2).
- Remove the option module by lifting away from the drive as shown in (3).


Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISTING

Figure 3-5 Installing the Al-485 / Al-Backup Adaptor to the drive (Al-485 Adaptor shown)

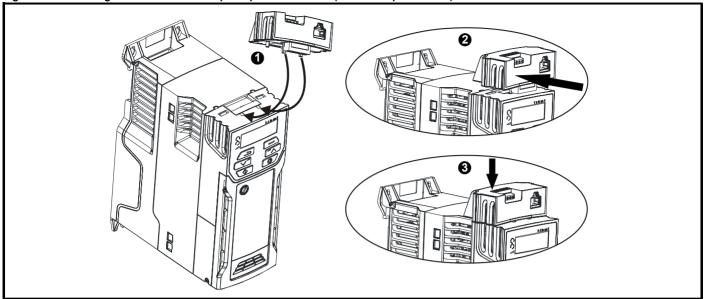

- Identify the two plastic fingers on the underside of the Al-485 / Al-Backup Adaptor (1) then insert the two fingers into the corresponding slots in the spring-loaded sliding cover on the top of the drive.
- Hold the adaptor firmly and push the spring loaded protective cover towards the back of the drive to expose the connector block (2) below.
- Press the adaptor downwards (3) until the adaptor connector locates into the drive connection below.

Figure 3-6 Removal of the Al-485 / Al-Backup Adaptor adaptor (Al-485 Adaptor shown)

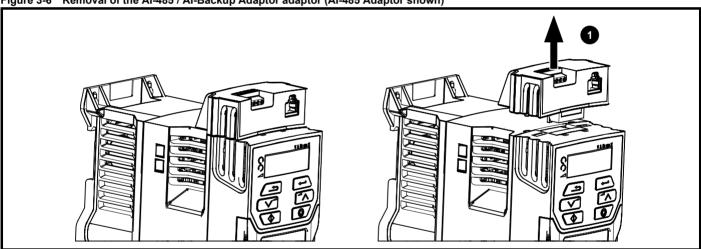

• To remove the Al-485 / Al-Backup Adaptor, pull it up away from the drive in the direction shown (1)

1	Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
	information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISTING

3.2 Real time clock battery replacement

Those keypads which have the real time clock feature contain a battery to ensure the clock works when the drive is powered down. The battery has a long life time but if the battery needs to be replaced or removed, follow the instructions below.

Low battery voltage is indicated by \Box low battery symbol on the keypad display.

Figure 3-7 Remote Keypad RTC (rear view)

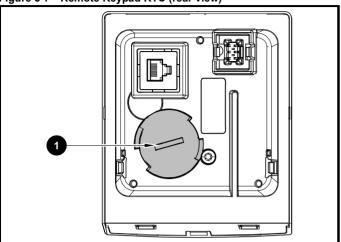


Figure 3-7 above illustrates the rear view of the Remote Keypad RTC.

- 1. To remove the battery cover insert a flat head screwdriver into the slot as shown (1), push and turn anti-clockwise until the battery cover is released.
- 2. Replace the battery (the battery type is: CR2032).
- 3. Reverse point 1 above to replace battery cover.

NOTE

Ensure the battery is disposed of correctly.

Safety Product Mechanical Getting Basic Running the NV Media Onboard Advanced Electrical Optimization Diagnostics **UL** Listina information motor PLC

4 Electrical installation

4.1 24 Vdc supply

The 24 Vdc supply connected to the +24 V supply terminals on the Al-Backup adaptor provides the following functions:


- It can be used as a back-up power supply to keep the control circuits
 of the drive powered up when the line power supply is removed. This
 allows any fieldbus modules or serial communications to continue to
 operate. If the line power supply is re-applied, then the normal
 operation can carry on after the drive automatically re-initializes the
 power board parameters.
- It can be used to clone or load parameters in order to pre-configure drives when the line power supply is not available. The keypad can be used to setup parameters if required. However, the drive will be in the Under Voltage state unless the line power supply is enabled, therefore diagnostics may not be possible. (Power down save parameters are not saved when using the 24 V back-up power supply input).

The working voltage range of the 24 V back-up power supply is as follows:

0 V	0 V (connected internally to 0V common - Control terminal 1)						
+ 24 V	+ 24 V Backup supply input						
Nomina	operating voltage	24.0 Vdc					
Minimur	n continuous operating voltage	19.2 V					
Maximu	m continuous operating voltage	30.0 V					
Minimur	n start up voltage	12.0 V					
Minimum power supply requirement at 24 V 20 W							
Maximum power supply continuous current 3 A							
Recomm	nended fuse	1 A, 50 Vdc					

Minimum and maximum voltage values include ripple and noise. Ripple and noise values must not exceed $5\,\%$.

Figure 4-1 Location of the 24 Vdc power supply connection on the Al-Backup adaptor

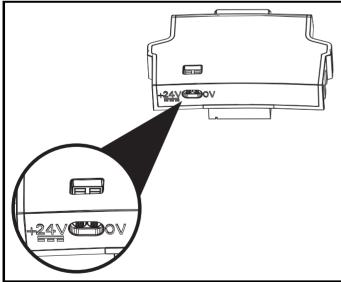


NOTE

The 24 Vdc Backup supply can be used on all frame sizes.

4.2 Communication connections

Installing an Al-485 Adaptor provides the drive with a 2 wire EIA 485 serial communications interface. This enables the drive set-up, operation and monitoring to be carried out with a PC or controller as required.

Figure 4-2 Location of the Al-485 Adaptor option

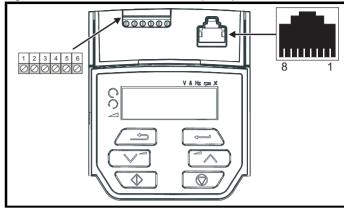

4.2.1 EIA 485 serial communications

The drive only supports Modbus RTU protocol. See Table 4-1 for the connection details.

NOTE

Standard Ethernet cables **must not be used** when connecting drives on a EIA 485 network as they do not have the correct twisted pairs for the pinout of the serial comms port.

Table 4-1 Serial communication port pin-outs (RJ45)

Pin	Function
1	120 Ω Termination resistor
2	RX TX
3	0 V
4	+24 V (100 mA) output
5	Not connected
6	TX enable
7	RX\ TX\
8	RX\ TX\ (if termination resistors are required, link to pin 1)

Minimum number of connections are 2, 3, 7 and shield.

Table 4-2 Serial communication port pin-outs (screw terminal block)

Pin	Function
1	0 V
2	RX\ TX\ (if termination resistor required, link to pin 4)
3	RX TX
4	120 Ω Termination resistor
5	TX Enable
6	+24 V (100 mA) output

NOTE

The connections on the RJ45 connector and terminal block are in parallel.

Safety Product Mechanical Getting Basic Running the NV Media Advanced Onboard Optimization Diagnostics **UL** Listina information information installation installation parameters Card PLC parameters

4.2.2 Isolation of the EIA 485 serial communication

The serial communication port is single insulated and meets the requirements for ELV.



When using the communications port with a personal computer or centralised controller e.g. PLC, an isolation device must be included with a rated voltage at least equal to the drive supply voltage. Ensure that the correct fuses are installed at the drive input, and that the drive is connected to the correct supply voltage.

If a serial communications converter other than the CT Comms cable is used to connect to other circuits classified as Safety Extra Low Voltage (SELV) (e.g. to a personal computer), then a safety isolating barrier must be included to maintain the SELV classification.

An isolated serial communications lead has been designed to connect the drive to IT equipment (such as laptop computers), and is available from the supplier of the drive. See below for details:

Table 4-3 Isolated serial comms lead details

Part number	Description
4500-0096	CT USB Comms cable

The "isolated serial communications" lead has reinforced insulation as defined in IEC60950 for altitudes up to 3,000 m.

4.3 Control connections

4.3.1 General

Table 4-4 The control connections consist of:

Function	Qty	Control parameters available	Terminal number
Single ended analog input	2	Mode, offset, invert, scaling, destination	2, 5
Analog output	1	Source, mode, scaling,	7
Digital input	5	Destination, invert	5, 11, 12, 13, 14
Digital input / output	1	Input / output mode select, destination / source, invert	10
Frequency input	1	Maximum reference, input limit, scaling, destination	14
PWM or frequency output	1	Source, scaling, maximum output frequency, mode	10
Motor thermistor input	1	Mode, type, trip threshold, reset threshold	14
Relay	1	Source, invert	41, 42
Drive enable	1		11
+10 V User output	1		4
+24 V User output	1		9
0V common	1		1

Key:

Destination parameter:	Indicates the parameter which is being controlled by the terminal / function
Source parameter:	Indicates the parameter being output by the terminal
Mode parameter:	Analog - indicates the mode of operation of the terminal, i.e. voltage 0-10 V, current 4-20 mA etc. Digital - indicates the mode of operation of the terminal, (the Drive Enable terminal is fixed in positive logic).

All analog terminal functions can be programmed in menu 7. All digital terminal functions (including the relay) can be programmed in menu 8.



The control circuits are isolated from the power circuits in the drive by basic insulation (single insulation) only. The installer must ensure that the external control circuits are insulated from human contact by at least one layer of insulation (supplementary insulation) rated for use at the AC supply voltage.




If the control circuits are to be connected to other circuits classified as Safety Extra Low Voltage (SELV) (e.g. to a personal computer), an additional isolating barrier must be included in order to maintain the SELV classification.



If any of the digital inputs (including the drive enable input) are connected in parallel with an inductive load (i.e. contactor or motor brake) then suitable suppression (i.e. diode or varistor) should be used on the coil of the load. If no suppression is used then over voltage spikes can cause damage to the digital inputs and outputs on the drive.

NOTE

Any signal cables which are carried inside the motor cable (i.e. motor thermistor, motor brake) will pick up large pulse currents via the cable capacitance. The shield of these signal cables must be connected to ground close to the point of exit of the motor cable, to avoid this noise current spreading through the control system.

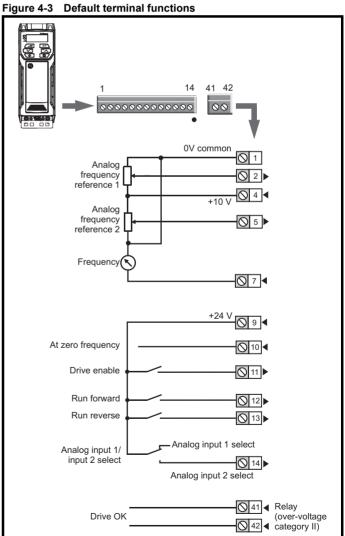

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

4.3.2 Control terminal specification

1	0V common	
Func	tion	Common connection for all external devices

2 Analog input 1						
Default function	Frequency reference					
Type of input	Unipolar single-ended analog voltage o unipolar current					
Mode controlled by	Pr 07.007					
Operating in voltage mode (default)						
Full scale voltage range	0 V to +10 V ±3 %					
Maximum offset	±30 mV					
Absolute maximum voltage range	-18 V to +30 V relative to 0 V					
Input resistance	100 kΩ					
Operating in current mode						
Current ranges	0 to 20 mA ±5 %, 20 to 0 mA ±5 %, 4 to 20 mA ±5 %, 20 to 4 mA ±5 %					
Maximum offset	250 μΑ					
Absolute maximum voltage (reverse bias)	-18 V to +30 V relative to 0 V					
Absolute maximum current	25 mA					
Equivalent input resistance	165 Ω					
Common to all modes						
Resolution	11 bits					
Sample rate	4 ms					

4 +10 V user output	
Default function	Supply for external analog devices
Nominal voltage	10.2 V
Voltage tolerance	±3 %
Maximum output current	5 mA

5 Analog input 2						
Default function	Frequency reference					
Type of input	Unipolar single-ended analog voltage or positive logic only digital input					
Mode controlled by	Pr 07.011					
Operating in voltage mode (defau	lt)					
Full scale voltage range	0 V to +10 V ±3 %					
Maximum offset	±30 mV					
Absolute maximum voltage range	-18 V to +30 V relative to 0 V					
Input resistance	100 kΩ					
Resolution	11 bits					
Sample rate	4 ms					
Operating in digital mode						
Absolute maximum voltage range	-18 V to +30 V relative to 0 V					
Impedance	6.8 kΩ					
Input threshold	10 V ±0.8 V (IEC 61131-2)					
Sample rate	1 ms when routed to destinations Pr 06.035 or Pr 06.036 , otherwise 4 ms.					

7 Analog output 1	Analog output 1								
Default function	Frequency output								
Type of output	Unipolar single-ended analog voltage								
Voltage range	+10 V								
Maximum offset	15 mV								
Load resistance	≥ 2 kΩ								
Protection	Short circuit relative to 0 V								
Resolution	0.1 %								
Sample rate	4 ms								

9 +24 V user output	+24 V user output							
Default function	Supply for external digital devices							
Voltage tolerance	±20 %							
Maximum output current	100 mA							
Protection	Current limit and trip							

10 Digital I/O 1	
Default function	AT ZERO FREQUENCY output
Туре	Positive logic digital input, positive logic voltage source output. PWM or frequency output modes can be selected.
Input / output mode controlled by	Pr 08.031
Operating as in input	
Absolute maximum applied voltage range	-8 V to +30 V relative to 0 V
Impedance	6.8 kΩ
Input threshold	10 V ±0.8 V (IEC 61131-2)
Operating as an output	
Nominal maximum output current	50 mA
Maximum output current	100 mA (total including +24 Vout)
Common to all modes	•
Voltage range	0 V to +24 V
Sample rate	1 ms when routed to destinations Pr 06.035 or Pr 06.036 , otherwise 4 ms

11 Digital Input 2	Digital Input 2								
12 Digital Input 3	Digital Input 3								
13 Digital Input 4	Digital Input 4								
Terminal 11 default function	DRIVE ENABLE input								
Terminal 12 default function	RUN FORWARD input								
Terminal 13 default function	RUN REVERSE input								
Туре	Positive logic only digital inputs								
Voltage range	0 V to +24 V								
Absolute maximum applied voltage range	-18 V to +30 V relative to 0 V								
Impedance	6.8 kΩ								
Input threshold	10 V ±0.8 V (IEC 61131-2)								
Sample rate	1 ms when routed to destinations Pr 06.035 or Pr 06.036 , otherwise 4 ms.								

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	0 " ' "	NV Media	Onboard	Advanced	D: "	
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

14 Digital Input 5	
Terminal 14 default function	Analog INPUT 1 / INPUT 2 select
Туре	Positive logic only digital input. Frequency input or motor thermistor input (bias for DIN44081 ptc, KTY84, PT1000, PT2000 and other types) mode can be selected.
Voltage range	0 V to +24 V
Absolute maximum applied voltage range	-18 V to +30 V relative to 0 V
Impedance	6.8 kΩ
Input threshold	10 V ±0.8 V (IEC 61131-2)
Sample rate	1 ms when routed to destinations Pr 06.035 or Pr 06.036 , otherwise 4 ms.

41 Relay contacts	
Default function	Drive OK indicator
Contact voltage rating	240 Vac, Installation over-voltage category II
Contact maximum current rating	2 A AC 240 V 4 A DC 30 V resistive load 0.5 A DC 30 V inductive load (L/R = 40 ms)
Contact minimum recommended rating	12 V 100 mA
Contact type	Normally open
Default contact condition	Closed when power applied and drive OK
Update rate	1 ms



To prevent the risk of a fire hazard in the event of a fault, a fuse or other over-current protection must be installed in the relay circuit.

Safety Product Mechanical Electrical Basic Running the NV Media Onboard Advanced Ontimization Diagnostics **UL** Listina information parameters motor PLC

5 Getting started

This chapter introduces the user interfaces, menu structure and security levels of the drive.

5.1 Understanding the display

5.1.1 Keypad

The keypad display consists of a 6 digit LED display. The display shows the drive status or the menu and parameter number currently being edited


The option module Unidrive menu (S.mm.ppp) is only displayed if the option module is installed. Where S signifies the option module slot number and the mm.ppp signifies the menu and parameter number of the option module's internal menus and parameter.

The display also includes LED indicators showing units and status as shown in Figure 5-1. When the drive is powered up, the display will show the power up parameter defined by *Parameter Displayed At Power-Up* (11.022).

NOTE


The values in the *Status Mode Parameters* (Pr **22** and Pr **23**) shown on the display when the drive is running, can be toggled by using the escape button.

Figure 5-1 Unidrive M200 keypad detail

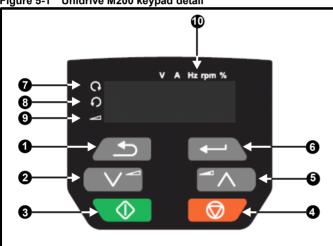

- 1. Escape button
- 2. Down button
- 3. Start button (green)
- 4. Stop / Reset button (red)
- 5. Up button
- 6. Enter button
- 7. Run forward indicator
- 8. Run reverse indicator
- 9. Keypad reference indicator
- 10. Unit indicators

Figure 5-2 Unidrive M201 keypad detail

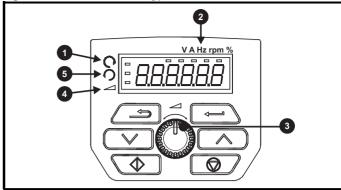

- 1. Run forward indicator
- 2. Unit indicators
- 3. Speed reference potentiometer
- 4. Keypad reference indicator
- 5. Run reverse indicator

NOTE

The red stop button is also used to reset the drive.

The parameter value is correctly displayed on the keypad display as shown in Table 5-1.

On the *Unidrive M201*, the speed reference potentiometer is used to adjust the keypad reference.

Table 5-1 Keypad display formats

Display formats	Value
Standard	100.99
Date	31.12.11 or 12.31.11
Time	12.34.56
Character	ABCDEF
Binary	5
IP Address	192.168 88.1*
MAC Address	01.02.03 04.05.06*
Version number	01.23.45

^{*}Alternate display

5.2 Keypad operation

5.2.1 Control buttons

The keypad consists of:

- Up and down button Used to navigate the parameter structure and change parameter values.
- Enter button Used to change between parameter edit and view mode as well as entering data. This button can also be used to select between slot menu and parameter display.
- Escape button Used to exit from parameter edit or view mode. In parameter edit mode, if parameter values are edited and the escape button pressed, the parameter value will be restored to the value it had on entry to edit mode.
- Start button Used to provide a 'Run' command if keypad mode is selected.
- Stop / Reset button Used to reset the drive. In keypad mode can be used for 'Stop'.


 


Figure 5-3 Display modes

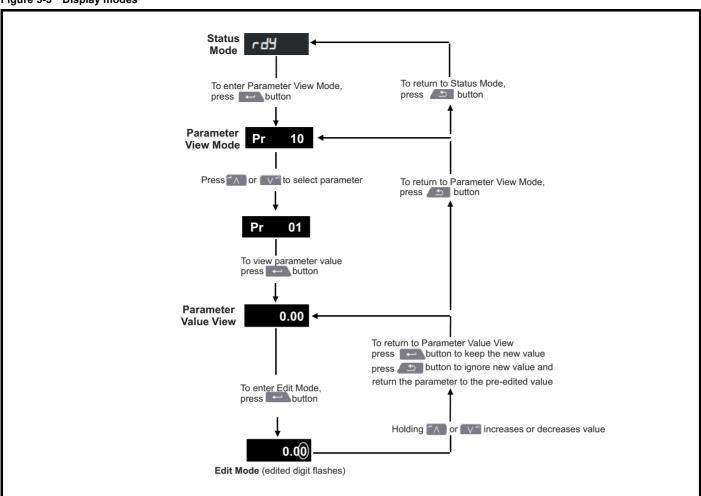


NOTE

The up and down buttons can only be used to move between menus if Pr 10 has been set to show 'ALL'. Refer to section 5.9 Parameter access level and security on page 27.

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

Figure 5-4 Mode examples

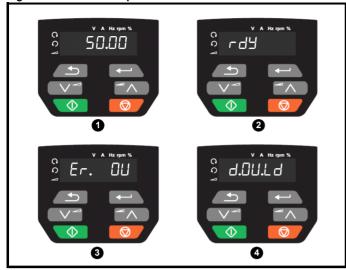

- Parameter view mode: Read write or Read only 1
- Status mode: Drive OK status

If the drive is ok and the parameters are not being edited or viewed, the display will show one of the following:

inh', 'rdy' or status mode parameter value.

Status mode: Trip status

When the drive is in trip condition, the display will indicate that the drive has tripped and the display will show the trip code. For further information regarding trip codes, refer to section 12.4 Trips, Sub-trip numbers on page 130.

Status mode: Alarm status

During an 'alarm' condition the display flashes between the drive status parameter value and the alarm.



Do not change parameter values without careful consideration; incorrect values may cause damage or a safety hazard.

When changing the values of parameters, make a note of the new values in case they need to be entered again.

New parameter values must be saved to ensure that the new values apply after the drive has been power cycled. Refer to section 5.7 Saving parameters on page 26.

5.3 Menu structure

The drive parameter structure consists of menus and parameters.

The drive initially powers up so that only Menu 0 can be viewed. The up and down arrow buttons are used to navigate between parameters and once Pr 10 has been set to 'All' the up and down buttons are used to navigate between menus.

For further information refer to section 5.9 Parameter access level and security on page 27.

The menus and parameters rollover in both directions i.e. if the last parameter is displayed, a further press will cause the display to rollover and show the first parameter.

When changing between menus, the drive remembers which parameter was last viewed in a particular menu and thus displays that parameter.


5.4

Menu 0 is used to bring together various commonly used parameters for basic easy set up of the drive. The parameters displayed in Menu 0 can be configured in Menu 22.

Appropriate parameters are copied from the advanced menus into Menu 0 and thus exist in both locations.

For further information, refer to Chapter 6 Basic parameters on page 29.

Figure 5-5 Menu 0 copying

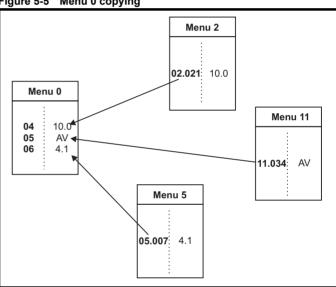

Safety Product Mechanical Electrical Getting Basic Running the NV Media Onboard Advanced **UL** Listing Ontimization Diagnostics information information installation installation started parameters moto Card PLC parameters

5.5 Advanced menus

The advanced menus consist of groups or parameters appropriate to a specific function or feature of the drive. Menus 0 to 24 can be viewed on the Keypad.

The option module menu (1.mm.ppp) is only displayed if the option module is installed. Where 1 signifies the option module slot number and the mm.ppp signifies the menu and parameter number of the option module's internal menus and parameters.

Table 5-2 Advanced menu descriptions

Menu	Description
0	Commonly used basic set up parameters for quick / easy
O	programming
1	Frequency reference
2	Ramps
3	Frequency control
4	Torque and current control
5	Motor control
6	Sequencer and clock
7	Analog I/O
8	Digital I/O
9	Programmable logic, motorized pot, binary sum, timers
10	Status and trips
11	Drive set-up and identification, serial communications
12	Threshold detectors and variable selectors
14	User PID controller
15	Option module slot 1 set-up menu
18	General option module application menu 1
20	General option module application menu 2
21	Second motor parameters
22	Menu 0 set-up
24	Option module slot 1 application menu
Slot 1	Slot 1 option menus*

^{*} Only displayed when the option module is installed.

5.5.1 Display messages

The following tables indicate the various possible mnemonics which can be displayed by the drive and their meaning.

Table 5-3 Status indications

String	Description	Drive output stage
inh	The drive is inhibited and cannot be run. The Drive Enable signal is not applied to the drive enable terminal or Pr 06.015 is set to 0. The other conditions that can prevent the drive from enabling are shown as bits in <i>Enable Conditions</i> (06.010)	Disabled
rdy	The drive is ready to run. The drive enable is active, but the drive inverter is not active because the final drive run is not active	Disabled
Stop	The drive is stopped / holding zero speed.	Enabled
S.Loss	Supply loss condition has been detected	Enabled
dc inj	The drive is applying dc injection braking	Enabled
Er	The drive has tripped and no longer controlling the motor. The trip code appears on the display.	Disabled
UV	The drive is in the under voltage state either in low voltage or high voltage mode.	Disabled
HEAt	The motor pre-heat function is active.	Enabled

5.5.2 Alarm indications

An alarm is an indication given on the display by alternating the alarm string with the drive status string on the display. Alarms strings are not displayed when a parameter is being edited.

Table 5-4 Alarm indications

Alarm string	Description
br.res	Brake resistor overload. <i>Braking Resistor Thermal Accumulator</i> (10.039) in the drive has reached 75.0 % of the value at which the drive will trip.
OV.Ld	Motor Protection Accumulator (04.019) in the drive has reached 75.0 % of the value at which the drive will trip and the load on the drive is >100 %.
d.OV.Ld	Drive over temperature. <i>Percentage Of Drive Thermal Trip Level</i> (07.036) in the drive is greater than 90 %.
tuning	The autotune procedure has been initialized and an autotune in progress.
LS	Limit switch active. Indicates that a limit switch is active and that is causing the motor to be stopped.
Opt.Al	Option slot alarm.
Lo.AC	Low voltage mode. See Low AC Alarm (10.107).
I.AC.Lt	Current limit active. See <i>Current Limit Active</i> (10.009).
24.LoSt	24 V backup not present. See 24V Alarm Loss Enable (11.098).

5.6 Changing the operating mode

Procedure

Use the following procedure only if a different operating mode is required:

- Ensure the drive is not enabled, i.e. drive is in inhibit or under voltage state.
- 2. Change the setting of Pr 79 as follows:

Pr 79 setting	Operating mode				
OPE ALP	1	Open-loop			
17 F E - R	2	RFC-A			

The figures in the second column apply when serial communications are used.

NOTE

When the operating mode is changed, a parameter save is carried out.

3. Either:

Press the red reset button

Carry out a drive reset through serial communications by setting Pr 10.038 to 100.

5.7 Saving parameters

When changing a parameter in Menu 0, the new value is saved when pressing the Enter button to return to parameter view mode from parameter edit mode.

If parameters have been changed in the advanced menus, then the change will not be saved automatically. A save function must be carried out.

Procedure

- Select 'Save' in Pr 00 or Pr mm.000 (alternatively enter a value of 1001 in Pr 00 or Pr mm.000)
- 2. Either
- Press the red reset button
- Carry out a drive reset through serial communications by setting Pr 10.038 to 100

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISTING

5.8 Restoring parameter defaults

Restoring parameter defaults by this method saves the default values in the drives memory. *User security status* (Pr **10**) and *User security code* (Pr **25**) are not affected by this procedure).

Procedure

- Ensure the drive is not enabled, i.e. drive is in inhibit or under voltage state.
- Select 'Def.50' or 'Def.60' in Pr 00 or Pr mm.000. (alternatively, enter 1233 (50 Hz settings) or 1244 (60 Hz settings) in Pr 00 or Pr mm.000).
- 3 Fither
- Press the red reset button
- Carry out a drive reset through serial communications by setting Pr 10.038 to 100

5.9 Parameter access level and security

The parameter access level determines whether the user has access to Menu 0 only or to all the advanced menus (Menus 1 to 24) in addition to Menu 0.

The User Security determines whether the access to the user is read only or read write.

Both the User Security and Parameter Access Level can operate independently of each other as shown in Table 5-5.

Table 5-5 Parameter access level and security

User security status (Pr 10)	Access level	Menu 0 status	Advanced menu status				
0	LEVEL.1	RW	Not visible				
1	LEVEL.2	RW	Not visible				
2	ALL	RW	RW				
3	StAtUS	RW	Not visible				
4	no.Acc	RW	Not visible				

The default settings of the drive are Parameter Access Level LEVEL.1 and user Security Open i.e. read / write access to Menu 0 with the advanced menus not visible.

5.9.1 User Security Level / Access Level

The drive provides a number of different levels of security that can be set by the user via *User Security Status* (Pr **10**); these are shown in the table below

User Security Status (Pr 10)	Description
LEVEL.1 (0)	Access to first 10 parameters in Menu 0 only.
LEVEL.2 (1)	Access to all parameters in Menu 0.
ALL (2)	Access to all menus.
StAtUS (3)	The keypad remains in status mode and only first 10 parameters in Menu 0 can be viewed or edited.
no.Acc (4)	The keypad remains in status mode and only first 10 parameters in Menu 0 can be viewed or edited. Drive parameters cannot be accessed via a comms interface.

5.9.2 Changing the User Security Level /Access Level

The security level is determined by the setting of Pr 10 or Pr 11.044. The Security Level can be changed through the keypad even if the User Security Code has been set.

5.9.3 User Security Code

The User Security Code, when set, prevents write access to any of the parameters in any menu.

Setting User Security Code

Enter a value between 1 and 9999 in Pr **25** and press the button; the security code has now been set to this value. In order to activate the security, the Security level must be set to desired level in Pr **10**. When the drive is reset, the security code will have been activated and the drive returns to LEVEL.1. The value of Pr **25** will return to 0 in order to hide the security code.

Unlocking User Security Code

Select a parameter that need to be edited and press the button, the display will now show 'Co'. Use the arrow buttons to set the security code and press the button. With the correct security code entered, the display will revert to the parameter selected in edit mode.

If an incorrect security code is entered, the following message 'Co.Err' is displayed, and the display will revert to parameter view mode.

Disabling User Security

Unlock the previously set security code as detailed above. Set Pr 25 to 0 and press the button. The User Security has now been disabled, and will not have to be unlocked each time the drive is powered up to allow read / write access to the parameters.

5.10 Displaying parameters with nondefault values only

By selecting 'diff.d' in Pr **00** (Alternatively, enter 12000 in Pr **00**), the only parameters that will be visible to the user will be those containing a non-default value. This function does not require a drive reset to become active. In order to deactivate this function, return to

Pr **00** and select 'none' (alternatively enter a value of 0). Please note that this function can be affected by the access level enabled, refer to section 5.9 *Parameter access level and security* on page 27 for further information regarding access level.

		ì										
Safetv	Product	Mechanical	Electrical	Gettina	Basic	Running the	0 " ' "	NV Media	Onboard	Advanced	D: "	
information	information	inotallation	inctallation	atautad		motor	Optimization	Cord	DI C	noromotoro	Diagnostics	UL Listing
information	information	installation	installation	started	parameters	motor	-	Card	PLC	parameters	-	_

5.11 Displaying destination parameters only

By selecting 'dest' in Pr **00** (Alternatively enter 12001 in Pr **00**), the only parameters that will be visible to the user will be destination parameters. This function does not require a drive reset to become active. In order to deactivate this function, return to Pr **00** and select 'none' (alternatively enter a value of 0).

Please note that this function can be affected by the access level enabled, refer to section 5.9 *Parameter access level and security* on page 27 for further information regarding access level.

5.12 Communications

Installing an AI-485 Adaptor provides the drive with a 2 wire EIA 485 serial communications interface. This enables the drive set-up, operation and monitoring to be carried out with a PC or controller as required.

5.12.1 EIA 485 Serial communications

Communication is via the RJ45 connector or screw terminals (parallel connection). The drive only supports Modbus RTU protocol.

The communications port applies a **1.25 unit** load to the communications network.

USB to EIA 485 Communications

An external USB hardware interface such as a PC cannot be used directly with the 2-wire EIA 485 interface of the drive. Therefore a suitable converter is required.

A suitable USB to EIA 485 isolated converter is available from Control Techniques as follows:

• CT USB Comms cable (CT Part No. 4500-0096)

When using the above converter or any other suitable converter with the drive, it is recommended that no terminating resistors be connected on the network. It may be necessary to 'link out' the terminating resistor within the converter depending on which type is used. The information on how to link out the terminating resistor will normally be contained in the user information supplied with the converter.

Serial communications set-up parameters

The following parameters need to be set according to the system requirements.

		Serial communications set-up parameters
Serial Mode (11.024)	8 2 NP (0), 8 1 NP (1), 8 1 EP (2), 8 1 OP (3), 8 2 NP M (4), 8 1 NP M (5), 8 1 EP M (6), 8 1 OP M (7), 7 1 EP (8), 7 1 OP (9), 7 1 EP M (10), 7 1 OP M (11)	The drive only supports the Modbus RTU protocol and is always a slave. This parameter defines the supported data formats used by the EIA 485 comms port (if installed) on the drive. This parameter can be changed via the drive keypad, via a option module or via the comms interface itself.
Serial Baud Rate (Pr 43)	600 (1), 1200 (2), 2400 (3), 4800 (4), 9600 (5), 19200 (6), 38400 (7), 57600(8), 76800(9), 115200 (10)	This parameter can be changed via the drive keypad, via a option module or via the comms interface itself. If it is changed via the comms interface, the response to the command uses the original baud rate. The master should wait at least 20 ms before sending a new message using the new baud rate.
Serial Address (Pr 44)	1 to 247	This parameter defines the serial address and an addresses between 1 and 247 are permitted.
Reset Serial Communications (Pr 45)	Off (0) or On (1)	When the above parameters are modified the changes do not have an immediate effect on the serial communication system. The new values are used after the next power up or if Reset Serial Communications is set to 1.

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostica	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

6 Basic parameters

Menu 0 is used to bring together various commonly used parameters for basic easy set up of the drive. All the parameters in Menu 0 appear in other menus in the drive (denoted by {...}). Menu 22 can be used to configure the parameters in Menu 0.

Parameter ranges and Variable minimum/maximums:

Some parameters in the drive have a variable range with a variable minimum and a variable maximum value which is dependent on one of the following:

- · The settings of other parameters
- The drive rating
- The drive mode
- · Combination of any of the above

For more information please see section 11.1 Parameter ranges and Variable minimum/maximums: on page 70.

6.1 Menu 0: Basic parameters

	D		Range	(1)	Defa	ult (⇔)			_			
	Parameter		OL	RFC-A	OL	RFC-A			Тур	е		
01	Minimum Speed	{01.007}	0.00 to Pr	02 Hz	0.0	0 Hz	RW	Num				US
02	Maximum Speed	{01.006}	0.00 to 550	0.00 Hz		ılt: 50.00 Hz ılt: 60.00 Hz	RW	Num				US
03	Acceleration Rate 1	{02.011}	0.0 to 32000.0	s / 100 Hz	5.0 s / 100 Hz			Num				US
04	Deceleration Rate 1	{02.021}	0.0 to 32000.0	s / 100 Hz	10.0 s	100 Hz	RW	Num				US
05	Drive Configuration	{11.034}	AV (0), AI (1), AV.Pr (2), AI.P. PAd.rEF (6), E.Pot (7),		AV (0)*			Txt			PT	US
06	Motor Rated Current	{05.007}	0.00 to Drive	Rating A	Maximum Heavy Duty Rating A			Num		RA		US
07	Motor Rated Speed**	{05.008}	0.0 to 3300	50Hz default: 1500.0 rpm 60Hz default: 1800.0 rpm	50Hz default: 1450.0 rpm 60Hz default: 1750.0 rpm	RW	Num				US	
08	Motor Rated Voltage	{05.009}	0 to 76	200V dri 400V drive 9 400V drive 9 575V dri	ve: 230 V ve: 230 V 50 Hz: 400 V 60 Hz: 460 V ve: 575 V ve: 690 V	RW	Num		RA		US	
09	Motor Rated Power Factor***	{05.010}	0.00 to	1.00	0.85			Num		RA		US
10	User Security Status	{11.044}	LEVEL.1 (0), LEVEL.2 (1), ALL	. (2), StAtUS (3), no.Acc (4)	LEVEL.1 (0)			Num	ND		PT	
11	Start/Stop Logic Select	{06.004}	0 to	6		0	RW	Num				US
15	Jog Reference	{01.005}	0.00 to 300).00 Hz	1.5	0 Hz	RW	Num				US
16	Analog Input 1 Mode	{07.007}	4-20.S (-6), 20-4.S 20-4.L (-3), 4-20.H (-2), 20-4 4-20.tr (2), 20-4.tr (3), 4-2	Volt (6)		RW	Txt				US	
17	Bipolar Reference Enable	{01.010}	Off (0) or	On (1)	Off (0)			Bit				US
18	Preset Reference 1	{01.021}	0.00 to Pr	02 Hz	0.00 Hz			Num				US
19	Preset Reference 2	{01.022}	0.00 to Pr	02 Hz	0.00 Hz			Num				US
20	Preset Reference 3	{01.023}	0.00 to Pr	02 Hz	0.00 Hz			Num				US
21	Preset Reference 4	{01.024}	0.00 to Pr	-	0.00 Hz			Num				US
22	Status Mode Parameter 2	{11.019}	0.000 to 3		4.020			Num			PT	US
23	Status Mode Parameter 1	{11.018}	0.000 to 3			001	RW	Num			PT	US
24	Customer Defined Scaling	{11.021}	0.000 to 1			000	RW	Num	ļ			US
25	User Security Code	{11.030}	0 to 99	999		0	RW	Num	ND		PT	US
27	Power-up Keypad Control Mode Reference	{01.051}	Reset (0), Last (1), Preset (2)	Res	et (0)	RW	Txt				US
28	Ramp Mode Select	{02.004}	Fast (0), Std (1), Std.	bst (2), Fst.bst (3)	Sto	l (1)	RW	Txt				US
29	Ramp Enable	{02.002}		Off (0) or On (1)		On (1)	RW	Bit				US
30	Parameter Cloning	{11.042}	NonE (0), rEAd (1), Prog	(2), Auto (3), boot (4)	Non	E (0)	RW	Txt		NC		US
31	Stop Mode	{06.001}	Coast (0), rp (1), rp.dc I (2), dc I (3), td.dc I (4), dis (5) Coast (0), rp (1), rp.dc I (2), dc I (3), td.dc I (4), dis (5), No.rp (6)		I (3), td.dc I (4), (2), dc I (3), td.dc I (4), rp (1)		RW	Txt				US
32	Dynamic V to F Select	{05.013}	0 to 1		0		RW	Num				US
32	Flux Optimisation Select	{05.013}		0 to 1		0	RW	Num				US
33	Catch A Spinning Motor	{06.009}	dis (0), Enable (1), Fr.C	Only (2), Rv.Only (3)	dis (0)			Txt				US
34	Digital Input 5 Select	{08.035}	Input (0), th.Sct (1), th (2), th.Notr (3), Fr (4)	Input (0)			Txt				US
35	Digital Output 1 Control	{08.091}	0 to 2	21		0	RW	Num				US

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISTING

	Damamatan		Range	· (\$)	Default (⇔)			Tuno						
	Parameter		OL	RFC-A	OL	RFC-A		Туре						
36	Analog Output 1 Control	{07.055}	0 to 1	5		0	RW	Txt				US		
37	Maximum Switching Frequency	{05.018}	0.667 (0), 1 (1), 2 (2), 3 (3), 4 (4), 6 (5), 8 (6), 12 (7), 16 (8) kHz	2 (2), 3 (3), 4 (4), 6 (5), 8 (6), 12 (7), 16 (8) kHz	3 (3) kHz	RW	Txt				US		
38	Autotune	{05.012}	0 to 2	0 to 3		0	RW	Num		NC		US		
39	Motor Rated Frequency	{05.006}	0.0 to 550	.00 Hz		50.00 Hz 60.00 Hz	RW	Num		RA		US		
40	Number of Motor Poles****	{05.011}	Auto (0) to	32 (16)	Au	0 (0)	RW	Num				US		
41	Control Mode	{05.014}	Ur.S (0), Ur (1), Fd (2), Ur.Auto (3), Ur.I (4), SrE (5), Fd.tAP (6)		Ur.I (4)		RW	Txt				US		
42	Low Frequency Voltage Boost	{05.015}	0.0 to 25	5.0 %	3.	0 %	RW	Num				US		
43	Serial Baud Rate	{11.025}	600 (1), 1200 (2), 2400 (3), 48 38400 (7), 57600 (8), 76		192	00 (6)	RW	Txt				US		
44	Serial Address	{11.023}	1 to 2	47		1	RW	Num				US		
45	Reset Serial Communications	{11.020}	Off (0) or	On (1)	Of	f (0)	RW		ND	NC		†		
46	BC Upper Current Threshold	{12.042}	0 to 20	0 %	5) %	RW	Num				US		
47	BC Lower Current Threshold	{12.043}	0 to 20	0 %	11) %	RW					US		
48	BC Brake Release Frequency	{12.044}	0.00 to 20	.00 Hz	1.0	0 Hz	RW	Num	1			US		
49	BC Brake Apply Frequency	{12.045}	0.00 to 20	.00 Hz	2.0	0 Hz	RW	Num	1			US		
50	BC Brake Delay	{12.046}	0.0 to 2	5.0 s	1	0 s	RW	Num	1			US		
51	BC Post-brake Release Delay	{12.047}	0.0 to 2			0 s	RW	Num				US		
53	BC Initial Direction	{12.050}	Ref (0), For (1), Rev (2)		f (0)	RW	Txt				US		
54	BC Brake Apply Through Zero Threshold	{12.051}	0.00 to 25			0 Hz	RW	Num				US		
55	BC Enable	{12.041}	dis (0), Relay (1), di	g IO (2), User (3)	di	s (0)	RW	Txt				US		
56	Trip 0	{10.020}	0 to 2	55			RO	Txt	ND	NC	PT	PS		
57	Trip 1	{10.021}	0 to 2	55			RO	Txt	ND	NC	PT	PS		
58	Trip 2	{10.022}	0 to 2	55			RO	Txt	ND	NC	PT	PS		
59	OUP Enable	{11.047}	Stop (0) or	Run (1)	Ru	n (1)	RW	Txt				US		
60	OUP Status	{11.048}	-2147483648 to	2147483647			RO	Num	ND	NC	PT	1		
65	Frequency Controller Proportional Gain Kp1	{03.010}		0.000 to 200.000 s/rad		0.100 s/rad	RW	Num				US		
66	Frequency Controller Integral Gain Ki1	{03.011}		0.00 to 655.35 s ² /rad		0.10 s ² /rad	RW	Num				US		
67	Sensorless Mode Filter	{03.079}		4 (0), 5 (1), 6 (2), 8 (3), 12 (4), 20 (5) ms	4 (0) ms			Txt				US		
69	Spin Start Boost	{05.040}	0.0 to 1	10.0	1.0			Num				US		
70	PID1 Output	{14.001}	± 100.0	0 %			RO	Num	ND	NC	PT			
71	PID1 Proportional Gain	{14.010}	0.000 to	4.000	1.	000	RW	Num				US		
72	PID1 Integral Gain	{14.011}	0.000 to	4.000	0.	500	RW	Num				US		
73	PID1 Feedback Invert	{14.006}	Off (0) or	On (1)	Of	f (0)	RW	Bit				US		
74	PID1 Output Upper Limit	{14.013}	0.00 to 10	0.00 %	100	.00 %	RW	Num				US		
75	PID1 Output Lower Limit	{14.014}	± 100.0	0 %	-100	.00 %	RW	Num				US		
76	Action on Trip Detection	{10.037}	0 to 3	31		0	RW	Num				US		
77	Maximum Heavy Duty Current Rating	{11.032}	0.00 to Drive HD C	urrent Rating A			RO	Num	ND	NC	PT			
78	Software Version	{11.029}	0 to 99.9	99.99			RO	Num	ND	NC	PT			
79	User Drive Mode	{11.031}	OPEn.LP (1),	RFC-A (2)	OPEn.LP (1)	RFC-A (2)	RW	Txt	ND	NC	PT	US		
81	Reference Selected	{01.001}	-Pr 02 to Pr 02 or P	r 01 to Pr 02 Hz			RO	Num	ND	NC	PT			
82	Pre-ramp Reference	{01.003}	-Pr 02 to Pr 02 or P	r 01 to Pr 02 Hz			RO	Num	ND	NC	PT			
83	Final Demand Reference	{03.001}	-Pr 02 to Pr 02 or P	r 01 to Pr 02 Hz			RO	Num	ND	NC	PT	FI		
84	D.C. Bus Voltage	{05.005}	0 to 119	90 V			RO	Num	ND	NC	PT	FI		
85	Output Frequency	{05.001}	± 550.0	0 Hz			RO	Num	ND	NC	PT	FI		
86	Output Voltage	{05.002}	0 to 93			RO	Num	ND	NC	PT	FI			
87	Motor Rpm	{05.004}	± 33000.	0 rpm			RO	Num	ND	NC	PT	FI		
88	Current Magnitude	{04.001}	0 to Drive Maxim	um Current A			RO	Num	ND	NC	PT	FI		
89	Torque Producing Current	{04.002}	± Drive Maximu			RO	Num	ND	NC	PT	FI			
90	Digital I/O Read Word	{08.020}	0 to 20			RO	Bin	ND	NC	PT				
91	Reference On	{01.011}	Off (0) or			RO	Bit	ND	NC	PT	t			
92	Reverse Select	{01.012}	11 11				RO	Bit	ND	NC	PT	t		
93	Jog Select	{01.013}					RO	Bit	ND	NC	PT	\vdash		
94	Analog Input 1	{07.001}					RO	Num	ND	NC	PT	FI		
95	Analog Input 2	{07.002}	-				RO	Num	ND	NC	PT	FI		
	· .	, ,	002 } ± 100.00 %						1	1	i	1		

^{*} With Unidrive M201, default is PAd (5).

^{**}Setting Pr 07 to 0.0 will disable slip compensation.

**Setting Pr 07 to 0.0 will disable slip compensation.

**Setting Pr 07 to 0.0 will disable slip compensation.

**Setting Pr 08 to 0.0 will disable slip compensation.

**Tollowing a rotating autotune Pr 09 (05.010) is continuously written by the drive, calculated from the value of Stator Inductance (Pr 05.025). To manually enter a value into Pr 09 (05.010), Pr 05.025 will need to be set to 0. Refer to the description of Pr 05.010 in the Parameter Reference Guide for further details.


**** If this parameter is read via serial communications, it will show pole pairs.


Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostica	III Linting
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination


Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISTING

 Figure 6-1 Menu 0 logic diagram

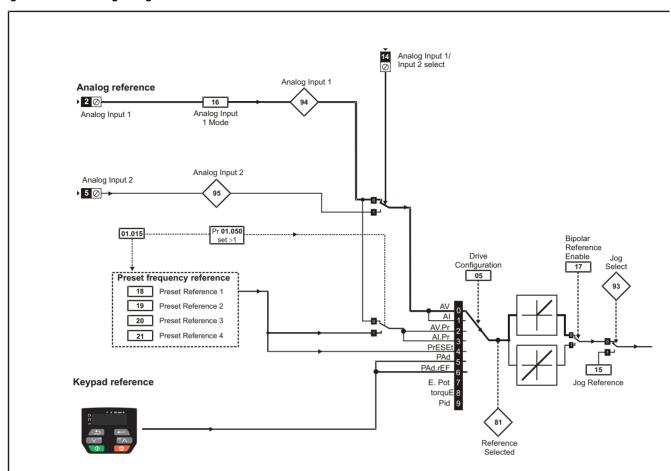



The parameters are all shown in their default settings

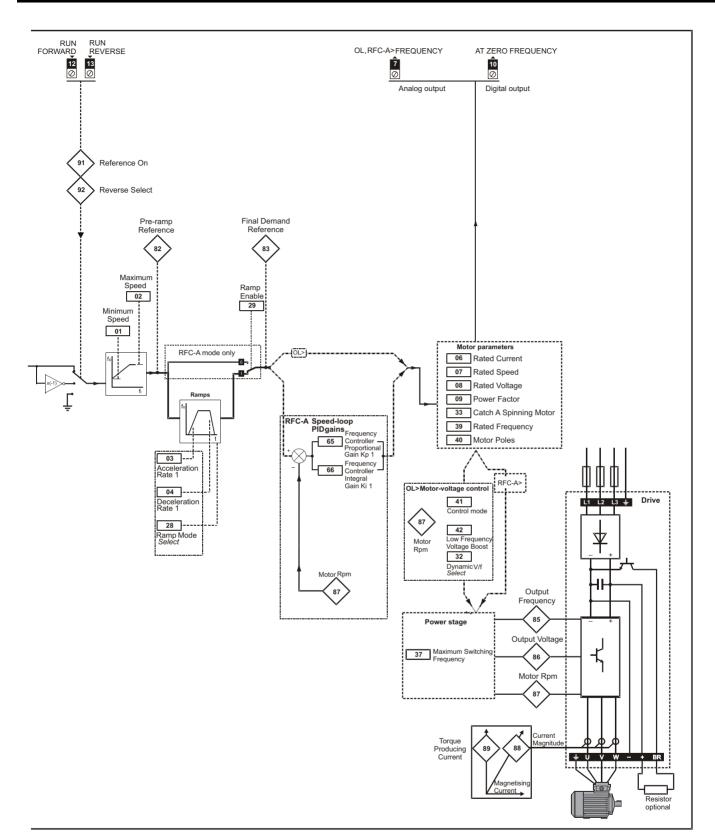

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostics	III Lieting
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

6.2 Parameter descriptions

6.2.1 Pr 00

Pr **00** is available in all menus, commonly used functions are provided as text strings in Pr **00** shown in Table 6-1. The functions in Table 6-1 can also be selected by entering the appropriate numeric values (as shown in Table 6-2) in Pr **00**. For example, enter 4001 in Pr **00** to store drive parameters on an NV media card.

Table 6-1 Commonly used functions in Pr 00

Value	Equivalent value	String	Action
0	0	None	No action
1001	1	SAVE	Save drive parameters to non-volatile memory
6001	2	LOAd.1	Load the data from file 1 on a non-volatile media card into the drive provided it is a parameter file
4001	3	SAVE.1	Store the drive parameters in file 1 on a non-volatile media card
6002	4	LOAd.2	Load the data from file 2 on a non-volatile media card into the drive provided it is a parameter file
4002	5	SAVE.2	Store the drive parameters in file 2 on a non-volatile media card
6003	6	LOAd.3	Load the data from file 3 on a non-volatile media card into the drive provided it is a parameter file
4003	7	SAVE.3	Store the drive parameters in file 3 on a non-volatile media card
12000	8	diff.d	Only display parameters that are different from their default value
12001	9	dest	Only display parameters that are used to set-up destinations
1233	10	def.50	Load 50 Hz defaults
1244	11	def.60	Load 60 Hz defaults
1070	12	rst.opt	Reset option module

Table 6-2 Functions in Pr 00

Value	Action
1000	Save parameters when <i>Under Voltage Active</i> (Pr 10.016) is not active.
1001	Save parameters under all conditions
1070	Reset option module
1233	Load standard (50 Hz) defaults
1234	Load standard (50 Hz) defaults to all menus except option module menu 15
1244	Load US (60 Hz) defaults
1245	Load US (60 Hz) defaults to all menus except option module menu 15
1299	Reset {St.HF} trip.
2001*	Create a boot file on a non-volatile media card based on the present drive parameters including all Menu 20 parameters
4yyy*	NV media card: Transfer the drive parameters to parameter file yyy
6ууу*	NV media card: Load the drive parameters from parameter file yyy
7yyy*	NV media card: Erase file yyy
8yyy*	NV Media card: Compare the data in the drive with file yyy
9555*	NV media card: Clear the warning suppression flag
9666*	NV media card: Set the warning suppression flag
9777*	NV media card: Clear the read-only flag
9888*	NV media card: Set the read-only flag
12000**	Only display parameters that are different from their default value. This action does not require a drive reset.
12001**	Only display parameters that are used to set-up destinations (i.e. DE format bit is 1). This action does not require a drive reset.

^{*} See Chapter 9 NV Media Card on page 61 for more information on these functions.

All other functions require a drive reset to initiate the function. Equivalent values and strings are also provided in the table above.

^{**} These functions do not require a drive reset to become active.

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing	
--------------------	---------------------	-------------------------	-------------------------	--------------------	------------------	-------------------	--------------	------------------	----------------	---------------------	-------------	------------	--

6.3 Control terminal configurations and wiring

05 Drive Configuration														
RW		Txt							PT	US				
OL	ĵ;		, AI (1), AV Et (4), PAd			Û	AV (0)*							
RFC-A	*		ot (7), torq			AV				(0)				

^{*} With Unidrive M201, the default is PAd (5). The setting of Pr 05 automatically sets the drive configuration.

Table 6-3 Parameter changes when drive configuration is changed

Parameter	Description					Drive Co	nfiguratio	n			
number	Description	AV	Al	AV.Pr	Al.Pr	PrESEt	PAd	PAd.rEF	E.Pot	torquE	Pid
01.014	Reference select	0	0	1	1	3	4	6	3	0	1
06.004	Start/stop logic	0	0	0	0	0	0	0	0	0	0
07.007	Analog input 1 mode	6	4	6	4	6	6	6	6	4	4
07.010	Analog input 1 destination	01.036	01.036	01.036	01.036	01.036	01.036	01.036	01.036	01.036	0.000
07.011	Analog input 2 mode	6	6	7	7	7	6	6	7	6	6
07.014	Analog input 2 destination	01.037	01.037	01.046	01.046	01.046	01.037	01.037	09.027	04.008	0.000
07.051	Analog input 1 control	0	0	0	0	0	0	0	0	0	0
07.052	Analog input 2 control	0	0	0	0	0	0	0	0	0	0
08.022	Digital input 2 destination	06.038	06.038	06.038	06.038	06.038	06.038	06.038	06.038	06.038	06.038
08.025	Digital input 5 destination	01.041	01.041	01.045	01.045	01.045	01.041	01.041	09.026	04.011	14.008
08.085	DI 5 Control	0	0	0	0	0	0	0	0	0	0
09.025	Motorized pot destination	0.000	0.000	0.000	0.000	0.000	0.000	0.000	01.021	0.000	0.000
14.003	PID 1 reference source	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	07.002
14.004	PID 1 feedback source	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	07.001
14.016	PID 1 destination	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	01.036

Value	Text	Description
0	AV	Analog input 1 (voltage) or Analog input 2 (voltage) selected by terminal (Local/Remote)
1	Al	Analog input 1 (current) or Analog input 2 (voltage) selected by terminal (Local/Remote)
2	AV.Pr	Analog input 1 (voltage) or 3 presets selected by terminal
3	Al.Pr	Analog input 1 (current) or 3 presets selected by terminal
4	PrESEt	Four presets selected by terminal
5	PAd	Keypad reference
6	PAd.rEF	Keypad reference with terminal control
7	E.Pot	Electronic Potentiometer
8	torquE	Torque mode, Analog input 1 (current frequency reference) or Analog input 2 (voltage torque reference) selected by terminal
9	Pid	PID mode, Analog input 1 (current feedback source) and Analog input 2 (voltage reference source)

Action will only occur if the drive is inactive and no User Actions are running. Otherwise, the parameter will return to its pre altered value on exit from edit mode. All parameters are saved if this parameter changes.

 


Figure 6-2 Pr 05 = AV

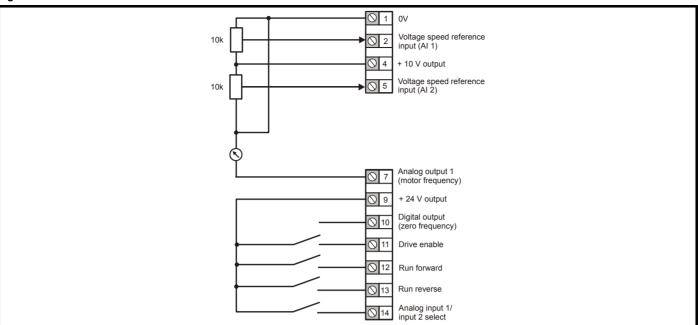
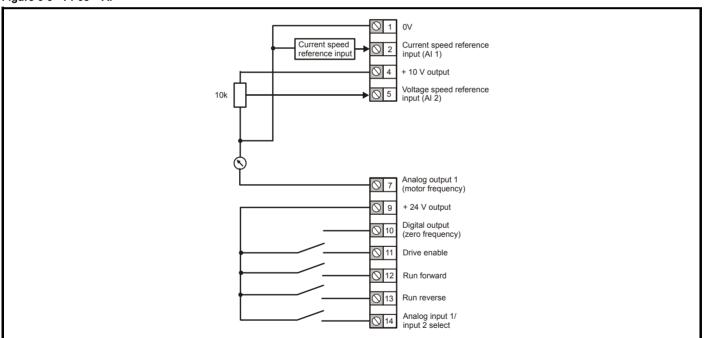


Figure 6-3 Pr 05 = AI



 


Figure 6-4 Pr 05 = AV.Pr


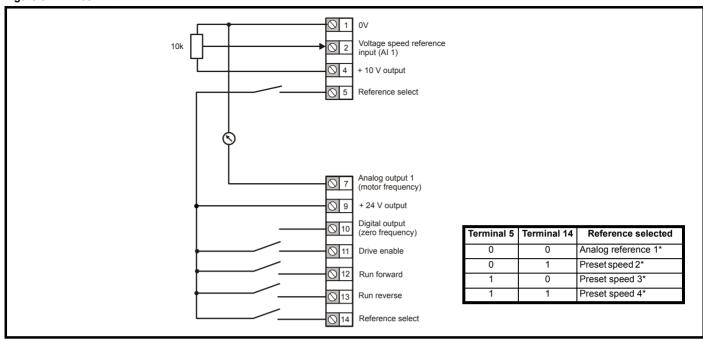


Figure 6-5 Pr 05 = Al.Pr

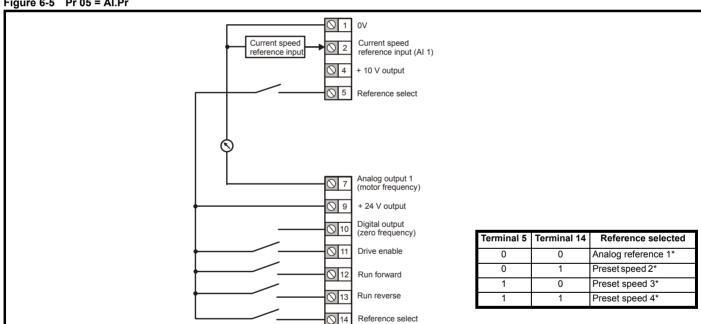

^{*}Refer to section 11.2 Menu 1: Frequency reference on page 78.



 



Figure 6-6 Pr 05 = PrESEt

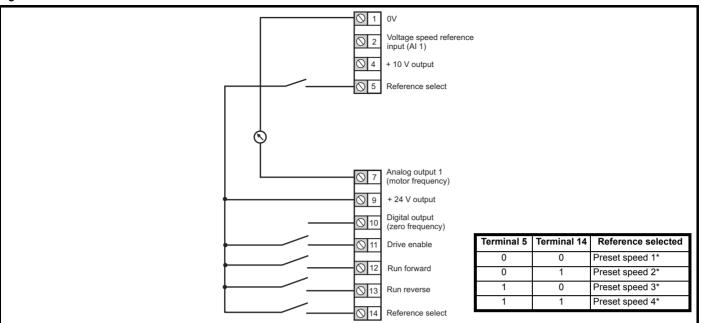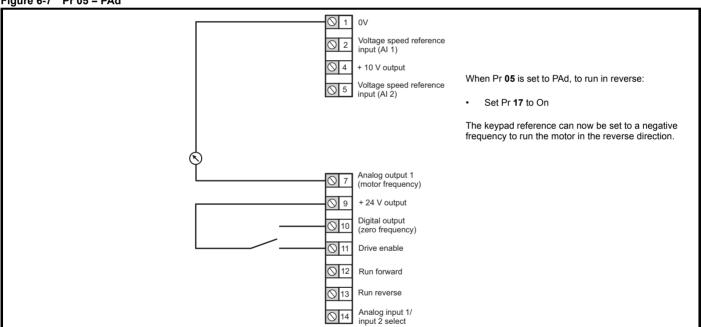


^{*}Refer to section 11.2 Menu 1: Frequency reference on page 78.

Figure 6-7 Pr 05 = PAd



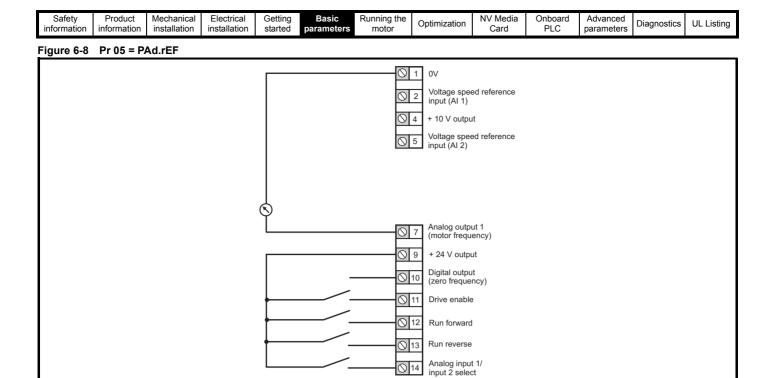

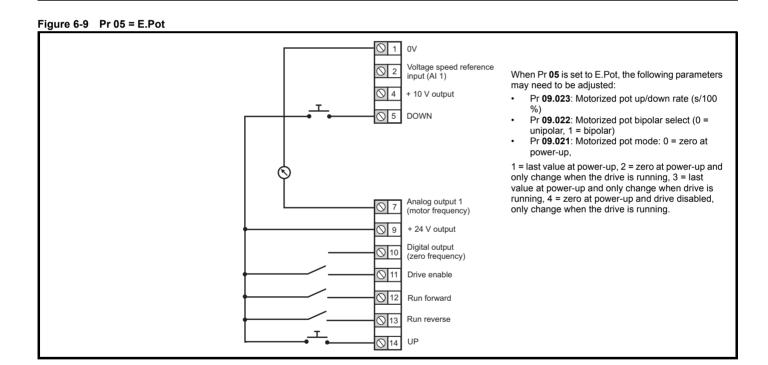

 


Figure 6-10 Pr 05 = torquE


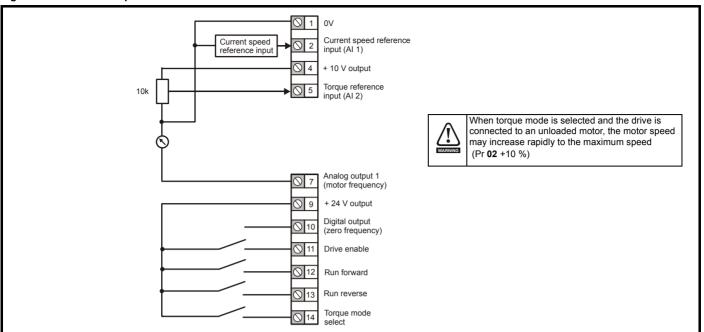


Figure 6-11 Pr 05 = Pid

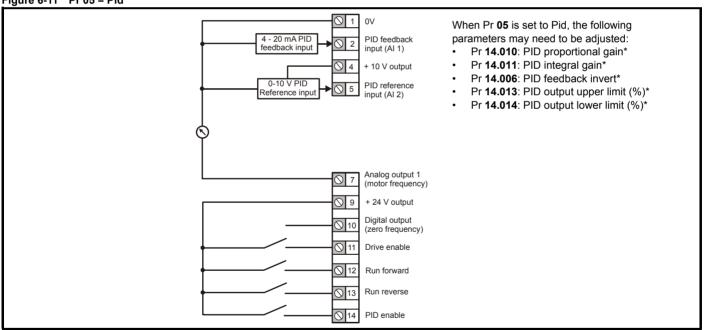

^{*}Refer to section 11.14 Menu 14: User PID controller on page 120.

Safety Product Mechanical Electrical Getting Basic NV Media Onboard Advanced Running the Diagnostics Optimization **UL** Listina information installation parameter moto parameters

7 Running the motor

This chapter takes the new user through all the essential steps to running a motor for the first time, in each of the possible operating modes.

For information on tuning the drive for the best performance, see Chapter 8 Optimization on page 48.



Ensure that no damage or safety hazard could arise from the motor starting unexpectedly.



The values of the motor parameters affect the protection of the motor.

The default values in the drive should not be relied upon. It is essential that the correct value is entered in Pr **06** *Motor Rated Current*. This affects the thermal protection of the motor.



If the drive is started using the keypad it will run to the speed defined by the keypad reference (Pr 01.017). This may not be acceptable depending on the application. The user must check in Pr 01.017 and ensure that the keypad reference has been set to 0.



If the intended maximum speed affects the safety of the machinery, additional independent over-speed protection must be used.

7.1 Quick start connections

7.1.1 Basic requirements

This section shows the basic connections which must be made for the drive to run in the required mode. For minimal parameter settings to run in each mode please see the relevant part of section 7.3 *Quick start commissioning / start-up* on page 46.

Table 7-1 Minimum control connection requirements for each control mode

Drive control method	Requirements
Terminal mode	Drive enable Speed / Torque reference Run forward / Run reverse
Keypad mode	Drive enable
Serial communications	Drive enable Serial communications link

7.2 Changing the operating mode

Procedure

Use the following procedure only if a different operating mode is required:

- Ensure that the drive is not enabled, i.e. drive is in inhibit or under voltage state.
- 2. Change the setting of Pr 79 as follows:

Pr 79 setting		Operating mode
OPEALP	1	Open-loop
FFE-A	2	RFC-A

The figures in the second column apply when serial communications are used.

- 3. Either:
- Press the red reset button
- Carry out a drive reset through serial communications by setting Pr 10.038 to 100.

NOTE

When the operating mode is changed, a parameter save is carried out.

Safety Mechanical Getting Basic Product Electrical Running the motor Advanced NV Media Card Diagnostics UL Listing Optimization information information installation installation started parameters parameters

Figure 7-1 Minimum connections to get the motor running in any operating mode (size 1 to 4)

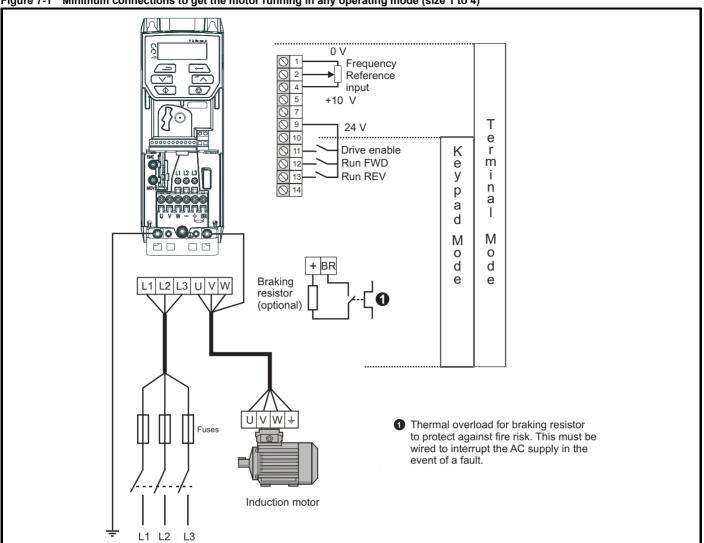




Figure 7-2 Minimum connections to get the motor running in any operating mode (size 5) Braking resistor (optional) 0 V Frequency Reference input +10 V Т е 24 V m Drive enable Run FWD n Run REV а M K e y 0 d р а d M 0 L2 d е U 1 Thermal overload for braking resistor to protect against fire risk. This must be wired to interrupt the AC supply in the event of a fault. ulvlwl Open loop RFC-A L1 L2 L3

Sensorless

information information installation installation started parameters parameters

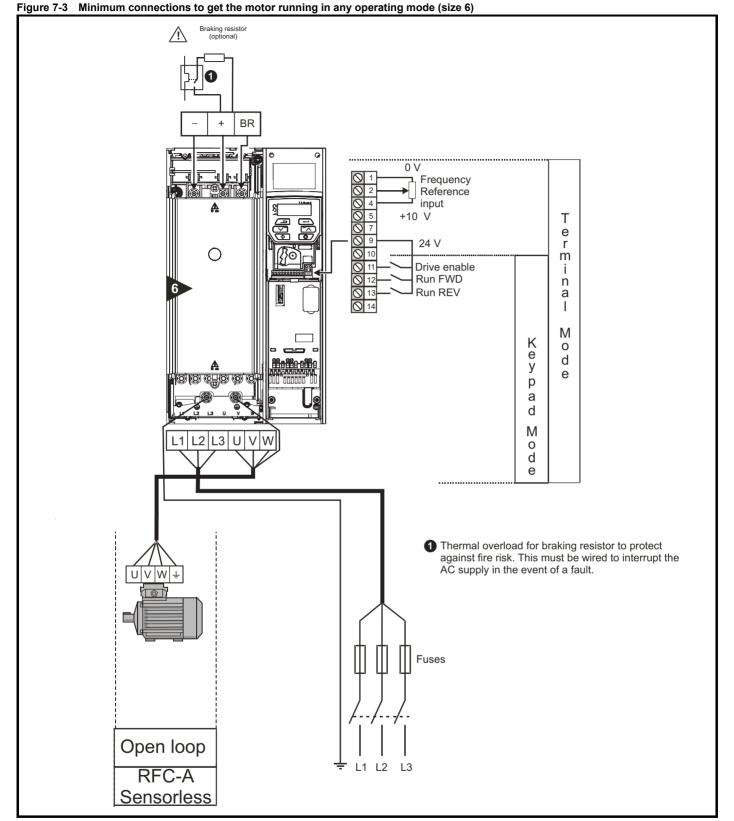




Figure 7-4 Minimum connections to get the motor running in any operating mode (size 7 onwards) L1 L2 L3 Frequency reference input +10V T е r m Ĺ 24 V n a Drive Enable 12 Run FWD M Run REV 0 d K е е У p a d +DC BRAKE M 0 d е U V W + Open Loop ① Thermal overload for braking resistor to protect against fire risk. This must be wired to interrupt the AC supply in the RFC-A

event of a fault.

Sensorless

	Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media Card	Advanced	Diagnostics	UL Listina
in	formation	information	installation	installation	started	parameters	motor	Optimization	INV IVICUIA CAIU	parameters	Diagnostics	OL LISTING

7.3 Quick start commissioning / start-up

7.3.1 Open loop

Action	Detail	
Before power-up	 Ensure: The drive enable signal is not given, terminal 11 is open. Run signal is not given, terminal 12/13 is open. Motor is connected to the drive. The motor connection is correct for the drive 人 or △ The correct supply voltage is connected to the drive. 	X
Power-up the drive	Verify that open loop mode is displayed as the drive powers up. If the mode is incorrect see section 5.6 Changing the operating mode on page 26. Ensure: Drive displays 'inh' (enable terminal is open). If the drive trips, see section 12 Diagnostics on page 129.	7
Enter motor nameplate details	 Motor rated current in Pr 06 (Amps) Motor rated speed in Pr 07 (rpm / min⁻¹) Motor rated voltage in Pr 08 (Volts) Motor rated power factor (cos φ) in Pr 09 	MOT.3 \(\superscript{\subset} \) LS 80 L T \(\frac{\text{MOT.3 \cdots}}{\subset} \) LS 80 L T \(\frac{\text{MOT.3 \cdots}}{\subset} \) LO \(\frac{\text{MOT.3 \cdots}}{\subset} \) LS 80 L T \(\frac{\text{MOT.3 \cdots}}{\subset} \) LS 80 L T \(\frac{\text{MOT.3 \cdots}}{\text{MOT.3 \cdots}} \) LS 80 L T \(\frac{\text{MOT.3 \cdots}}{\text{MOT.3 \cdots}} \) LS 80 L T \(\frac{\text{MOT.3 \cdots}}{\text{MOT.3 \cdots}} \) LS 80 L T \(\frac{\text{MOT.3 \cdots}}{\text{MOT.3 \cdots}} \) LS 80 L T \(\frac{\text{MOT.3 \cdots}}{\text{MOT.3 \cdots}} \) LS 80 L T \(\frac{\text{MOT.3 \cdots}}{\text{MOT.3 \cdots}} \) LS 80 L T \(\frac{\text{MOT.3 \cdots}}{\text{MOT.3 \cdots}} \) LS 80 L T \(\frac{\text{MOT.3 \cdots}}{\text{MOT.3 \cdots}} \) LS 80 L T \(\frac{\text{MOT.3 \cdots}}{\text{MOT.3 \cdots}} \) A \(\frac{\text{MOT.3 \cdots}}{MOT.3 \c
Set maximum speed	Enter: • Maximum speed in Pr 02 (Hz)	Pr 02
Set acceleration / deceleration rates	 Enter: Acceleration rate in Pr 03 (s/100 Hz) Deceleration rate in Pr 04 (s/100 Hz) (If braking resistor is installed, set Pr 28 = FAST. Also ensure Pr 10.030 and Pr 10.031 and Pr 10.061 are set correctly, otherwise premature 'It.br' trips may be seen). 	100Hz
Autotune	The drive is able to perform either a stationary or a rotating autotune. The motor must be at a standstill before an autotune is enabled. A rotating autotune should be used whenever possible so the measured value of power factor of the motor is used by the drive. A rotating autotune will cause the motor to accelerate up to ² / ₃ base speed in the direction selected regardless of the reference provided. Once complete the motor will coast to a stop. The enable signal must be removed before the drive can be made to run at the required reference. The drive can be stopped at any time by removing the run signal or removing the drive enable. A stationary autotune can be used when the motor is loaded and it is not possible to uncouple the load from the motor shaft. A stationary autotune measures the stator resistance of the motor and the dead time compensation for the drive. These are required for good performance in vector control modes. A stationary autotune does not measure the power factor of the motor so the value on the motor nameplate must be entered into Pr 09. A rotating autotune should only be used if the motor is uncoupled. A rotating autotune first performs a stationary autotune before rotating the motor at ² / ₃ base speed in the direction selected. The rotating autotune measures the power factor of the motor. To perform an autotune: Set Pr 38 = 1 for a stationary autotune or set Pr 38 = 2 for a rotating autotune Close the Drive Enable signal (apply +24 V to terminal 11). The drive will display 'rdy'. Give a run command (apply +24 V to terminal 12 - Run forward or terminal 13 - Run reverse on Unidrive M200; press keypad start button on M201). The display will flash 'tuning' while the drive is performing the autotune. Wait for the drive to display 'inh' and for the motor to come to a standstill. If the drive trips, see Chapter 12 <i>Diagnostics</i> on page 129. Remove the drive enable and run signal from the drive.	Cos Ø R _s dL _s
Save parameters	Select 'Save' in Pr 00 or Pr mm.000 (alternatively enter a value of 1001) and press the red reset button.	
Run	Drive is now ready to run	

Safetv	Product	Mechanical	Electrical	Gettina	Basic	Running the		NV Media	Onboard	Advanced		
ou.or,		moonanoan		o o ttilling	200.0		Optimization		01100010	,	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	DI C	parameters	Diagnostics	OL LISTING
illioilliation	IIIIOIIIIalioii	IIIStaliation	IIIStaliation	Starteu	parameters	IIIOtol		Caru	I LC	parameters		

7.3.2 RFC - A mode

Action	Detail	
Before power-up	 Ensure: The drive enable signal is not given, terminal 11 is open. Run signal is not given, terminal 12/13 is open. Motor is connected to the drive. The motor connection is correct for the drive 人 or △ The correct supply voltage is connected to the drive. 	X
Power-up the drive	Verify that RFC-A mode is displayed as the drive powers up. If the mode is incorrect see section 5.6 Changing the operating mode on page 26. Ensure: Drive displays 'inh' (enable terminal is open). If the drive trips, see Chapter 12 Diagnostics on page 129.	Z
Enter motor nameplate details	 Motor rated current in Pr 06 (Amps) Motor rated speed in Pr 07 (rpm / min⁻¹) Motor rated voltage in Pr 08 (Volts) Motor rated power factor (cos φ) in Pr 09 	MOT 3 \(\triangle \) LS 80 L T
Set maximum speed	Enter: • Maximum speed in Pr 02 (Hz)	Pr 02
Set acceleration / deceleration rates	 Enter: Acceleration rate in Pr 03 (s/100 Hz) Deceleration rate in Pr 04 (s/100 Hz) (If the braking resistor is installed, set Pr 28 = FAST. Also ensure Pr 10.030, Pr 10.031 and Pr 10.061 are set correctly, otherwise premature 'It.br' trips may be seen). 	100Hz
Autotune	The drive is able to perform either a stationary or a rotating autotune. The motor must be at a standstill before an autotune is enabled. A stationary autotune will give moderate performance whereas a rotating autotune will give improved performance as it measures the actual values of the motor parameters required by the drive. A rotating autotune will cause the motor to accelerate up to ² / ₃ base speed in the direction selected regardless of the reference provided. Once complete the motor will coast to a stop. The enable signal must be removed before the drive can be made to run at the required reference. The drive can be stopped at any time by removing the run signal or removing the drive enable. A stationary autotune can be used when the motor is loaded and it is not possible to uncouple the load from the motor shaft. The stationary autotune measures the stator resistance and transient inductance of the motor. These are used to calculate the current loop gains, and at the end of the test the values in Pr 04.013 and Pr 04.014 are updated. A stationary autotune does not measure the power factor of the motor so the value on the motor nameplate must be entered into Pr 09. A rotating autotune should only be used if the motor is uncoupled. A rotating autotune first performs a stationary autotune before rotating the motor at ² / ₃ base speed in the direction selected. The rotating autotune measures the stator inductance of the motor and calculates the power factor. To perform an autotune: Set Pr 38 = 1 for a stationary autotune or set Pr 38 = 2 for a rotating autotune Close the drive enable signal (apply +24 V to terminal 11). The drive will display 'rdy'. Give a run command (apply +24 V to terminal 12 - Run forward or terminal 13 - Run reverse on Unidrive M200; press keypad start button on M201). The display will flash 'tuning' while the drive is performing the autotune. Wait for the drive to display 'inh' and for the motor to come to a standstill if the drive trips, see Chapter 12 Diagnostics on pag	R ₃ oL ₅ T saturation break-points N rpm
Save parameters	Select 'Save' in Pr 00 or Pr mm.000 (alternatively enter a value of 1001) and press red reset button.	
Run	The drive is now ready to run	•

^{*} Slip is required for RFC-A mode.

Safety Product Mechanical Electrical Getting Basic Running the NV Media Onboard Advanced Optimization Diagnostics UL Listing information parameters PLC parameters

8 Optimization

This chapter takes the user through methods of optimizing the drive set-up and maximize the performance. The auto-tuning features of the drive simplify the optimization tasks.

8.1 Motor map parameters

8.1.1 Open loop motor control

Pr 06 {05.007} Motor Rated Current

Defines the maximum continuous motor current


- The rated current parameter must be set to the maximum continuous current of the motor. The motor rated current is used in the following:
- Current limits (see section section 8.3 Current limits on page 54, for more information)
- · Motor thermal overload protection (see section section 8.4 Motor thermal protection on page 54, for more information)
- Vector mode voltage control (see Control Mode later in this table)
- Slip compensation (see Enable Slip Compensation (05.027), later in this table)
- Dynamic V/F control

Pr 08 {05.009} Motor Rated Voltage

Pr 39 {05.006} Motor Rated Frequency

Defines the voltage applied to the motor at rated frequency
Defines the frequency at which rated voltage is applied

The Motor Rated Voltage (Pr **08**) and the Motor Rated Frequency (Pr **39**) are used to define the voltage to frequency characteristic applied to the motor (see Control Mode, later in this table). The Motor Rated Frequency is also used in conjunction with the motor rated speed to calculate the rated slip for slip compensation (see Motor Rated Speed, later in this table).

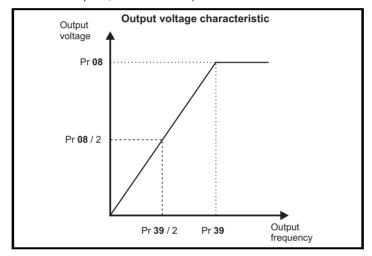

Pr 07 {05.008} Motor Rated Speed

Pr 40 {05.011} Number of Motor Poles

Defines the full load rated speed of the motor

Defines the number of motor poles

The motor rated speed and the number of poles are used with the motor rated frequency to calculate the rated slip of induction machines in Hz.

Rated slip (Hz) = Motor rated frequency - (Number of pole pairs x [Motor rated speed / 60]) = $Pr39 = \left(\frac{Pr40}{2} \times \frac{Pr07}{60}\right)$

If Pr 07 is set to 0 or to synchronous speed, slip compensation is disabled. If slip compensation is required this parameter should be set to the nameplate value, which should give the correct rpm for a hot machine. Sometimes it will be necessary to adjust this when the drive is commissioned because the nameplate value may be inaccurate. Slip compensation will operate correctly both below base speed and within the field-weakening region. Slip compensation is normally used to correct for the motor speed to prevent speed variation with load. The rated load rpm can be set higher than synchronous speed to deliberately introduce speed droop. This can be useful to aid load sharing with mechanically coupled motors.

Pr 40 is also used in the calculation of the motor speed display by the drive for a given output frequency. When Pr 40 is set to 'Auto', the number of motor poles is automatically calculated from the rated frequency Pr 39, and the motor rated speed Pr 07.

Number of poles = 120 x (Rated Frequency (Pr 39) / Rated Speed (Pr 07)) rounded to the nearest even number.

Pr 43 {05.010} Motor Rated Power Factor

Defines the angle between the motor voltage and current

The power factor is the true power factor of the motor, i.e. the angle between the motor voltage and current. The power factor is used in conjunction with the *Motor Rated Current* (Pr **06**), to calculate the rated active current and magnetising current of the motor. The rated active current is used extensively to control the drive, and the magnetising current is used in vector mode stator resistance compensation. It is important that this parameter is set up correctly. The drive can measure the motor rated power factor by performing a rotating autotune (see Autotune (Pr **38**), below).

1	Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization NV Me	a Onboard	Advanced	Diagnostics	UL Listina
	information	information	installation	installation	started	parameters	motor	Card	PLC	parameters	Diagnostics	UL Listing

Pr 38 {05.012} Autotune

There are two autotune tests available in open loop mode, a stationary and a rotating test. A rotating autotune should be used whenever possible so the measured value of power factor of the motor is used by the drive.

- A stationary autotune can be used when the motor is loaded and it is not possible to remove the load from the motor shaft. The stationary test measures the Stator Resistance (05.017), Transient Inductance (05.024), Maximum Deadtime Compensation (05.059) and Current At Maximum Deadtime Compensation (05.060) which are required for good performance in vector control modes (see Control Mode later in this table). The stationary autotune does not measure the power factor of the motor so the value on the motor nameplate must be entered into Pr 09. To perform a Stationary autotune, set Pr 38 to 1, and provide the drive with both an enable signal (on terminal 11) and a run signal (on terminals 12 or 13).
- A rotating autotune should only be used if the motor is unloaded. A rotating autotune first performs a stationary autotune, as above, then a rotating test is performed in which the motor is accelerated with currently selected ramps up to a frequency of *Motor Rated Frequency* (Pr 39) x 2/3, and the frequency is maintained at that level for 4 seconds. *Stator Inductance* (05.025) is measured and this value is used in conjunction with other motor parameters to calculate *Motor Rated Power Factor* (Pr 09). To perform a Rotating autotune, set Pr 38 to 2, and provide the drive with both an enable signal (on terminal 11) and a run signal (on terminals 12 or 13).

Following the completion of an autotune test the drive will go into the inhibit state. The drive must be placed into a controlled disable condition before the drive can be made to run at the required reference. The drive can be put in to a controlled disable condition by removing the signal from terminal 11, setting the *Drive Enable* (06.015) to OFF (0) or disabling the drive via the *Control Word* (06.042) and *Control Word Enable* (06.043).

Pr 41 {05.014} Control Mode

There are several voltage modes available which fall into two categories, vector control and fixed boost.

Vector control

Vector control mode provides the motor with a linear voltage characteristic from 0 Hz to *Motor Rated Frequency*, and then a constant voltage above motor rated frequency. When the drive operates between motor rated frequency/50 and motor rated frequency/4, full vector based stator resistance compensation is applied. When the drive operates between motor rated frequency/4 and motor rated frequency/2 the stator resistance compensation is gradually reduced to zero as the frequency increases. For the vector modes to operate correctly the *Motor Rated Power Factor* (*Pr 09*), *Stator Resistance* (05.017), *Maximum Deadtime Compensation* (05.059) and current at *Maximum Deadtime Compensation* (05.060) are all required to be set up accurately. The drive can be made to measure these by performing an autotune (see Pr 38 Autotune). The drive can also be made to measure the stator resistance automatically every time the drive is enabled or the first time the drive is enabled after it is powered up, by selecting one of the vector control voltage modes.

- (0) **Ur S** = The stator resistance is measured and the parameters for the selected motor map are over-written each time the drive is made to run. This test can only be done with a stationary motor where the flux has decayed to zero. Therefore this mode should only be used if the motor is guaranteed to be stationary each time the drive is made to run. To prevent the test from being done before the flux has decayed there is a period of 1 second after the drive has been in the ready state during which the test is not done if the drive is made to run again. In this case, previously measured values are used. Ur S mode ensures that the drive compensates for any change in motor parameters due to changes in temperature. The new value of stator resistance is not automatically saved to the drive's EEPROM.
- (4) **Ur I** = The stator resistance is measured when the drive is first made to run after each power-up. This test can only be done with a stationary motor. Therefore this mode should only be used if the motor is guaranteed to be stationary the first time the drive is made to run after each power-up. The new value of stator resistance is not automatically saved to the drive's EEPROM.
- (1) **Ur** = The stator resistance and voltage offset are not measured. The user can enter the motor and cabling resistance into the *Stator Resistance* (05.017). However this will not include resistance effects within the drive inverter. Therefore if this mode is to be used, it is best to use an autotune test initially to measure the stator resistance.
- (3) **Ur_Auto**= The stator resistance is measured once, the first time the drive is made to run. After the test has been completed successfully the *Control Mode* (Pr **41**) is changed to Ur mode. The *Stator Resistance* (05.017) parameter is written to, and along with the *Control Mode* (Pr **41**), are saved in the drive's EEPROM. If the test fails, the voltage mode will stay set to Ur Auto and the test will be repeated next time the drive is made to run.

Fixed boost


The stator resistance is not used in the control of the motor, instead a fixed characteristic with low frequency voltage boost as defined by Pr 42, is used. Fixed boost mode should be used when the drive is controlling multiple motors. There are three settings of fixed boost available:


- (2) **Fixed** = This mode provides the motor with a linear voltage characteristic from 0 Hz to *Motor Rated Frequency* (Pr **39**), and then a constant voltage above rated frequency.
- (5) **Square** = This mode provides the motor with a square law voltage characteristic from 0 Hz to *Motor Rated Frequency* (Pr **39**), and then a constant voltage above rated frequency. This mode is suitable for variable torque applications like fans and pumps where the load is proportional to the square of the speed of the motor shaft. This mode should not be used if a high starting torque is required.
- (6) **Fixed Tapered =** This mode provides the motor with a linear voltage characteristic with a tapered slip limit.

Safety Product Mechanical Electrical Getting Basic Running the NV Media Onboard Advanced UL Listing Optimization Diagnostics information installation installation parameters PLC parameters

Pr 41 {05.014} Control Mode (cont)


For mode 2 and 5, at low frequencies (from 0 Hz to ½ x Pr 39) a voltage boost is applied as defined by Pr 42 as shown below:

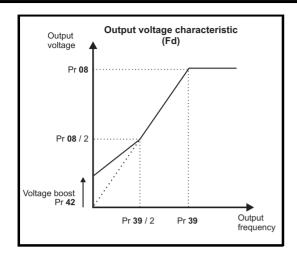

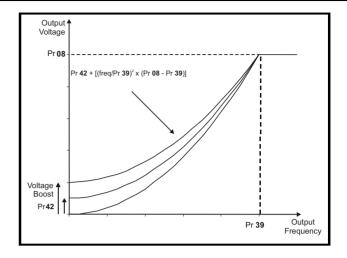

Pr 05.027 Enable Slip Compensation

When a motor, being controlled in open loop mode, has load applied a characteristic of the motor is that the output speed droops in proportion to the load applied as shown:

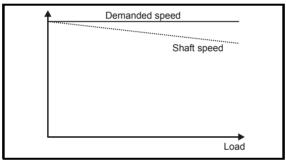

In order to prevent the speed droop shown above slip compensation should be enabled. To enable slip compensation Pr **05.027** must be set to a 100 % (this is the default setting), and the motor rated speed must be entered in Pr **07** (Pr **05.008**).

The motor rated speed parameter should be set to the synchronous speed of the motor minus the slip speed. This is normally displayed on the motor nameplate, i.e. for a typical 18.5 kW, 50 Hz, 4 pole motor, the motor rated speed would be approximately 1465 rpm. The synchronous speed for a 50 Hz, 4 pole motor is 1500 rpm, so therefore the slip speed would be 35 rpm. If the synchronous speed is entered in Pr 07, slip compensation will be disabled. If too small a value is entered in Pr 07, the motor will run faster than the demanded frequency. The synchronous speeds for 50 Hz motors with different numbers of poles are as follows:

2 pole = 3000 rpm, 4 pole = 1500 rpm, 6pole =1000 rpm, 8 pole = 750 rpm

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
informati	n information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

8.1.2 RFC-A mode

Pr 06 {05.007} Motor Rated Current

Defines the maximum motor continuous current

The motor rated current parameter must be set to the maximum continuous current of the motor. The motor rated current is used in the following:

- Current limits (see section 8.3 Current limits on page 54, for more information).
- Motor thermal overload protection (see section 8.4 Motor thermal protection on page 54, for more information)
- Vector control algorithm


Pr 08 {05.009} Motor Rated Voltage

Pr 39 {05.006} Motor Rated Frequency

The Motor Rated Voltage (Pr **08**) and the Motor Rated Frequency (Pr **39**) are used to define the voltage to frequency characteristic applied to the motor. The motor rated frequency is also used in conjunction with the motor rated speed to calculate the rated slip for slip compensation (see Motor Rated Speed (Pr **07**), later in this table).

Defines the voltage applied to the motor at rated frequency

Defines the frequency at which rated voltage is applied

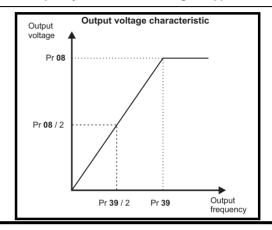

Pr 07 {05.008} Motor Rated Speed

Pr 40 {05.011} Number of Motor Poles

Defines the full load rated speed of the motor and slip

Defines the number of motor poles

The motor rated speed and motor rated frequency are used to determine the full load slip of the motor which is used by the vector control algorithm. Incorrect setting of this parameter has the following effects:

- · Reduced efficiency of motor operation
- Reduction of maximum torque available from the motor
- Reduced transient performance
- Inaccurate control of absolute torque in torque control modes

The nameplate value is normally the value for a hot motor; however, some adjustment may be required when the drive is commissioned if the nameplate value is inaccurate. A fixed value can be entered in this parameter.

When Pr 40 is set to 'Auto', the number of motor poles is automatically calculated from the *Motor Rated Frequency* (Pr 39), and the *Motor Rated Speed* (Pr 07).

Number of poles = 120 x (Motor Rated Frequency (Pr 39 / Motor Rated Speed (Pr 07) rounded to the nearest even number.

Pr 09 {05.010} Motor Rated Power Factor

Defines the angle between the motor voltage and current

The power factor is the true power factor of the motor, i.e. the angle between the motor voltage and current. If the *Stator Inductance* (05.025) is set to zero then the power factor is used in conjunction with the *Motor Rated Current* (Pr **06**) and other motor parameters to calculate the rated active and magnetising currents of the motor, which are used in the vector control algorithm. If the stator inductance has a non-zero value this parameter is not used by the drive, but is continuously written with a calculated value of power factor. The stator inductance can be measured by the drive by performing a rotating autotune (see *Autotune* (Pr **38**), later in this table).

Safety Product Mechanical Electrical Getting Basic Running the NV Media Onboard Advanced Optimization **UL** Listing Diagnostics informatio information installation installation started parameters PLC parameters

Pr 38 {05.012} Autotune

There are three autotune tests available in RFC-A mode, a stationary test, a rotating test and a mechanical load measurement test. A stationary autotune will give moderate performance whereas a rotating autotune will give improved performance as it measures the actual values of the motor parameters required by the drive. An inertia measurement test should be performed separately to a stationary or rotating autotune.

NOTE

It is highly recommended that a rotating autotune is performed (Pr 38 set to 2).

- A stationary autotune can be used when the motor is loaded and it is not possible to remove the load from the motor shaft. The stationary autotune measures the *Stator Resistance* (05.017) and *Transient Inductance* (05.024) of the motor. These are used to calculate the current loop gains, and at the end of the test the values in Pr **04.013** and Pr **04.014** are updated. A stationary autotune does not measure the power factor of the motor so the value on the motor nameplate must be entered into Pr **09**. To perform a Stationary autotune, set Pr **38** to 1, and provide the drive with both an enable signal (on terminal 11) and a run signal (on terminal 12 or 13).
- A rotating autotune should only be used if the motor is unloaded. A rotating autotune first performs a stationary autotune, a rotating test is then performed which the motor is accelerated with currently selected ramps up to a frequency of *Motor Rated Frequency* (Pr 39) x 2/3, and the frequency is maintained at the level for up to 40 s. During the rotating autotune the *Stator Inductance* (05.025), and the motor saturation breakpoints (Pr 05.029, Pr 05.030, Pr 05.062 and Pr 05.063) are modified by the drive. The power factor is also modified for user information only, but is not used after this point as the stator inductance is used in the vector control algorithm instead. To perform a Rotating autotune, set Pr 38 to 2, and provide the drive with both an enable signal (on terminal 11) and a run signal (on terminal 12 or 13).
- The mechanical load test can measure the total inertia of the load and the motor. A series of progressively larger torque levels are applied to the motor (20 %, 40 % ... 100 % of rated torque) to accelerate the motor up to ¾ x Motor Rated Speed (Pr 07) to determine the inertia from the acceleration/deceleration time. The test attempts to reach the required speed within 5s, but if this fails, the next torque level is used. When 100 % torque is used, the test allows 60 s for the required speed to be reached, but if this is unsuccessful, a tun.1 trip is initiated. To reduce the time taken for the test, it is possible to define the level of torque to be used for the test by setting Mechanical Load Test Level (05.021) to a non-zero value. When the test level is defined, the test is only carried out at the defined test level and 60 s is allowed for the motor to reach the required speed. It should be noted that if the maximum speed allows for flux weakening then it may not be possible to achieve the required torque level to accelerate the motor fast enough. If this is the case, the maximum speed reference should be reduced.
 - 1. The motor must be stationary at the start of the test.
 - 2. The motor is accelerated in the required direction up to \(^3\)4 of the maximum speed reference and then decelerated to zero speed.
 - 3. The test is repeated with progressively higher torque until the required speed is reached.

To perform a mechanical load measurement autotune, set Pr **38** to 3, and provide the drive with both an enable signal (on terminal 11) and a run signal (on terminal 12 or 13). Following the completion of an autotune test the drive will go into the inhibit state. The drive must be placed into a controlled disable condition before the drive can be made to run at the required reference. The drive can be put in to a controlled disable condition by removing the drive enable signal from terminal 11, setting the *Drive Enable* (06.015) to OFF (0) or disabling the drive via the control word (Pr **06.042** & Pr **06.043**).

{04.013} / {04.014} Current Loop Gains

The current loop gains proportional (Kp) and integral (Ki) gains control the response of the current loop to a change in current (torque) demand. The default values give satisfactory operation with most motors. However, for optimal performance in dynamic applications it may be necessary to change the gains to improve the performance. The *Current Controller Kp Gain* (04.013) is the most critical value in controlling the performance. The values for the current loop gains can be calculated by performing a stationary or rotating autotune (see *Autotune Pr* 38 earlier in this table) the drive measures the *Stator Resistance* (05.017) and *Transient Inductance* (05.024) of the motor and calculates the current loop gains.

This will give a step response with minimum overshoot after a step change of current reference. The proportional gain can be increased by a factor of 1.5 giving a similar increase in bandwidth; however, this gives a step response with approximately 12.5 % overshoot. The equation for the integral gain gives a conservative value. In some applications where it is necessary for the reference frame used by the drive to dynamically follow the flux very closely (i.e. high speed Sensorless RFC-A induction motor applications) the integral gain may need to have a significantly higher value.

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization NV	√ Media	Onboard	Advanced	Diamasstica	III Linking
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

Frequency Loop Gains (Pr 65 {03.010}, Pr 66 {03.011}

The frequency loop gains control the response of the frequency controller to a change in frequency demand. The frequency controller includes proportional (Kp) and integral (Ki) feed forward terms, and a differential (Kd) feedback term. The drive holds two sets of these gains and either set may be selected for use by the frequency controller with Pr 03.016. If Pr 03.016 = 0, gains Kp1, Ki1 and Kd1 (Pr 03.010 to Pr 03.012) are used, and if Pr 03.016 = 1, gains Kp2, Ki2 and Kd2 (Pr 03.013 to Pr 03.015) are used. Pr 03.016 may be changed when the drive is enabled or disabled.

Frequency Controller Proportional Gain (Kp), Pr 65 (03.010) and Pr 03.013

If the proportional gain has a value and the integral gain is set to zero the controller will only have a proportional term, and there must be a frequency error to produce a torque reference. Therefore as the motor load increases there will be a difference between the reference and actual frequencies. This effect, called regulation, depends on the level of the proportional gain, the higher the gain the smaller the frequency error for a given load. If the proportional gain is too high either the acoustic noise produced by numerical quantization becomes unacceptable, or the stability limit is reached.

Frequency Controller Integral Gain (Ki), Pr 66 (03.011) and Pr 03.014

The integral gain is provided to prevent frequency regulation. The error is accumulated over a period of time and used to produce the necessary torque demand without any frequency error. Increasing the integral gain reduces the time taken for the frequency to reach the correct level and increases the stiffness of the system, i.e. it reduces the positional displacement produced by applying a load torque to the motor. Unfortunately increasing the integral gain also reduces the system damping giving overshoot after a transient. For a given integral gain the damping can be improved by increasing the proportional gain. A compromise must be reached where the system response, stiffness and damping are all adequate for the application. For RFC-A Sensorless mode, it is unlikely that the integral gain can be increased much above 0.50.

Differential Gain (Kd), Pr 03.012 and Pr 03.015

The differential gain is provided in the feedback of the frequency controller to give additional damping. The differential term is implemented in a way that does not introduce excessive noise normally associated with this type of function. Increasing the differential term reduces the overshoot produced by under-damping, however, for most applications the proportional and integral gains alone are sufficient.

Gain Change Threshold, Pr 03.017

If the Frequency Controller Gain Select (03.016) = 2, gains Kp1, Ki1 and Kd1 (Pr **03.010** to Pr **03.012**) are used while the modulus of the frequency demand is less than the value held by Gain Change Threshold (03.017), else gains Kp2, Ki2 and Kd2 (Pr **03.013** to Pr **03.015**) will be used.

Tuning the frequency loop gains:

This involves the connecting of an oscilloscope to analog output 1 to monitor the frequency feedback.


Give the drive a step change in frequency reference and monitor the response of the drive on the oscilloscope.

The proportional gain (Kp) should be set up initially. The value should be increased up to the point where the frequency overshoots and then reduced slightly.

The integral gain (Ki) should then be increased up to the point where the frequency becomes unstable and then reduced slightly.

It may now be possible to increase the proportional gain to a higher value and the process should be repeated until the system response approaches the ideal response as shown.

The diagram shows the effect of incorrect P and I gain settings as well as the ideal response.

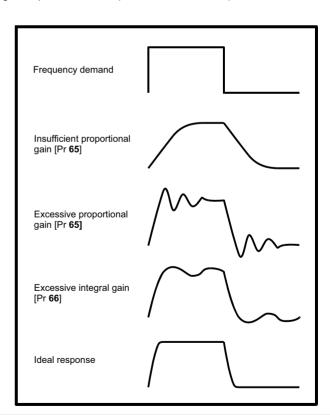

Safety Product Mechanical Electrical Getting Basic Running the NV Media Onboard Advanced UL Listing Optimization Diagnostics informatio information installation installation PLC parameters

8.2 Maximum motor rated current

Size 1 to 4:

The maximum motor rated current is the *Maximum Heavy Duty Current Rating* (Pr 77).

The values for the Heavy Duty rating can be found in the *Power Installation Guide*.

Size 5 onwards:

The maximum motor rated current allowed by the drive is greater than the *Maximum Heavy Duty Current Rating* (Pr 77). The ratio between the Normal Duty rating and the *Maximum Heavy Duty Current Rating* (Pr 77) varies between drive sizes. The values for the Normal and Heavy Duty rating can be found in the *Power Installation Guide*. If the *Motor Rated Current* (Pr 06) is set above the *Maximum Heavy Duty Current Rating* (Pr 77), the current limits and the motor thermal protection scheme are modified (see section 8.3 *Current limits* on page 54 and section 8.4 *Motor thermal protection* below for further information).

8.3 Current limits

The default setting for the current limit parameters is:

- 165 % x motor rated torque producing current for open loop mode.
- 175 % x motor rated torque producing current for RFC-A mode.

There are three parameters which control the current limits:

- · Motoring current limit: power flowing from the drive to the motor
- · Regen current limit: power flowing from the motor to the drive
- Symmetrical current limit: current limit for both motoring and regen operation

The lowest of either the motoring and regen current limit, or the symmetrical current limit applies.

The maximum setting of these parameters depends on the values of motor rated current, drive rated current and the power factor.

With size 5 upwards, increasing the motor rated current (Pr 06 / Pr 05.007) above the Heavy Duty rating (default value), will automatically reduce the current limits in Pr 04.005 to Pr 04.007. If the motor rated current is then set to or below the Heavy Duty rating, the current limits will be left at their reduced values.

The drive can be oversized to permit a higher current limit setting to provide higher accelerating torque as required up to a maximum of 1000 %.

8.4 Motor thermal protection

A time constant thermal model is provided to estimate the motor temperature as a percentage of its maximum allowed temperature.

The motor thermal protection is modelled using losses in the motor. The losses in the motor are calculated as a percentage value, so that under these conditions the *Motor Protection Accumulator* (04.019) would eventually reach 100 %.

Percentage losses = 100 % x [Load related losses]

Where:

Load related losses = $[I / (K_1 \times I_{Rated})]^2$


Where:

I = Current Magnitude (Pr 88)

I_{Rated} = Motor Rated Current (Pr **06**)


If Motor Rated Current (Pr **06**) ≤ Maximum Heavy Duty Current (Pr **77**)

Figure 8-1 Motor thermal protection (Heavy Duty)

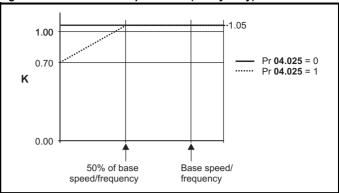

If Pr **04.025** is 0 the characteristic is for a motor which can operate at rated current over the whole speed range. Induction motors with this type of characteristic normally have forced cooling. If Pr **04.025** is 1 the characteristic is intended for motors where the cooling effect of motor fan reduces with reduced motor speed below 50 % of base speed/ frequency. The maximum value for K1 is 1.05, so that above the knee of the characteristics the motor can operate continuously up to 105 % current

Figure 8-2 Motor thermal protection (Normal Duty)

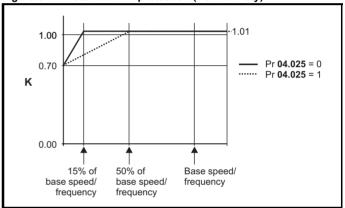

Both settings of Pr **04.025** are intended for motors where the cooling effect of the motor fan reduces with reduced motor speed, but with different speeds below which the cooling effect is reduced. If Pr **04.025** is 0 the characteristic is intended for motors where the cooling effect reduces with motor speed below 15 % of base speed/frequency. If Pr **04.025** is 1 the characteristic is intended for motors where the cooling effect reduces with motor speed below 50 % of base speed/frequency. The maximum value for K1 is 1.01, so that above the knee of the characteristics the motor can operate continuously up to 101 % current

When the estimated temperature in Pr **04.019** reaches 100 % the drive takes some action depending on the setting of Pr **04.016**. If Pr **04.016** is 0, the drive trips when Pr **04.019** reaches 100 %. If Pr **04.016** is 1, the current limit is reduced to $(K - 0.05) \times 100 \%$ when Pr **04.019** reaches 100 %.

The current limit is set back to the user defined level when Pr **04.019** falls below 95 %. The thermal model temperature accumulator accumulates the temperature of the motor while the drive remains powered-up. By default, the accumulator is set to the power down value at power up. If the rated current defined by Pr **06** is altered, the accumulator is reset to zero.

The default setting of the thermal time constant (Pr $\bf 04.015$) is 179 s which is equivalent to an overload of 150 % for 120 s from cold.

	Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing
--	--------------------	---------------------	-------------------------	-------------------------	--------------------	------------------	-------------------	--------------	------------------	----------------	---------------------	-------------	------------

8.5 Switching frequency

The default switching frequency is 3 kHz, however this can be increased up to a maximum of 16 kHz by Pr 37.

If switching frequency is increased from 3 kHz the following apply:

- Increased heat loss in the drive, which means that derating to the output current must be applied.
 See the derating tables for switching frequency and ambient temperature in the *Power Installation Guide*.
- Reduced heating of the motor due to improved output waveform quality.
- 3. Reduced acoustic noise generated by the motor.
- Increased sample rate on the speed and current controllers. A trade
 off must be made between motor heating, drive heating and the
 demands of the application with respect to the sample time required.

NOTE

Lowest switching frequency in RFC-A mode is 2 kHz.


Table 8-1 Sample rates for various control tasks at each switching frequency

Level	0.667, 1 kHz	3, 6, 12 kHz	2, 4, 8, 16 kHz	Open loop	RFC-A	
Level 1	250 μs	167 μs	2 kHz = 250 μs 4 kHz = 125 μs 8 kHz = 125 μs 16 kHz = 125 μs	Peak limit	Current controllers	
Level 2		250) μs	Current limit and ramps	Speed controller and ramps	
Level 3		1 r	ns	Voltage controller		
Level 4		4 r	ns	Time critical user interface		
Background					critical user erface	

8.5.1 Field weakening (constant power) operation

The drive can be used to run an induction machine above synchronous speed into the constant power region. The speed continues to increase and the available shaft torque reduces. The characteristics below show the torque and output voltage characteristics as the speed is increased above the rated value.

Figure 8-3 Torque and rated voltage against speed

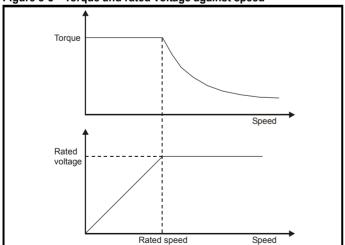

Care must be taken to ensure the torque available above base speed is sufficient for the application to run satisfactorily.

The saturation breakpoint parameters (Pr 05.029, Pr 05.030, Pr 05.062 and Pr 05.063) found during the autotune in RFC-A mode ensure the magnetizing current is reduced in the correct proportion for the specific motor. (In open loop mode the magnetizing current is not actively controlled).

8.5.2 Maximum frequency

In all operating modes the maximum output frequency is limited to 550 Hz.

8.5.3 Over-modulation (open-loop only)

The maximum output voltage level of the drive is normally limited to an equivalent of the drive input voltage minus voltage drops within the drive (the drive will also retain a few percent of the voltage in order to maintain current control). If the motor rated voltage is set at the same level as the supply voltage, some pulse deletion will occur as the drive output voltage approaches the rated voltage level. If Pr **05.020** (Over-modulation enable) is set to 1 the modulator will allow over modulation, so that as the output frequency increases beyond the rated frequency the voltage continues to increase above the rated voltage.

This can be used for example:

 To obtain high output frequencies with a low switching frequency which would not be possible with space vector modulation limited to unity modulation depth,

or

 In order to maintain a higher output voltage with a low supply voltage

The disadvantage is that the machine current will be distorted as the modulation depth increases above unity, and will contain a significant amount of low order odd harmonics of the fundamental output frequency. The additional low order harmonics cause increased losses and heating in the motor.

8.5.4 Switching frequency/Output frequency ratio

With a default switching frequency of 3 kHz, the maximum output frequency should be limited to 250 Hz. Ideally, a minimum ratio of 12:1 should be maintained between the switching frequency and the output frequency. This ensures the number of switchings per cycle is sufficient to ensure the output waveform quality is maintained at a minimum level.

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	III Lietina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

8.6 CT Modbus RTU specification

This section describes the adaptation of the MODBUS RTU protocol offered on Control Techniques' products. The portable software class which implements this protocol is also defined.

MODBUS RTU is a master slave system with half-duplex message exchange. The Control Techniques (CT) implementation supports the core function codes to read and write registers. A scheme to map between MODBUS registers and CT parameters is defined. The CT implementation also defines a 32 bit extension to the standard 16 bit register data format.

8.6.1 MODBUS RTU

Physical layer

Attribute	Description
Normal physical layer for multi-drop operation	EIA485 2 wire
Bit stream	Standard UART asynchronous symbols with Non Return to Zero (NRZ)
Symbol	Each symbol consists of:- 1 start bit 8 data bits (transmitted least significant bit first) 2 stop bits*
Baud rates	600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 76800, 115200

^{*} The drive will accept a packet with 1 or 2 stop bits but will always transmit 2 stop bits

RTU framing

The frame has the following basic format




The frame is terminated with a minimum silent period of 3.5 character times (for example, at 19200 baud the minimum silent period is 2 ms). Nodes use the terminating silence period to detect the end of frame and begin frame processing. All frames must therefore be transmitted as a continuous stream without any gaps greater or equal to the silence period. If an erroneous gap is inserted then receiving nodes may start frame processing early in which case the CRC will fail and the frame will be discarded.

MODBUS RTU is a master slave system. All master requests, except broadcast requests, will lead to a response from an individual slave. The slave will respond (i.e. start transmitting the response) within the quoted maximum slave response time (this time is quoted in the data sheet for all Control Techniques products). The minimum slave response time is also quoted but will never be less that the minimum silent period defined by 3.5 character times

If the master request was a broadcast request then the master may transmit a new request once the maximum slave response time has expired.

The master must implement a message time out to handle transmission errors. This time out period must be set to the maximum slave response time + transmission time for the response.

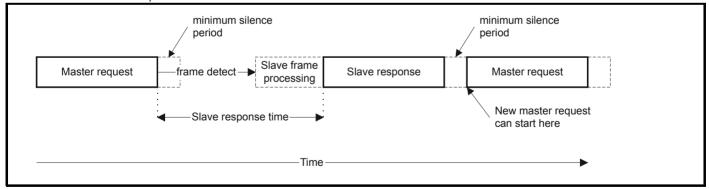

8.6.2 Slave address

The first byte of the frame is the slave node address. Valid slave node addresses are 1 through 247 decimal. In the master request this byte indicates the target slave node; in the slave response this byte indicates the address of the slave sending the response.

Global addressing

Address zero addresses all slave nodes on the network. Slave nodes suppress the response messages for broadcast requests.

	1											
Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISTING

8.6.3 MODBUS registers

The MODBUS register address range is 16 bit (65536 registers) which at the protocol level is represented by indexes 0 through 65535.

PLC registers

Modicon PLCs typically define 4 register 'files' each containing 65536 registers. Traditionally, the registers are referenced 1 through 65536 rather than 0 through 65535. The register address is therefore decremented on the master device before passing to the protocol.

File type	Description
1	Read only bits ("coil")
2	Read / write bits ("coil")
3	Read only 16bit register
4	Read / write 16bit register

The register file type code is NOT transmitted by MODBUS and all register files can be considered to map onto a single register address space. However, specific function codes are defined in MODBUS to support access to the "coil" registers.

All standard CT drive parameters are mapped to register file '4' and the coil function codes are not required.

CT parameter mapping

The Modbus register address is 16 bits in size, of which the upper two bits are used for data type selection leaving 14 bits to represent the parameter address, taking into account the slave increments the address value by 1, this results in a theoretical maximum parameter address of 163.84 (limited to 162.99 in software) when the default standard addressing mode (see *Serial Mode* (11.024)) is used.

To access a parameter number above 99 in any drive menu then the modified addressing mode must be used (see *Serial Mode* (11.024)), this will allow access to parameter numbers up to 255 but also limit the maximum menu number to 63.

The Modbus slave device increments the register address by 1 before processing the command, this effectively prevents access to parameter Pr 00.000 in the drive or option module.

The table below shows how the start register address is calculated for both addressing modes.

Parameter	Addressing mode	Protocol register			
0	Standard				
0.mm.ppp	Modified		mm x 256	+ ppp - 1	
		Examples			
		16-b	it	32-k	oit
		Decimal	Hex (0x)	Decimal	Hex (0x)
0.01.021	Standard	120	00 78	16504	40 78
	Modified	276	01 14	16660	41 14
0.01.000	Standard	99	00 63	16483	40 63
0.01.000	Modified	255	00 FF	16639	40 FF
0.03.161	Standard	N/A	N/A	N/A	N/A
	Modified	928	03 A0	17312	43 A0

Data types

The MODBUS protocol specification defines registers as 16 bit signed integers. All CT devices support this data size.

Refer to the section 8.6.7 Extended data types on page 59 for detail on accessing 32 bit register data.

8.6.4 Data consistency

All CT devices support a minimum data consistency of one parameter (16 bit or 32 bit data). Some devices support consistency for a complete multiple register transaction.

8.6.5 Data encoding

MODBUS RTU uses a 'big-endian' representation for addresses and data items (except the CRC, which is 'little-endian'). This means that when a numerical quantity larger than a single byte is transmitted, the MOST significant byte is sent first. So for example

16 - bits 0x1234 would be 0x12 0x34 32 - bits 0x12345678 would be 0x12 0x34 0x56 0x78

8.6.6 Function codes

The function code determines the context and format of the message data. Bit 7 of the function code is used in the slave response to indicate an exception.

The following function codes are supported:

Code	Description				
3	Read multiple 16 bit registers				
6	Write single register				
16	Write multiple 16 bit registers				
23	Read and write multiple 16 bit registers				

FC03 Read multiple

Read a contiguous array of registers. The slave imposes an upper limit on the number of registers, which can be read. If this is exceeded the slave will issue an exception code 2.

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostics	III Lietina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

Table 8-2 Master request

Byte	Description
0	Slave destination node address 1 through 247, 0 is global
1	Function code 0x03
2	Start register address MSB
3	Start register address LSB
4	Number of 16 bit registers MSB
5	Number of 16 bit registers LSB
6	CRC LSB
7	CRC MSB

Table 8-3 Slave response

Byte	Description
0	Slave source node address
1	Function code 0x03
2	Length of register data in read block (in bytes)
3	Register data 0 MSB
4	Register data 0 LSB
3+byte count	CRC LSB
4+byte count	CRC MSB

FC06 Write single register

Writes a value to a single 16 bit register. The normal response is an echo of the request, returned after the register contents have been written. The register address can correspond to a 32 bit parameter but only 16 bits of data can be sent.

Table 8-4 Master request

Byte	Description
0	Slave node address 1 through 247, 0 is global
1	Function code 0x06
2	Register address MSB
3	Register address LSB
4	Register data MSB
5	Register data LSB
6	CRC LSB
7	CRC MSB

Table 8-5 Slave response

Byte	Description				
0	Slave source node address				
1	Function code 0x06				
2	Register address MSB				
3	Register address LSB				
4	Register data MSB				
5	Register data LSB				
6	CRC LSB				
7	CRC MSB				

FC16 Write multiple

Writes a contiguous array of registers. The slave imposes an upper limit on the number of registers which can be written. If this is exceeded the slave will discard the request and the master will time out.

Table 8-6 Master request

Byte	Description
0	Slave node address 1 through 247, 0 is global
1	Function code 0x10
2	Start register address MSB
3	Start register address LSB
4	Number of 16 bit registers MSB
5	Number of 16 bit registers LSB
6	Length of register data to write (in bytes)
7	Register data 0 MSB
8	Register data 0 LSB
7+byte count	CRC LSB
8+byte count	CRC MSB

Table 8-7 Slave response

Byte	Description
0	Slave source node address
1	Function code 0x10
2	Start register address MSB
3	Start register address LSB
4	Number of 16 bit registers written MSB
5	Number of 16 bit registers written LSB
6	CRC LSB
7	CRC MSB

FC23 Read/Write multiple

Writes and reads two contiguous arrays of registers. The slave imposes an upper limit on the number of registers which can be written. If this is exceeded the slave will discard the request and the master will time out.

Table 8-8 Master request

Byte	Description
0	Slave node address 1 through 247, 0 is global
1	Function code 0x17
2	Start register address to read MSB
3	Start register address to read LSB
4	Number of 16 bit registers to read MSB
5	Number of 16 bit registers to read LSB
6	Start register address to write MSB
7	Start register address to write LSB
8	Number of 16 bit registers to write MSB
9	Number of 16 bit registers to write LSB
10	Length of register data to write (in bytes)
11	Register data 0 MSB
12	Register data 0 LSB
11+byte count	CRC LSB
12+byte count	CRC MSB

Table 8-9 Slave response

Byte	Description
0	Slave source node address
1	Function code 0x17
2	Length of register data in read block (in bytes)
3	Register data 0 MSB
4	Register data 0 LSB
3+byte count	CRC LSB
4+byte count	CRC MSB

1	Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media		Advanced	Diagnostics	UL Listina
	information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISTING

8.6.7 Extended data types

Standard MODBUS registers are 16bit and the standard mapping maps a single #X.Y parameter to a single MODBUS register. To support 32 bit data types (integer and float) the MODBUS multiple read and write services are used to transfer a contiguous array of 16bit registers.

Slave devices typically contain a mixed set of 16 bit and 32 bit registers. To permit the master to select the desired 16 bit or 32 bit access the top two bits of the register address are used to indicate the selected data type.

NOTE

The selection is applied for the whole block access.

bit 15 TYP1	bit 14 TYP0	bits 0 - 13
Type	select	Parameter address X x 100+Y-1

The 2bit type field selects the data type according to the table below:

Type field bits 15-14	Selected data type	Comments
00	INT16	backward compatible
01	INT32	
10	Float32	IEEE754 standard Not supported on all slaves
11	Reserved	

If a 32 bit data type is selected then the slave uses two consecutive 16 bit MODBUS registers (in 'big endian'). The master must also set the correct 'number of 16 bit registers'.

Example, read Pr **20.021** through Pr **20.024** as 32 bit parameters using FC03 from node 8:

Table 8-10 Master request

Byte	Value	Description
,		· · · · I · · ·
0	0x08	Slave destination node address
1	0x03	FC03 multiple read
2	0x47	Start register address Pr 20.021
3	0xE4	(16384 + 2021 - 1) = 18404 = 0x47E4
4	0x00	Number of 16bit registers to read
5	0x08	Pr 20.021 through Pr 20.024 is 4x32 bit registers = 8x16 bit registers
6	CRC LSB	
7	CRC MSB	

Table 8-11 Slave response

Byte	Value	Description
0	0x08	Slave destination node address
1	0x03	FC03 multiple read
2	0x10	Length of data (bytes) = 4x32 bit registers = 16 bytes
3-6		Pr 20.021 data
7-10		Pr 20.022 data
11-14		Pr 20.023 data
15-18		Pr 20.024 data
19	CRC LSB	
20	CRC MSB	

Reads when actual parameter type is different from selected The slave will send the least significant word of a 32 bit parameter if that parameter is read as part of a 16 bit access. The slave will sign extend the least significant word if a 16 bit parameter is accessed as a 32 bit parameter. The number of 16 bit registers must be even during a 32 bit access.

Example, If Pr **01.028** is a 32 bit parameter with a value of 0x12345678, Pr **01.029** is a signed 16 bit parameter with a value of 0xABCD, and Pr **01.030** is a signed 16 bit parameter with a value of 0x0123.

	044	Maria		I
Read	Start register address	Number of 16 bit registers	Response	Comments
Pr 01.028	127	1	0x5678	Standard 16 bit access to a 32 bit register will return low 16 bit word of truncated data
Pr 01.028	16511*	2	0x12345678	Full 32 bit access
Pr 01.028	16511*	1	Exception 2	Number of words must be even for 32 bit access
Pr 01.029	128	1	0xABCD	Standard 16 bit access to a 32 bit register will return low 16 bit word of data
Pr 01.029	16512*	2	0xFFFFABCD	32 bit access to a 16 bit register will return 32 bit sign extended data
Pr 01.030	16513*	2	0x00000123	32 bit access to a 16 bit register will return 32 bit sign extended data
Pr 01.028 to Pr 01.029	127	2	0x5678, 0xABCD	Standard 16 bit access to a 32 bit register will return low 16 bit word of truncated data
Pr 01.028 to Pr 01.029	16511*	4	0x12345678, 0xFFFFABCD	Full 32 bit access

^{*} Bit 14 is set to allow 32 bit access.

Writes when actual parameter type is different from selected

The slave will allow writing a 32 bit value to a 16 bit parameter as long as the 32 bit value is within the normal range of the 16 bit parameter.

The slave will allow a 16 bit write to a 32 bit parameter. The slave will sign extend the written value, therefore the effective range of this type of write will be -32768 to +32767.

Examples, if Pr 01.028 has a range of ± 100000 , and Pr 01.029 has a range of ± 10000 .

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diamagaiga	111 1 :-4:
information	information	installation	installation	started	parameters	motor	Optimization	Card	PI C	parameters	Diagnostics	UL Listing
imormation	momation	motanation	installation	Started	parameters	1110101		Odia	FLC	parameters		

Write	Start register address	Number of 16 bit registers	Data	Comments
Pr 01.028	127	1	0x1234	Standard 16 bit write to a 32bit register. Value written = 0x00001234
Pr 01.028	127	1	0xABCD	Standard 16 bit write to a 32 bit register. Value written = 0xFFFFABCD
Pr 01.028	16511	2	0x00001234	Value written = 0x00001234
Pr 01.029	128	1	0x0123	Value written = 0x0123
Pr 01.029	16512	2	0x00000123	Value written = 0x00000123

^{*} Bit 14 is set to allow 32 bit access

8.6.8 Exceptions

The slave will respond with an exception response if an error is detected in the master request. If a message is corrupted and the frame is not received or the CRC fails then the slave will not issue an exception. In this case the master device will time out. If a write multiple (FC16 or FC23) request exceeds the slave maximum buffer size then the slave will discard the message. No exception will be transmitted in this case and the master will time out.

Exception message format

The slave exception message has the following format.

Byte	Description
0	Slave source node address
1	Original function code with bit 7 set
2	Exception code
3	CRC LSB
4	CRC MSB

Exception codes

The following exception codes are supported.

Code	Description
1	Function code not supported
2	Register address out of range, or request to read too many registers

Parameter over range during block write FC16

The slave processes the write block in the order the data is received. If a write fails due to an out of range value then the write block is terminated. However, the slave does not raise an exception response, rather the error condition is signalled to the master by the number of successful writes field in the response.

Parameter over range during block read/write FC23

There will be no indication that there has been a value out of range during a FC23 access.

8.6.9 CRC

The CRC is a 16bit cyclic redundancy check using the standard CRC-16 polynomial x16+x15+x2+1. The 16 bit CRC is appended to the message and transmitted LSB first.

The CRC is calculated on ALL the bytes in the frame.

8.6.10 Device compatibility parameters

All devices have the following compatibility parameters defined:

Parameter	Description
Device ID	Unique device identification code
Minimum slave response time	The minimum delay between the end of a message from the master and the time at which the master is ready to receive a response from the slave. Refer to para 11-26
Maximum slave response time	When global addressing, the master must wait for this time before issuing a new message. In a network of devices, the slowest time must be used
Maximum baud rate	
32 bit float data type supported	If this data type is not supported then an over range error will be raised if this data type is used
Maximum buffer size	Determines the maximum block size.

Safety Product Mechanical Electrical Gettina Basic Running the Onboard Advanced Ontimization Diagnostics **UL** Listing information information installation parameters motor PLC parameters

9 NV Media Card

9.1 Introduction

The Non-Volatile Media Card feature enables simple configuration of parameters, parameter back-up and drive cloning using an SD card.


The SD card can be used for:

- Parameter copying between drives
- · Saving drive parameter sets

The NV Media Card (SD card) is located in the Al-Backup adaptor.

The card is not hot swappable, but the Al-Backup adaptor is "hot swapped" only when the five unit LEDs on the display are not flashing. The unit LEDs flash during the data transfer.

Figure 9-1 Installation of the SD card

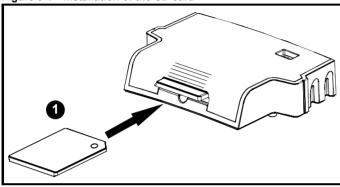

1. Installing the SD card

NOTE

A flat bladed screwdriver or similar tool is required in order to insert / remove the SD card fully into the Al-Backup adaptor.

Before inserting / removing the SD card into / from the Al-Backup adaptor, the Al-Backup adaptor must be removed from the drive.

NOTE

The drive supports SD cards formatted with the FAT32 file system only.

9.2 SD card support

An SD memory card can be inserted in the Al-Backup Adaptor in order to transfer data to the drive, however the following limitations should be noted:

If a parameter from the source drive does not exist in the target drive then no data is transferred for that parameter.

If the data for the parameter in the target drive is out of range then the data is limited to the range of the target parameter.

If the target drive has a different rating to the source drive then the normal rules for this type of transfer apply as described later.

No checking is possible to determine if the source and target product types are the same, and so no warning is given if they are different.

If an SD card is used then the drive will recognise the following file types through the drive parameter interface.

File Type	Description
Parameter file	A file that contains all clonable user save parameters from the drive menus (1 to 30) in difference from default format
Macro file	The same as a parameter file, but defaults are not loaded before the data is transferred from the card

These files can be created on a card by the drive and then transferred to any other drive including derivatives. If the Drive Derivative (11.028) is different between the source and target drives then the data is transferred but a {C.Pr} trip is initiated.

It is possible for other data to be stored on the card, but this should not be stored in the <MCDF> folder and it will not be visible via the drive parameter interface.

9.2.1 Changing the drive mode

If the source drive mode is different from the target drive mode then the mode will be changed to the source drive mode before the parameters are transferred. If the required drive mode is outside the allowed range for the target then a {C.typ} trip is initiated and no data is transferred.

9.2.2 Different voltage ratings

If the voltage rating of the source and target drives is different then all parameters except those that are rating dependent (i.e. attribute RA=1) are transferred to the target drive. The rating dependent parameters are left at their default values. After the parameters have been transferred and saved to non-volatile memory a {C.rtg} trip is given as a warning. The table below gives a list of the rating dependent parameters.

Parameters
Standard Ramp Voltage (02.008)
Motoring Current Limit (04.005)
M2 Motoring Current Limit (21.027)
Regenerating Current Limit (04.006)
M2 Regenerating Current Limit (21.028)
Symmetrical Current Limit (04.007)
M2 Symmetrical Current Limit (21.029)
User Current Maximum Scaling (04.024)
Motor Rated Current (05.007)
M2 Motor Rated Current (21.007)
Motor Rated Voltage (05.009)
M2 Motor Rated Voltage (21.009)
Motor Rated Power Factor (05.010)
M2 Motor Rated Power Factor (21.010)
Stator Resistance (05.017)
M2 Stator Resistance (21.012)
Maximum Switching Frequency (05.018)
Transient Inductance /Ld (05.024)
M2 Transient Inductance /Ld (21.014)
Stator Inductance (05.025)
M2 Stator Inductance (21.024)
Injection Braking Level (06.006)
Supply Loss Detection Level (06.048)

9.2.3 Different option modules installed

If the option module ID code (15.001) is different for any option module installed to the source drive compared to the destination drive, then the parameters for the set-up for that option module are not transferred, but and are instead set to their default values. After the parameters have been transferred and saved to non-volatile memory, a {C.OPt} trip is given as a warning.

Safety Product Mechanical Electrical Getting Basic Running the Advanced Onboard Ontimization Diagnostics **UL** Listing informatio information installation started parameters moto PLC parameters

9.2.4 Different current ratings

If any of the current rating parameters (Maximum Heavy Duty Rating (Pr 77), Maximum Rated Current (11.060) or Full Scale Current Kc (11.061)) are different between the source and target then all parameters are still written to the target drive, but some may be limited by their allowed range. To give similar performance in the target compared to the source drive the frequency and current controller gains are modified as shown below. Note that this does not apply if the file identification number is larger than 500.

· ·	
Gains	Multiplier
Frequency Controller Proportional Gain Kp1 (03.010)	[Source Full Scale Current Kc (11.061)] /
Frequency Controller Integral Gain Ki1 (03.011)	[Target Full Scale Current Kc (11.061)]
Frequency Controller Proportional Gain Kp2 (03.013)	
Frequency Controller Integral Gain Ki2 (03.014)	
M2 Frequency Controller Proportional Gain Kp (21.017)	
M2 Frequency Controller Integral Gain Ki (21.018)	
Current Controller Kp Gain (04.013)	
Current Controller Ki Gain (04.014)	
M2 Current Controller Kp Gain (21.022)	
M2 Current Controller Ki Gain (21.023)	

9.2.5 Different variable maximums

It should be noted that if ratings of the source and target drives are different, it is possible that some parameters with variable maximums may be limited and not have the same values as in the source drive.

9.2.6 Macro files

Macro files are created in the same way as parameter files except that NV Media Card Create Special File (11.072) must be set to 1 before the file is created on the NV media card. NV Media Card Create Special File (11.072) is set to zero after the file has been created or the transfer fails. When a macro file is transferred to a drive the drive mode is not changed even if the actual mode is different to that in the file and defaults are not loaded before the parameters are copied from the file to the drive.

The table below gives a summary of the values used in Pr 00 for NV media card operations. The yyy represents the file identification number.

Table 9-1 Functions in Pr 00

Value	Action
2001	Transfer the drive parameters to parameter file 001 and sets the block as bootable. This will include the parameters from any attached option module.
4ууу	Transfer the drive parameters to parameter file yyy. This will include the parameters from any attached option module.
6ууу	Load the drive parameters from parameter file yyy
7ууу	Erase file yyy.
8ууу	Compare the data in the drive with the file yyy. The data in the drive is compared to the data in the file yyy. If the files are the same then Pr 00 is simply reset to 0 when the compare is complete. If the files are different a {Card Compare} trip is initiated. All other NV media card trips also apply.
9555	Clear the warning suppression flag.
9666	Set the warning suppression flag.
9777	Clear the read-only flag.
9888	Set the read-only flag.

Writing to the NV Media Card 9.2.7

4yyy - Writes defaults differences to the NV Media Card

The data block only contains the parameter differences from the last time default settings were loaded.

All parameters except those with the NC (Not copied) coding bit set are transferred to the NV Media Card. In addition to these parameters all menu 20 parameters (except Pr 20.000), can be transferred to the NV Media Card.

Writing a parameter set to the NV Media Card (Pr 30 = Prog (2))

Setting Pr 30 to Prog (2) and resetting the drive will save the parameters to the NV Media Card, i.e. this is equivalent to writing 4001 to Pr 00. All NV Media Card trips apply. If the data block already exists it is automatically overwritten. When the action is complete this parameter is automatically reset to NonE (0).

Reading from the NV Media Card 6yyy - Reading from NV Media Card

When the data is transferred back to the drive, using 6yyy in Pr 00, it is transferred to the drive RAM and the EEPROM. A parameter save is not required to retain the data after-power down. Set up data for any option module installed stored on the card are transferred to the drive. If the option module installed is different between source and destination drives, the menu for the option module slot where the option module category is different is not updated from the card and will contain its default values after the copying action. The drive will produce a 'C.OPt' trip if the option module installed to the source and the destination drives are different. If the data is being transferred to the drive with different voltage or current rating a

'C.rtg' trip will occur.

The following drive rating dependant parameters (RA coding bit set) will not be transferred to the destination drive by a NV Media Card when the

Safety Product Mechanical Electrical Basic Running the Gettino Onboard Advanced Ontimization Diagnostics **UL** Listing information installation parameters PLC parameters

voltage rating of the destination drive is different from the source drive and the file is a parameter file.

However, drive rating dependent parameters will be transferred if only the current rating is different. If drive rating dependant parameters are not transferred to the destination drive they will contain their default values.

Pr 02.008 Standard Ramp Voltage

 \mbox{Pr} $\bf 04.005$ to \mbox{Pr} $\bf 04.007$ and \mbox{Pr} $\bf 21.027$ to \mbox{Pr} $\bf 21.029$ Motoring Current Limits

Pr 04.024, User Current Maximum Scaling

Pr 04.041 User Over Current Trip Level

Pr 05.007. Pr 21.007 Rated Current

Pr 05.009, Pr 21.009 Rated Voltage

Pr 05.010, Pr 21.010 Rated Power Factor

Pr **05.017**, Pr **21.012** Stator Resistance

Pr 05.018 Maximum Switching Frequency

Pr 05.024, Pr 21.014 Transient Inductance

Pr 05.025, Pr 21.024 Stator Inductance

Pr 06.006 Injection Braking Level

Pr 06.048 Supply Loss Detection Level

Pr 06.073 Braking IGBT Lower Threshold

Pr 06.074 Braking IGBT Upper Threshold

Pr 06.075 Low Voltage Braking IGBT Threshold

Reading a parameter set from the NV Media Card (Pr 30 = rEAd (1))

Setting Pr **30** to rEAd (1) and resetting the drive will transfer the parameters from the card into the drive parameter set and the drive EEPROM, i.e. this is equivalent to writing 6001 to Pr **00**.

All NV Media Card trips apply. Once the parameters are successfully copied this parameter is automatically reset to NonE (0). Parameters are saved to the drive EEPROM after this action is complete.

9.2.9 Auto saving parameter changes (Pr 30 = Auto (3))

This setting causes the drive to automatically save any changes made to menu 0 parameters on the drive to the NV Media Card. The latest menu 0 parameter set in the drive is therefore always backed up on the NV Media Card. Changing Pr 30 to Auto (3) and resetting the drive will immediately save the complete parameter set from the drive to the card, i.e. all parameters except parameters with the NC coding bit set. Once the whole parameter set is stored only the individual modified menu 0 parameter setting is updated.

Advanced parameter changes are only saved to the NV Media Card when Pr **00** is set to 'SAVE' or a 1001 and the drive reset.

All NV Media Card trips apply. If the data block already contains information it is automatically overwritten.

If the card is removed when Pr **30** is set to 3, Pr **30** is then automatically set to NonE (0).

When a new NV Media Card is installed Pr 30 must be set back to Auto (3) by the user and the drive reset so the complete parameter set is rewritten to the new NV Media Card if auto mode is still required. When Pr 30 is set to Auto (3) and the parameters in the drive are saved, the NV Media Card is also updated, and therefore the NV Media Card becomes a copy of the drives stored configuration.

At power up, if Pr **30** is set to Auto (3), the drive will save the complete parameter set to the NV Media Card. The 5 unit LEDs will flash during this operation. This is done to ensure that if a user puts a new NV Media Card in during power down the new NV Media Card will have the correct data.

NOTE

When Pr **30** is set to Auto (3) the setting of Pr **30** itself is saved to the drive EEPROM but not the NV Media Card.

9.2.10 Booting up from the NV Media Card on every power up (Pr 30 = boot (4))

When Pr **30** is set to boot (4) the drive operates the same as Auto mode except when the drive is powered-up. The parameters on the NV Media Card will be automatically transferred to the drive at power up if the following are true:

- · A card is inserted in the drive
- · Parameter data block 1 exists on the card
- The data in block 1 is type 1 to 4 (as defined in Pr 11.038)
- Pr 30 on the card set to boot (4)

The 5 unit LEDs will flash during this operation. If the drive mode is different from that on the card, the drive gives a 'C.tyP' trip and the data is not transferred.

If 'boot' mode is stored on the copying NV Media Card this makes the copying NV Media Card the master device. This provides a very fast and efficient way of re-programming a number of drives.

'boot' mode is saved to the card, but when the card is read, the value of Pr **30** is not transferred to the drive.

9.2.11 Booting up from the NV Media Card on every power up (Pr 00 = 2001)

It is possible to create a bootable parameter data block by setting Pr **00** to 2001 and initiating a drive reset. This data block is created in one operation and is not updated when further parameter changes are made.

Setting Pr **00** to 2001 will overwrite the data block 1 on the card if it already exists.

9.2.12 8yyy - Comparing the drive full parameter set with the NV Media Card values

Setting 8yyy in Pr **00**, will compare the NV Media Card file with the data in the drive. If the compare is successful Pr **00** is simply set to 0. If the compare fails a 'C.cPr' trip is initiated.

9.2.13 7yyy - Erasing data from the NV Media Card values

Data can be erased from the NV Media Card either one block at a time or all blocks in one go.

Setting 7yyy in Pr 00 will erase NV Media Card data block yyy

9.2.14 9666 / 9555 - Setting and clearing the NV Media Card warning suppression flag

If the option module installed to the source and destination drive are different the drive will produce a 'C.OPt' trip.

If the data is being transferred to a drive of a different voltage or current rating a 'C.rtg' trip will occur. It is possible to suppress these trips

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing
imormation	IIIIOIIIIatioii	motanation	motanation	Started	parameters	1110101		Gara	1 LO	parameters		

by setting the warning suppression flag. If this flag is set the drive will not trip if the option module or drive ratings are different between the source and destination drives. The option module or rating dependent parameters will not be transferred.

- Setting 9666 in Pr 00 will set the warning suppression flag
- Setting 9555 in Pr 00 will clear the warning suppression flag

9.2.15 9888 / 9777 - Setting and clearing the NV Media Card read only flag

The NV Media Card may be protected from writing or erasing by setting the read only flag. If an attempt is made to write or erase a data block when the read only flag is set, a 'C.rdo' trip is initiated. When the read only flag is set only codes 6yyy or 9777 are effective.

- Setting 9888 in Pr 00 will set the read only flag
- · Setting 9777 in Pr 00 will clear the read only flag

9.3 NV Media Card parameters

Table 9-2 Key to parameter table coding

_					
1	RW	Read / Write	ND	No default value	
1	RO	Read only	NC	Not copied	
1	Num	Number parameter	PT	Protected parameter	
1	Bit	Bit parameter	RA	Rating dependant	
1	Txt	Text string	US	User save	
Ì	Bin	Binary parameter	PS	Power-down save	
	FI	Filtered	DE	Destination	

11.0	036	NV Media Card File Previously Loaded				
RO	Num		NC	PT		
\$		0 to 999		\Rightarrow		0

This parameter shows the number of the data block last transferred from an SD card to the drive. If defaults are subsequently reloaded this parameter is set to 0.

11.0	037	NV Media Card File Number				
RW	Num					
Û		0 to 999		\Rightarrow		0

This parameter should have the data block number which the user would like the information displayed in Pr 11.038, Pr 11.039.

11.	038	NV Medi	a Card Fi	le Type	
RO	Txt	ND	NC	PT	
Û		0 to 2		\Rightarrow	0

Displays the type of data block selected with Pr 11.037.

Pr 11.038	String	Type / mode
0	None	No file selected
1	Open-loop	Open loop mode parameter file
2	RFC-A	RFC-A mode parameter file

11.	039	NV Medi	a Card Fi	le Versior	ı
RO	Num	ND	NC	PT	
⇕		0 to 9999			0

Displays the version number of the file selected in Pr 11.037.

11.04	11.042 {30}		er Clonin	g		
RW	Txt		NC			US
\$,	0), rEAd (′ 2), Auto (3 boot (4)	,	ightharpoons	()

9.4 NV Media Card trips

After an attempt to read, write or erase data from a NV Media Card a trip is initiated if there has been a problem with the command.

See Chapter 12 *Diagnostics* on page 129 for more information on NV Media Card trips.

9.5 Data block header information

Each data block stored on a NV Media Card has header information detailing the following:

- NV Media Card File Number (11.037)
- NV Media Card File Type (11.038)
- NV Media Card File Version (11.039)

The header information for each data block which has been used can be viewed in Pr 11.038 to Pr 11.039 by increasing or decreasing the data block number set in Pr 11.037. If there is no data on the card Pr 11.037 can only have a value of 0.

Safety Product Mechanical Electrical Gettina Basic Running the NV Media Advanced Optimization Diagnostics **UL** Listing information installation parameters moto parameters

10 Onboard PLC

10.1 Onboard PLC and Machine Control Studio

The drive has the ability to store and execute a 16 kB (less 4 kB of proxy) Onboard PLC user program without the need for additional hardware in the form of an option module.

Machine Control Studio is an IEC61131-3 development environment designed for use with Unidrive M and compatible application modules. Machine Control Studio is based on CODESYS from 3S-Smart Software Solutions.

All of the programming languages defined in the IEC standard IEC 61131-3 are supported in the Machine Control Studio development environment.

- ST (Structured text)
- · LD (Ladder diagram)
- · FBD (Function block diagram)
- IL (Instruction list)
- · SFC (Sequential function chart)
- CFC (Continuous Function Chart). CFC is an extension to the standard IEC programming languages

Machine Control Studio provides a complete environment for the development of user programs. Programs can be created, compiled and downloaded to a Unidrive M for execution, via the communications port on the front of the drive. The run-time operation of the compiled program on the target can also be monitored using Machine Control Studio and facilities are provided to interact with the program on the target by setting new values for target variables and parameters.

The Onboard PLC and Machine Control Studio form the first level of functionality in a range of programmable options for Unidrive M.

Machine Control Studio can be downloaded from www.controltechniques.com.

See the Machine Control Studio help file for more information regarding using Machine Control Studio, creating user programs and downloading user programs to the drive.

10.2 Benefits

The combination of the Onboard PLC and Machine Control Studio, means that the drive can replace nano and some micro PLCs in many applications

Machine Control Studio benefits from access to the standard CODESYS function and function block libraries as well as those from third parties. Functions and function blocks available as standard in Machine Control Studio include, but not limited to, the following:

- · Arithmetic blocks
- Comparison blocks
- Timers
- Counters
- · Multiplexers
- Latches
- Bit manipulation

Typical applications for the Onboard PLC include:

- Ancillary pumps
- Fans and control valves
- Interlocking logic
- Sequence routines
- Custom control words.

10.3 Features

The Unidrive M Onboard PLC user program has the following features:

10.3.1 Tasks

The Onboard PLC allows use of two tasks.

- Clock: A high priority real time task. The clock task interval can be set from 16 ms to 262 s in multiples of 16 ms. The parameter Onboard User Program: Clock Task Time Used (11.051) shows the percentage of the available time used by clock task. A read or write of a drive parameter by the user program takes a finite period of time. It is possible to select up to 10 parameters as fast access parameter which reduced the amount of time it takes for the user program to read from or write to a drive parameter. This is useful when using a clock task with a fast update rate as selecting a parameter for fast access reduces the amount of the clock task resource required to access parameters.
- Freewheeling: A non-real time background task. The freewheeling task is scheduled for a short period once every 256 ms. The time for which the task is scheduled will vary depending on the loading of the drive's processor. When scheduled, several scans of the user program may be performed. Some scans may execute in microseconds. However, when the main drive functions are scheduled there will be a pause in the execution of the program causing some scans to take many milliseconds. The parameter Onboard User Program: Freewheeling Tasks Per Second (11.050) shows the number of times the freewheeling task has started per second.

10.3.2 Variables

The Onboard PLC supports the use of variables with the data types of Boolean, integer (8 bit, 16 bit and 32 bit, signed and unsigned), floating point (64 bit only), strings and time.

10.3.3 Custom menu

Machine Control Studio can construct a custom drive menu to reside in menu 30 on the drive. The following properties of each parameter can be defined using Machine Control Studio:

- Parameter name
- Number of decimal places
- The units for the parameter to be display on the keypad.
- · The minimum, maximum and default values
- Memory handling (i.e. power down save, user save or volatile)
- Data type. The drive provides a limited set of 1 bit, 8 bit, 16 bit and 32 bit integer parameters to create the customer menu.

Parameters in this customer menu can be accessed by the user program and will appear on the keypad.

10.3.4 Limitations

The Onboard PLC user program has the following limitations:

- The flash memory allocated to the Onboard PLC is 16 kB which includes the user program and its header which results in a maximum user program size of about 12 kB
- The Onboard PLC is provided with 2 kB of RAM.
- The drive is rated for 100 program downloads. This limitation is imposed by the flash memory used to store the program within the drive.
- There is only one real-time task with a minimum period of 16 ms.
- The freewheeling background task runs at a low priority. The drive is
 prioritized to perform the clock task and its major functions first, e.g.
 motor control, and will use any remaining processing time to execute
 the freewheeling task as a background activity. As the drive's
 processor becomes more heavily loaded, less time is spent
 executing the freewheeling task.
- Breakpoints, single stepping and online program changes are not possible.
- The Graphing tool is not supported.
- The variable data types REAL (32 bit floating point), LWORD (64 bit integer) and WSTRING (Unicode string), and retained variables are not supported.

10.4 Onboard PLC parameters

The following parameters are associated with the Onboard PLC user program.

	11.047		Onboard	l User Pro	ogram: Er	nable	
1	RW	Txt				US	
j	Û	Stop	(0) or Ru	n (1)	\Diamond	Rur	า (1)

This parameter stops and starts the user program.

0 - Stop the User Program

The onboard user program is stopped.

1 - Run the User Program

The user program will execute. Background task starts from the beginning.

11.	048	Onboard User Program: Status								
RO	Txt									
\$		47483648 14748364		⇔						

This parameter is read-only and indicates the status of the user program in the drive. The user program writes the value to this parameter.

- 0: Stopped
- 1: Running
- 2: Exception
- 3: No user program present

11.0	049	Onboard User Program: Programming Events								
RO	Uni		NC	PT	PS					
\$	(0 to 65535	5	\Rightarrow						

This parameter holds the number of times an Onboard PLC user program download has taken place and is 0 on dispatch from the factory. The drive is rated for one hundred program downloads. This parameter is not altered when defaults are loaded.

11.0	050	Onboard User Program: Freewheeling Tasks Per Second								
RO	Uni		NC	PT						
Û		0 to 65535	5	ightharpoons						

This parameter shows the number of times the freewheeling task has started per second.

11.0	051	Onboard User Program: Clock Task Time Used							
RO			NC	PT					
\$	0.0	0 to 100.0	%	\Rightarrow					

This parameter shows the percentage of the available time used by the user program clock task.

11.0	055	Onboard User Program: Clock Task Scheduled Interval									
RO			NC	PT							
Û	0 t	o 262128	ms	\Rightarrow							

This parameter shows the interval at which the clock task is scheduled to run at in ms.

10.5 Onboard PLC trips

If the drive detects an error in the user program it will initiate a User Program trip. The sub-trip number for the User Program trip details the reason for the error. See Chapter 12 *Diagnostics* on page 137 for more information on the User Program trip.

Safety Product Mechanical Electrical Getting Basic Running the NV Media Onboard Advanced Ontimization Diagnostics **UL** Listing information installation motor Card PLC parameters

11 Advanced parameters

This is a quick reference to all parameters in the drive showing units, ranges limits etc, with block diagrams to illustrate their function. Full descriptions of the parameters can be found in the Parameter Reference Guide.



These advanced parameters are listed for reference purposes only. The lists in this chapter do not include sufficient information for adjusting these parameters. Incorrect adjustment can affect the safety of the system, and damage the drive and or external equipment. Before attempting to adjust any of these parameters, refer to the *Parameter reference guide*.

Table 11-1 Menu descriptions

Menu	Description
0	Commonly used basic set up parameters for quick / easy
U	programming
1	Frequency reference
2	Ramps
3	Frequency control
4	Torque and current control
5	Motor control
6	Sequencer and clock
7	Analog I/O
8	Digital I/O
9	Programmable logic, motorized pot, binary sum, timers
10	Status and trips
11	Drive set-up and identification, serial communications
12	Threshold detectors and variable selectors
14	User PID controller
15	Option module slot 1 set-up menu
18	General option module application menu 1
20	General option module application menu 2
21	Second motor parameters
22	Menu 0 set-up
24	Option module slot 1 application menu
Slot 1	Slot 1 option menus*

^{*} Only displayed when the option module is installed.

Operation mode abbreviations:

Open-loop: Sensorless control for induction motors

RFC-A: Asynchronous Rotor Flux Control for induction motors

Default abbreviations:

Standard default value (50 Hz AC supply frequency)

USA default value (60 Hz AC supply frequency)

NOTE

Parameter numbers shown in brackets {...} are the equivalent Menu 0 parameters. Some Menu 0 parameters appear twice since their function depends on the operating mode.

In some cases, the function or range of a parameter is affected by the setting of another parameter. The information in the lists relates to the default condition of any parameters affected in this way.

Table 11-2 Key to parameter table coding

	Key to parameter table coding
Coding	Attribute
RW	Read/Write: can be written by the user
RO	Read only: can only be read by the user
Bit	1 bit parameter. 'On' or 'Off' on the display
Num	Number: can be uni-polar or bi-polar
Txt	Text: the parameter uses text strings instead of numbers.
Bin	Binary parameter
IP	IP Address parameter
Mac	Mac Address parameter
Date	Date parameter
Time	Time parameter
Chr	Character parameter
FI	Filtered: some parameters which can have rapidly changing values are filtered when displayed on the drive keypad for easy viewing.
DE	Destination: This parameter selects the destination of an input or logic function.
RA	Rating dependent: this parameter is likely to have different values and ranges with drives of different voltage and current ratings. Parameters with this attribute will be transferred to the destination drive by non-volatile storage media when the rating of the destination drive is different from the source drive and the file is a parameter file. However, the values will be transferred if only the current rating is different and the file is a difference from default type file.
ND	No default: The parameter is not modified when defaults are loaded
NC	Not copied: not transferred to or from non-volatile media during copying.
PT	Protected: cannot be used as a destination.
US	User save: parameter saved in drive EEPROM when the user initiates a parameter save.
PS	Power-down save: parameter automatically saved in drive EEPROM when the under volts (UV) state occurs.

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostics	III Licting
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

Table 11-3 Feature look-up table

Features	Related parameters (Pr)												
Acceleration rates	02.010	02.011 t	o 02.019	02.032	02.033	02.034	02.002						
Analog I/O	Menu 7												
Analog input 1	07.001	07.007	07.008	07.009	07.010	07.028	07.051	07.030	07.061	07.062	07.063	07.064	
Analog input 2	07.002	07.011	07.012	07.013	07.014		07.031	07.052	07.065	07.066	07.067	07.068	
Analog output 1	07.019	07.020			07.055	07.099							
Analog reference 1	01.036	07.010	07.001	07.007	07.008	07.009	07.028	07.051	07.030	07.061	07.062	07.063	07.064
Analog reference 2	01.037	07.014	01.041	07.002	07.011	07.012	07.013	07.032	07.031	07.065	07.066	07.067	07.068
Application menu	Men	u 18			Men	u 20							
At frequency indicator bit	03.006	03.007	03.009	10.006	10.005	10.007							
Auto reset	10.034	10.035	10.036	10.001									
Autotune	05.012		05.017	05.021	05.024	05.025	05.010	05.029	05.030	05.062	05.063	05.059	05.060
Binary sum	09.029	09.030	09.031	09.032	09.033	09.034							
Bipolar reference	01.010												
Brake control	12.040 to	12.047		12.050	12.051								
Braking	10.011	10.010	10.030	10.031	06.001	02.004	02.002	10.012	10.039	10.040	10.061		
Catch a spinning motor	06.009	05.040											
Coast to stop	06.001												
Copying	11.042	11.036 1	to 11.039										
Cost - per kWh electricity	06.016	06.017	06.024	06.025	06.026		06.027						
Current controller	04.013	04.014											
Current feedback	04.001	04.002	04.017	04.004		04.020		04.024	04.026	10.008	10.009	10.017	
Current limits	04.005	04.006	04.007	04.018	04.015	04.019	04.016	05.007	05.010	10.008	10.009	10.017	
DC bus voltage	05.005	02.008											
DC injection braking	06.006	06.007	06.001										
Deceleration rates	02.020	02.0211	to 02.029	02.004	02.035 t	o 02.037	02.002	02.008	06.001	10.030	10.031	10.039	02.009
Defaults	11.043	11.046											
Digital I/O	Menu 8												
Digital I/O read word	08.020												
Digital I/O T10	08.001	08.011	08.021	08.031	08.081	08.091	08.121						
Digital Input T11	08.002	08.012	08.022		08.082	08.122							
Digital Input T12	08.003	08.013	08.023		08.083	08.123							
Digital input T13	08.004	08.014	08.024	08.084	08.124								
Digital input T14	08.005	08.015	08.025		08.035	08.085	08.125						
Direction	10.013	06.030	06.031	01.003	10.014	02.001	03.002	08.003	08.004	10.040			
Drive active	10.002	10.040											
Drive derivative	11.028												
Drive OK	10.001	08.028	08.008	08.018	10.036	10.040							
Dynamic performance	05.026												
Dynamic V/F	05.013												
Enable	06.015				06.038								
Estimated frequency	03.002	03.003	03.004										
External trip	10.032												
Fan speed	06.045												
Field weakening - induction motor	05.029	05.030	01.006	05.028	05.062	05.063							
Filter change	06.019	06.018	06.021	06.022	06.023								
Firmware version	11.029	11.035											
	520							<u> </u>]		1	I

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing

Features					Re	lated par	rameters	(Pr)				
Frequency controller	03.010 to	03.017										
Frequency reference selection	01.014	01.015										
Frequency slaving	03.001	03.013	03.014	03.015	03.016	03.017	03.018					
Hard frequency reference	03.022	03.023										
Heavy duty rating	05.007	11.032										
High stability space vector modulation	05.019											
I/O sequencer	06.004	06.030	06.031	06.032	06.033	06.034	06.042	06.043	06.041			
Inertia compensation	02.038		04.022	03.018								
Jog reference	01.005	02.019	02.029									
Keypad reference	01.017	01.014	01.043	01.051	06.012	06.013						
Limit switches	06.035	06.036										
Line power supply loss	06.003	10.015	10.016	05.005	06.046	06.048	06.051					
Logic function 1	09.001	09.004	09.005	09.006	09.007	09.008	09.009	09.010				
Logic function 2	09.002	09.014	09.015	09.016	09.017	09.018	09.019	09.020				
Maximum speed	01.006											
Menu 0 set-up				Menu 22								
Minimum speed	01.007	10.004										
Motor map	05.006	05.007	05.008	05.009	05.010	05.011						
Motor map 2	Menu 21		11.045									
Motorized potentiometer	09.021	09.022	09.023	09.024	09.025	09.026	09.027	09.028	09.003			
NV media card	11.036 to	o 11.039		11.042								
Offset reference	01.004	01.038	01.009									
Open loop vector mode	05.014	05.017	05.088									
Operating mode		11.031		05.014								
Output	05.001	05.002	05.003	05.004								
Over frequency threshold	03.008											
Over modulation enable	05.020											
PID controller	Menu 14											
Power up parameter	11.022											
Preset speeds	01.015	01.021 t	01.028			01.014	01.042	01.045 t	o 01.047		01.050	
Programmable logic	Menu 9											
Ramp (accel / decel) mode	02.004	02.008	06.001	02.002	02.003	10.030	10.031	10.039				
Reference selection	01.014	01.015	01.049	01.050	01.001							
Regenerating	10.010	10.011	10.030	10.031	06.001	02.004	02.002	10.012	10.039	10.040		
Relay output	08.008	08.018	08.028									
Reset	10.001		10.033	10.034	10.035	10.036	10.038					
RFC mode				05.040								
S ramp	02.006	02.007										
Sample rates	05.018											
Security code	11.030	11.044										
Serial comms	11.020	11.023 1	to 11.027	11.099								
Skip references	01.029	01.030	01.031	01.032	01.033	01.034	01.035					
Slip compensation	05.027	05.008	05.033	05.036	05.084							
Status word	10.040											
Supply	05.005	06.003	06.046	06.048	06.051	06.058	06.059					
Switching frequency	05.018	05.035	05.038	07.034	07.035							
	ĺ	I	l	1	l	l .	l .	l	1	1	l	L

		Electrical estallation	Getting started p	Basic parameters	Running the motor	Optimiz	zation	IV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing
Features	Features Related parameters (Pr)											
Thermal protection - drive	05.018	05.035	07.004	07.005			07.035	10.018				
Thermal protection - motor	04.015	05.007	04.019	04.016	04.025		08.035					
Thermistor input	07.046	07.047	07.048	07.049	07.050	08.035						
Threshold detector 1	12.001	12.003	to 12.007									
Threshold detector 2	12.002	12.023	to 12.027									
Time - filter change	06.019	06.018	06.021	06.022	06.023							
Time - powered up log	06.020			06.019	06.017	06.018	06.084					
Time - run log				06.019	06.017	06.018	06.084					
Torque	04.003	04.026	05.032									
Torque mode	04.008	04.011										
Trip detection	10.037	10.038	10.020	to 10.029								
Trip log	10.020	to 10.029		10.041 to 10.060				10.070	to 10.079			
Under voltage	05.005	10.016	10.015	10.068								
V/F mode	05.015	05.014										
Variable selector 1	12.008	to 12.016										
Variable selector 2	12.028	to 12.036										
Voltage controller	05.031											
Voltage mode	05.014	05.017		05.015								
Voltage rating	11.033	05.009	05.005									
Voltage supply		06.046	05.005									
Warning	10.019	10.012	10.017	10.018	10.040							
Zero frequency indicator bi	t 03.005	10.003										

11.1 Parameter ranges and Variable minimum/maximums:

Some parameters in the drive have a variable range with a variable minimum and a variable maximum value which is dependent on one of the following:

- The settings of other parameters
- · The drive rating
- The drive mode
- Combination of any of the above

The tables below give the definition of variable minimum/maximum and the maximum range of these.

VM_AC_\	OLTAGE Range applied to parameters showing AC voltage
Units	V
Range of [MIN]	0
Range of [MAX]	0 to 930
Definition	VM_AC_VOLTAGE[MAX] is drive voltage rating dependent. See Table 11-4
Delilillion	VM_AC_VOLTAGE[MIN] = 0

VM_AC_VOI	Range applied to the AC voltage set-up parameters
Units	V
Range of [MIN]	0
Range of [MAX]	0 to 765
Definition	VM_AC_VOLTAGE_SET[MAX] is drive voltage rating dependent. See Table 11-4
Delilillion	VM_AC_VOLTAGE_SET[MIN] = 0

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostica	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISTING

VM_/	ACCEL_RATE	Maximum applied to the ramp rate parameters
Units	s / 100 Hz, s/1000 H	z, s/Max Frequency
Range of [MIN]	Open-loop: 0.0 RFC-A: 0.0	
Range of [MAX]	Open-loop: 0.0 to 32 RFC-A: 0.0 to 32000	
	zero to a defined lev maximum speed cha	be applied to the ramp rate parameters because the units are a time for a change of speed from el or to maximum speed. If the change of speed is to the maximum speed then changing the nges the actual ramp rate for a given ramp rate parameter value. The variable maximum hat longest ramp rate (parameter at its maximum value) is not slower than the rate with the defined 100 Hz.
Definition		ency is taken from Maximum Speed (01.006) if Select Motor 2 Parameters (11.045) = 0, or M2 .001) if Select Motor 2 Parameters (11.045) = 1.
	VM_ACCEL_RATE[I	MIN] = 0.0
	If Ramp Rate Units (02.039) = 0:
	VM_ACCEL_RATE[I	MAX] = 32000.0
	Otherwise:	
	VM_ACCEL_RATE[I	MAX] = 32000.0 x Maximum frequency / 100.00

VI	M_DC_VOLTAGE	Range applied to DC voltage reference parameters
Units	V	
Range of [MIN]	0	
Range of [MAX]	0 to 1190	
Definition		GE[MAX] is the full scale DC bus voltage feedback (over voltage trip level) for the drive. This level is not dependent. See Table 11-4 GE[MIN] = 0


VM_DC_VOI	_TAGE_SET	Range applied to DC voltage reference parameters
Units	V	
Range of [MIN]	0	
Range of [MAX]	0 to 1150	
Definition	VM_DC_VOLTAGE_SET[N VM_DC_VOLTAGE_SET[N	MAX] is drive voltage rating dependent. See Table 11-4 MIN] = 0

VM_DRIVE	CURRENT	Range applied to parameters showing current in A
Units	Α	
Range of [MIN]	-9999.99 to 0.00	
Range of [MAX]	0.00 to 9999.99	
Definition	Scale Current Kc (11.061).	AX] is equivalent to the full scale (over current trip level) for the drive and is given by Full
	VM_DRIVE_CURRENT[MI	N] = - VM_DRIVE_CURRENT[MAX]

	VM_FREQ	Range applied to parameters showing frequency
Units	Hz	
Range of [MIN]	-1100.00	
Range of [MAX]	1100.00	
Definition	the range is set to twice to twice to twice to twice to twice to the range is set to twice to the range is set to twice to the range is set to twice to	aximum defines the range of speed monitoring parameters. To allow headroom for overshoot ne range of the speed references. SPEED_FREQ_REF[MIN] SPEED_FREQ_REF[MAX]

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	UL Listing

VM_MAX_SWITC	Range applied to the maximum switching frequency parameters
Units	User units
Range of [MIN]	Open-loop: 0 (0.667 kHz) RFC-A: 2 (2 kHz)
Range of [MAX]	Open-loop: 8 (16kHz) RFC-A: 8 (16kHz)
Definition	VM_SWITCHING_FREQUENCY[MAX] = Power stage dependent VM_SWITCHING_FREQUENCY[MIN] = 0 This variable maximum is used by the <i>Minimum Switching Frequency</i> (05.038) to define the minimum frequency limit used if the inverter thermal model is actively reducing the switching frequency due to temperature. Note that parameter <i>Maximum Switching Frequency</i> (05.018) takes priority over parameter <i>Minimum Switching Frequency</i> (05.038). The actual minimum switching frequency limit used is the lower of <i>Maximum Switching Frequency</i> (05.018) and <i>Minimum Switching Frequency</i> (05.038).

 

VM_MOTOR1_0	Range applied to current limit parameters (motor 1)
Units	%
Range of [MIN]	0.0
Range of [MAX]	0.0 to 1000.0
	I _{Trated} I _{Rated}
	VM_MOTOR1_CURRENT_LIMIT[MAX] is dependent on the drive rating and motor set-up parameters. VM_MOTOR1_CURRENT_LIMIT[MIN] = 0.0 Open-loop VM_MOTOR1_CURRENT_LIMIT[MAX] = (
	VM_MOTOR1_CURRENT_LIMIT[MAX] = (I _{Tlimit} / I _{Trated}) x 100 % Where: I _{Tlimit} = I _{MaxRef} x cos(sin ⁻¹ (I _{Mrated} / I _{MaxRef}))
	I _{Mrated} = Pr 05.007 sin φ
	I _{Trated} = Pr 05.007 x cos φ
	$\cos \phi = \text{Pr } 05.010$
	I _{MaxRef} is 0.7 x Pr 11.061 when the motor rated current set in Pr 05.007 is less than or equal to Pr 11.032 (i.e. Heavy duty), otherwise it is the lower of 0.7 x Pr 11.061 or 1.1 x Pr 11.060 (i.e. Normal Duty).
Definition	
	1
	Where: Motor rated current is given by Pr 05.007 PF is motor rated power factor given by Pr 05.010 (MOTOR2_CURRENT_LIMIT_MAX is calculated from the motor map 2 parameters) The Maximum current is (1.5 x Rated drive current) when the rated current set by Pr 05.007 is less than or equal to the Maximum Heavy Duty current rating specified in Pr 11.032, otherwise it is (1.1 x Maximum motor rated current).
	For example, with a motor of the same rating as the drive and a power factor of 0.85, the maximum current limit is 165.2%.
	The rated active and rated magnetising currents are calculated from the power factor (Pr 05.010) and motor rated current (Pr 05.007) as:
	rated active current = power factor x motor rated current
	rated magnetising current = $\sqrt{(1 - \text{power factor}^2)} \times \text{motor rated current}$
	RFC-A VM_MOTOR1_CURRENT_LIMIT[MAX] = (I _{Tlimit} / I _{Trated}) x 100 % Where:
	$I_{Tlimit} = I_{MaxRef} \times cos(sin^{-1}(I_{Mrated} / I_{MaxRef}))$ $I_{Mrated} = Pr 05.007 \times sin \phi_1$
	$I_{\text{Trated}} = \text{Pr } 05.007 \times \cos \phi_1$
	$\phi_1 = \cos^{-1}$ (Pr 05.010) + ϕ_2 . ϕ_1 is calculated during an autotune. See the variable minimum / maximum calculations in the <i>Parameter Reference Guide</i> for more information regarding ϕ_2 . I _{MaxRef} is 0.9 x Pr 11.061 when the motor rated current set in Pr 05.007 is less than or equal to Pr 11.032 (i.e. Heavy duty), otherwise it is the lower of 0.9 x Pr 11.061 or 1.1 x Pr 11.060 (i.e. Normal Duty).

					1						1
Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced Diagnostics	III Licting
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	UL Listing

VM_MOTOR2_	CURRENT_LIMIT	Range applied to current limit parameters (motor 2)
Units	%	
Range of [MIN]	0.0	
Range of [MAX]	0.0 to 1000.0	
Definition	VM_MOTOR2_CURRENT Refer to VM_MOTOR1_C	Γ_LIMIT[MAX] is dependent on the drive rating and motor set-up parameters. Γ_LIMIT[MIN] = 0.0 URRENT_LIMIT for more information. For VM_MOTOR2_CURRENT_LIMIT[MAX] use 6.007 and Pr 21.010 instead of Pr 05.010.

VM_NEGAT	TIVE_REF_CLAMP1	Limits applie	ed to the negative frequency clamp (motor	1)				
Units	Hz	Hz						
Range of [MIN]	-550.00 to 0.00	550.00 to 0.00						
Range of [MAX]	0.00 to 550.00	0.00 to 550.00						
	This variable maximum/minimum defines the range of the negative frequency clamp associated with motor m (Minimum Speed (01.007)). The minimum and maximum are affected by the settings of the Negative Reference Enable (01.010) and Maximum Speed (01.006) as shown in the table bel							
Definition	Reference Clamp Enable (01.008)	Reference Enable (01.010)	VM_NEGATIVE_REF_ CLAMP1[MIN]	VM_NEGATIVE_REF_ CLAMP1[MAX]				
	0	0	0.00	Pr 01.006				
	0	0 1 0.00		0.00				
	1	X	-VM_POSITIVE_REF_CLAMP[MAX]	0.00				

VM_NEGATIVE	REF_CLAMP2 Limits applied to the negative frequency clamp (motor 2)
Units	Hz
Range of [MIN]	-550.00 to 0.00
Range of [MAX]	0.00 to 550.00
Definition	This variable maximum/minimum defines the range of the negative frequency clamp associated with motor map 2 (M2 Minimum Speed (21.002)). It is defined in the same way as VM_NEGATIVE_REF_CLAMP1 except that the M2 Maximum Speed (21.001) is used instead of Maximum Speed (01.006).

VM_POSITIVE	REF_CLAMP	Limits applied to the positive frequency reference clamp
Units	Hz	
Range of [MIN]	0.00	
Range of [MAX]	550.00	
Definition	VM_POSITIVE_REF_CLA which in turn limit the refer	MP[MAX] defines the range of the positive reference clamp, <i>Maximum Speed</i> (01.006), ences.

	VM_POWER	Range applied to parameters that either set or display power
Units	kW	
Range of [MIN]	-9999.99 to 0.00	
Range of [MAX]	0.00 to 9999.99	
Definition	with maximum AC output	ng dependent and is chosen to allow for the maximum power that can be output by the drive voltage, at maximum controlled current and unity power factor. (VM_AC_VOLTAGE[MAX] x VM_DRIVE_CURRENT[MAX] / 1000 _POWER[MAX]

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing
--------------------	---------------------	-------------------------	-------------------------	--------------------	------------------	-------------------	--------------	------------------	----------------	---------------------	-------------	------------

VM_RATED	CURRENT	Range applied to rated current parameters
Units	A	
Range of [MIN]	0.00	
Range of [MAX]	0.00 to 9999.99	
Definition	VM_RATED_CURRENT [M VM_RATED_CURRENT [M	IAX] = Maximum Rated Current (11.060) and is dependent on the drive rating. IIN] = 0.00

VM_SPEED_FREQ_REF		Range applied to the frequency reference	Range applied to the frequency reference parameters					
Units	Hz	-lz						
Range of [MIN]	-550.00 to 0.00							
Range of [MAX]	0.00 to 550.00							
	This variable minimum/maximum is applied throughout the frequency and speed reference system so that the references can vary in the range from the minimum to maximum clamps.							
	Negative Reference Clamp Enable (01.008)	VM_SPEED_FREQ_REF[MAX] if Select Motor 2 Parameters (11.045) = 0	VM_SPEED_FREQ_REF[MAX] if Select Motor 2 Parameters (11.045) = 1					
Definition	0	Maximum Speed (01.006)	M2 Maximum Speed (21.001)					
	1	Maximum Speed (01.006) or Minimum Speed (01.007) whichever the larger	M2 Maximum Speed (21.001) or M2 Minimum Speed (21.002) whichever the larger					
	VM_SPEED_FREQ	_REF[MIN] = -VM_SPEED_FREQ_REF[MAX].						

VM_SPEED_FREQ	REF_UNIPOLAR Unipolar version of VM_SPEED_FREQ_REF
Units	Hz
Range of [MIN]	0.00
Range of [MAX]	0.00 to 550.00
Definition	VM_SPEED_FREQ_REF_UNIPOLAR[MAX] = VM_SPEED_FREQ_REF[MAX]. VM_SPEED_FREQ_REF_UNIPOLAR[MIN] = 0.00

VM_SPEED_FR	EQ_USER_REFS	Range applied t	o analog reference parameters					
Units	Hz	Hz						
Range of [MIN]	-550.00 to 550.00	-550.00 to 550.00						
Range of [MAX]	0.00 to 550.00							
	This variable maximum is applied to Analog Reference 1 (01.036), Analog Reference 2 (01.037) and Keypad Reference (01.017). The maximum applied to these parameters is the same as other frequency reference parameters. VM_SPEED_FREQ_USER_REFS [MAX] = VM_SPEED_FREQ_REF[MAX] However the minimum is dependent on Negative Reference Clamp Enable (01.008) and Bipolar Reference En (01.010).							
Definition	Negative Reference Clamp Enable (01.008)	Bipolar Reference Enable (01.010)	VM_SPEED_FREQ_USER_REFS[MIN]					
	0 If Select Motor 2 Parameters (11.045) = 0, Minimum Speed (0 otherwise M2 Minimum Speed (21.002)							
	0	1	-VM_SPEED_FREQ_REF[MAX]					
	1	1 0 0.00						
	1	1	-VM_SPEED_FREQ_REF[MAX]					

VM_SUPPLY	Range applied to the supply loss threshold
Units	V
Range of [MIN]	0 to 1150
Range of [MAX]	0 to 1150
Definition	VM_SUPPLY_LOSS_LEVEL[MAX] = VM_DC_VOLTAGE_SET[MAX] VM_SUPPLY_LOSS_LEVEL[MIN] is drive voltage rating dependent. See Table 11-4

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media		Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISTING

VM_TOF	RQUE_CURRENT Range applied	to torque and torque producing current parameters
Units	%	
Range of [MIN]	-1000.0 to 0.0	
Range of [MAX]	0.0 to 1000.0	
	Select Motor 2 Parameters (11.045)	VM_TORQUE_CURRENT[MAX]
Definition	0	VM_MOTOR1_CURRENT_LIMIT[MAX]
	1	VM_MOTOR2_CURRENT_LIMIT[MAX]
	VM_TORQUE_CURRENT[MIN] = -VM_TO	DRQUE_CURRENT[MAX]

VM_TORQUE_CU	Unipolar version of VM_TORQUE_CURRENT
Units	%
Range of [MIN]	0.0
Range of [MAX]	0.0 to 1000.0
Definition	VM_TORQUE_CURRENT_UNIPOLAR[MAX] = VM_TORQUE_CURRENT[MAX] VM_TORQUE_CURRENT_UNIPOLAR[MIN] = 0.0 User Current Maximum Scaling (04.024) defines the variable maximum/minimums VM_USER_CURRENT which is applied to Percentage Load (04.020) and Torque Reference (04.008). This is useful when routing these parameters to an analog output as it allows the full scale output value to be defined by the user. This maximum is subject to a limit of MOTOR1_CURRENT_LIMIT or MOTOR2_CURRENT_LIMIT depending on which motor map is currently active. The maximum value (VM_TORQUE_CURRENT_UNIPOLAR [MAX]) varies between drive sizes with default parameters loaded. For some drive sizes the default value may be reduced below the value given by the parameter range limiting.

VM_USER	_CURRENT	Range applied to torque reference and percentage load parameters with one decimal place
Units	%	
Range of [MIN]	-1000.0 to 0.0	
Range of [MAX]	0.0 to 1000.0	
Definition	VM_USER_CURRENT[M] User Current Maximum So applied to Percentage Loa an analog output as it allow MOTOR1_CURRENT_LIN The maximum value (VM_	AX] = User Current Maximum Scaling (04.024) IN] = -VM_USER_CURRENT[MAX] caling (04.024) defines the variable maximum/minimums VM_USER_CURRENT which is id (04.020) and Torque Reference (04.008). This is useful when routing these parameters to ws the full scale output value to be defined by the user. This maximum is subject to a limit of MIT or MOTOR2_CURRENT_LIMIT depending on which motor map is currently active. TORQUE_CURRENT_UNIPOLAR [MAX]) varies between drive sizes with default time drive sizes the default value may be reduced below the value given by the parameter

Table 11-4 Voltage ratings dependant values


Variable min/max			Voltage level																						
variable min/max	100 V	200 V	400 V	575 V	690 V																				
VM_DC_VOLTAGE_SET(MAX]	40	00	800	955	1150																				
VM_DC_VOLTAGE(MAX] Frame 1 to 4	5	10	870	870 N/A																					
VM_DC_VOLTAGE(MAX] Frame 5 to 9	4	15	830	990	1190																				
VM_AC_VOLTAGE_SET(MAX] Frame 1 to 4	24	40	480	N/A	N/A																				
VM_AC_VOLTAGE_SET(MAX] Frame 5 to 9	26	35	530	635	765																				
VM_AC_VOLTAGE[MAX]	325		325		325		325		325		325		325		325		325		325		325		650	780	930
VM_STD_UNDER_VOLTS[MIN]	17	75	330	435	435																				
VM_SUPPLY_LOSS_LEVEL{MIN]	20	05	410	540	540																				


Safety Product Mechanical Electrical Getting Basic Foundation Information Info

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontinoination	NV Media	Onboard	Advanced		III I intima
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	agnostics	UL Listing

11.2 Menu 1: Frequency reference

Figure 11-1 Menu 1 logic diagram

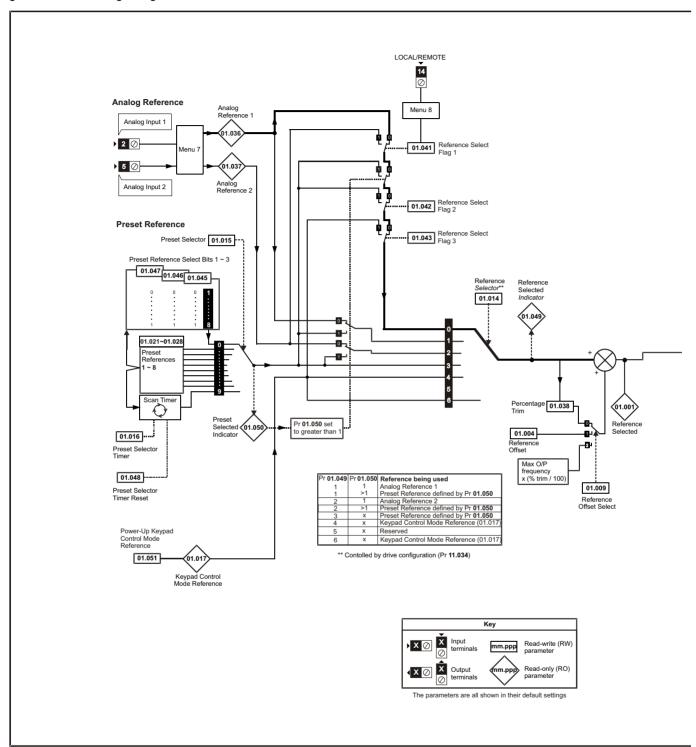

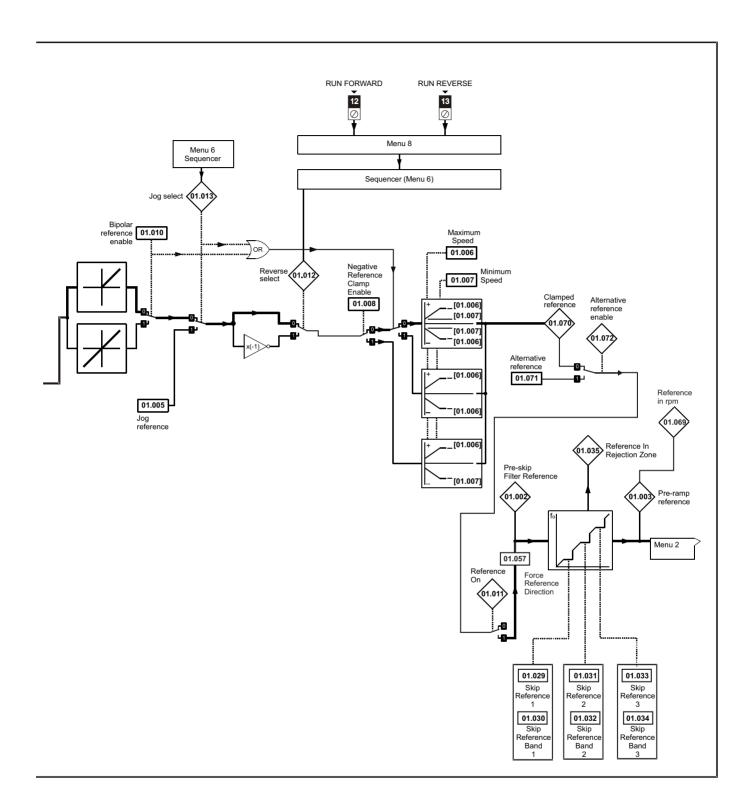

	P	Range	· (\$)	Defau	ılt (⇔)			_			
	Parameter	OL	RFC-A	OL	RFC-A			Тур	е		
01.001	Reference Selected	0.00 to Pr 0	1.006 Hz			RO	Num	ND	NC	PT	
01.002	Pre-skip Filter Reference	0.00 to Pr 0	1.006 Hz			RO	Num	ND	NC	PT	
01.003	Pre-ramp Reference	0.00 to Pr 0	11.006 Hz			RO	Num	ND	NC	PT	
01.004	Reference Offset	0.00 to Pr 0	11.006 Hz	0.00	0 Hz	RW	Num				US
01.005	Jog Reference	0.00 to 30	0.00 Hz	1.50	0 Hz	RW	Num				US
01.006	Maximum Speed	0.00 to 55	0.00 Hz	50Hz: 6	RW	Num				US	
01.007	Minimum Speed	0.00 to Pr 0	11.006 Hz	0.00	0 Hz	RW	Num				US
01.008	Negative Reference Clamp Enable	Off (0) or	On (1)	Off	f (0)	RW	Bit				US
01.009	Reference Offset Select	0 to	2	(0	RW	Num				US
01.010	Bipolar Reference Enable	Off (0) or	On (1)	Off	f (0)	RW	Bit				US
01.011	Reference On	Off (0) or	On (1)			RO	Bit	ND	NC	PT	
01.012	Reverse Select	Off (0) or	On (1)			RO	Bit	ND	NC	PT	
01.013	Jog Select	Off (0) or	On (1)			RO	Bit	ND	NC	PT	
01.014	Reference Selector	A1.A2 (0), A1.Pr (1), A PAd (4), rES (5		A1.A	2 (0)*	RW	Txt				US
01.015	Preset Selector	0 to	9		0	RW	Num				US
01.016	Preset Selector Timer	0 to 40	0.0 s	10	.0s	RW	Num				US
01.017	Keypad Control Mode Reference	VM_SPEED_FREQ	USER_REFS Hz	0.00	0 Hz	RO	Num		NC	PT	PS
01.021	Preset Reference 1	0.00 to Pr 0	1.006 Hz	0.00	0 Hz	RW	Num				US
01.022	Preset Reference 2	0.00 to Pr 0	1.006 Hz	0.00	0 Hz	RW	Num				US
01.023	Preset Reference 3	0.00 to Pr 0	11.006 Hz	0.00	0 Hz	RW	Num				US
01.024	Preset Reference 4	0.00 to Pr 0	11.006 Hz	0.00	0 Hz	RW	Num				US
01.025	Preset Reference 5	0.00 to Pr 0	11.006 Hz	0.00	0 Hz	RW	Num				US
01.026	Preset Reference 6	0.00 to Pr 0			0 Hz	RW	Num				US
01.027	Preset Reference 7	0.00 to Pr 0			0 Hz	RW	Num				US
01.028	Preset Reference 8	0.00 to Pr 0			0 Hz	RW	Num				US
01.029	Skip Reference 1	0.00 to 55			0 Hz	RW	Num				US
01.030	Skip Reference Band 1	0.00 to 25			0 Hz	RW	Num				US
01.031	Skip Reference 2	0.00 to 55			0 Hz	RW	Num				US
01.032	Skip Reference Band 2	0.00 to 35			0 Hz	RW	Num				US
01.032	Skip Reference 3	0.00 to 25			0 Hz	RW	Num				US
01.034	Skip Reference Band 3	0.00 to 35			0 Hz	RW	Num				US
01.034	Reference In Rejection Zone	Off (0) or		0.50	0 1 12	RO	Bit	ND	NC	PT	03
01.036	Analog Reference 1	VM_SPEED_FREQ	, ,	0.00	0 Hz	RO		ND	NC	FI	
01.036	Analog Reference 1 Analog Reference 2	VM_SPEED_FREQ			0 Hz		Num				
	Percentage Trim					RO	Num		NC		
01.038	•	± 100.0			0 %	RW	Num		NC		
01.041	Reference Select Flag 1	Off (0) or	` '		f (0)	RW	Bit		NC		
	Reference Select Flag 2	Off (0) or			f (0)	RW	Bit		NC		
	Reference Select Flag 3	Off (0) or	, ,		f (0)	RW	Bit		NC		
01.045	Preset Select Flag 1	Off (0) or			F (0)	RW	Bit		NC		
01.046	Preset Select Flag 2	Off (0) or	` '		f (0)	RW	Bit		NC		
01.047	Preset Select Flag 3	Off (0) or			f (0)	RW	Bit		NC		
01.048	Preset Selector Timer Reset	Off (0) or	` '	Off	f (0)	RW	Bit	L	NC PT		
01.049	Reference Selected Indicator	1 to				RO	Num	ND			
01.050	Preset Selected Indicator	1 to	8			RO	Num	ND	NC	PT	
01.051	Power-up Keypad Control Mode Reference	rESEt (0), LASt (1), PrESEt (2)		rESI	Et (0)	RW	Txt				US
01.057	Force Reference Direction	NonE (0), For (1), rEv (2)			NonE (0)						
01.069	Reference in rpm	± 33000.0 rpm				RO	Num	ND	NC	PT	
01.070	Clamped Reference	0.00 to Pr 01.006 Hz				RO	Num	ND	NC	PT	
01.071	Alternative Reference	0.00 to Pr 0	1.006 Hz	0.00	0 Hz	RW	Num		NC	PT	
01.072	Alternative Reference Enable	Off (0) or	On (1)			RO	Bit	ND	NC	PT	

^{*} Keypad mode for the *Unidrive M201*.


RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination


Safety Product Mechanical Electrical Getting Basic Formation installation installation installation started parameters motor Optimization Optimization NV Media Card PLC Place Parameters Diagnostics UL Listing

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	III Liotina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

11.3 Menu 2: Ramps

Figure 11-2 Menu 2 logic diagram

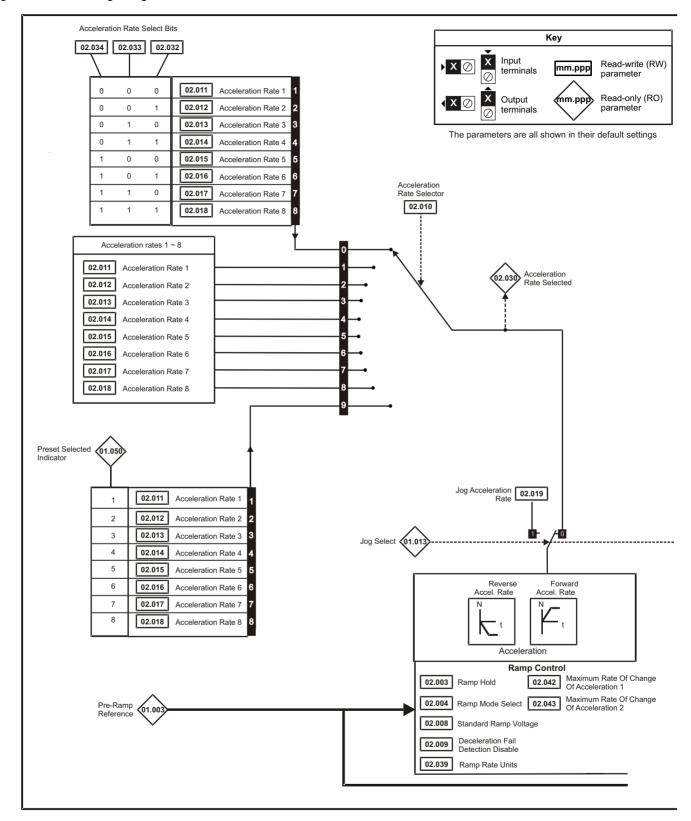

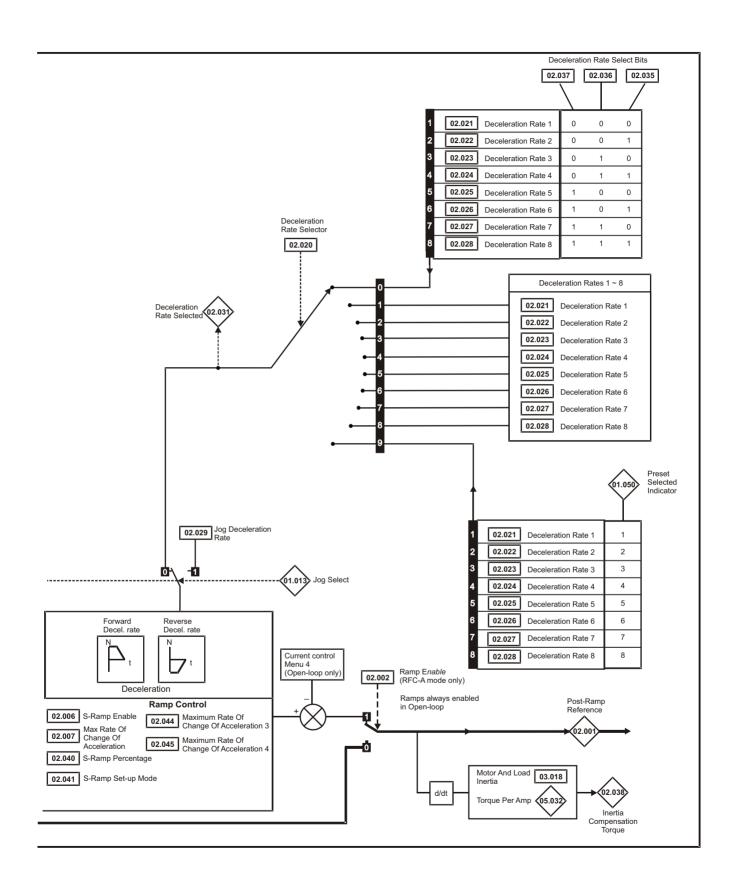


	P	Rang	je (\$)	Defau	t (⇔)			_			\neg
	Parameter	OL	RFC-A	OL	RFC-A	1		Тур	е		
02.001	Post Ramp Reference	0.00 to Pr	01.006 Hz			RO	Num	ND	NC	PT	
02.002	Ramp Enable		Off (0) or On (1)		On (1)	RW	Bit				US
02.003	Ramp Hold	Off (0) o	or On (1)	Off	(0)	RW	Bit				US
02.004	Ramp Mode Select	FASt (0), Std (1), Std	d.bSt (2), FSt.bSt (3)	Std	(1)	RW	Txt				US
02.005	Disable Ramp Output		Off (0) or On (1)		Off (0)	RW	Bit				US
02.006	S Ramp Enable	Off (0) o	or On (1)	Off	(0)	RW	Bit				US
02.007	Max Rate Of Change Of Acceleration	0.0 to 300.	0 s²/100Hz	3.1 s²/1	00 Hz	RW	Num				US
02.008	Standard Ramp Voltage	0 to 1	150 V	110 V driv 200 V driv 400 V drive 5 400 V drive 6 575 V driv 690 V drive	e: 375 V 0 Hz: 750 V 0 Hz: 775 V e: 895 V	RW	Num		RA		US
02.009	Deceleration Fail Detection Disable	` '	or On (1)	Off	. ,	RW	Bit				US
02.010	Acceleration Rate Selector	0 t	o 9	0		RW	Num				US
02.011	Acceleration Rate 1					RW	Num				US
02.012	Acceleration Rate 2]				RW	Num				US
02.013	Acceleration Rate 3					RW	Num				US
02.014	Acceleration Rate 4	0.0 to 32000	0.0 s/100 Hz	5.0 s/1	00 Hz	RW	Num				US
02.015	Acceleration Rate 5	0.0 10 02000	0. 100 112	0.0 3/10		RW	Num				US
02.016	Acceleration Rate 6					RW	Num				US
02.017	Acceleration Rate 7	1				RW	Num				US
02.018	Acceleration Rate 8	1				RW	Num				US
02.019	Jog Acceleration Rate	0.0 to 32000	0.0 s/100 Hz	0.2 s/1	00 Hz	RW	Num				US
02.020	Deceleration Rate Selector	0 t	o 9	0		RW	Num				US
02.021	Deceleration Rate 1					RW	Num				US
02.022	Deceleration Rate 2	1				RW	Num				US
02.023	Deceleration Rate 3	1				RW	Num				US
02.024	Deceleration Rate 4	0.0 to 2200	0.0 s/100 Hz	10.0 s/1	00 H-	RW	Num				US
02.025	Deceleration Rate 5	0.0 (0 3200)	0.0 5/100 112	10.0 5/1	00 112	RW	Num				US
02.026	Deceleration Rate 6	1				RW	Num				US
02.027	Deceleration Rate 7	1				RW	Num				US
02.028	Deceleration Rate 8	1				RW	Num				US
02.029	Jog Deceleration Rate	0.0 to 32000	0.0 s/100 Hz	0.2 s/1	00 Hz	RW	Num				US
02.030	Acceleration Rate Selected	0 t	0 8			RO	Num	ND	NC	PT	
02.031	Deceleration Rate Selected	0 t	o 8			RO	Num	ND	NC	PT	
02.032	Acceleration Rate Select Bit 0	Off (0) o	or On (1)	Off	(0)	RW	Bit		NC		
02.033	Acceleration Rate Select Bit 1	Off (0) o	or On (1)	Off	(0)	RW	Bit		NC		
02.034	Acceleration Rate Select Bit 2	Off (0) o	or On (1)	Off	(0)	RW	Bit		NC		
02.035	Deceleration Rate Select Bit 0	Off (0) o	or On (1)	Off		RW	Bit		NC		
02.036	Deceleration Rate Select Bit 1	Off (0) o	or On (1)	Off	(0)	RW	Bit		NC		
02.037	Deceleration Rate Select Bit 2	Off (0) o	or On (1)	Off	(0)	RW	Bit		NC		
02.038	Inertia Compensation Torque		± 1000.0 %			RO	Num	ND	NC	PT	
02.039	Ramp Rate Units	`	000 Hz)	0 (s/10	0 Hz)	RW	Num				US
02.040	S Ramp Percentage	0.0 to	50.0 %	0.0	%	RW	Num				US
02.041	S Ramp Set-up Mode	0 t	02	0		RW	Num				US
02.042	Maximum Rate Of Change Of Acceleration 1	0.0 to 300.	0 s²/100 Hz	0.0 s²/1	00 Hz	RW	Num				US
02.043	Maximum Rate Of Change Of Acceleration 2	0.0 to 300.	0 s²/100 Hz	0.0 s²/1	00 Hz	RW	Num				US
02.044	Maximum Rate Of Change Of Acceleration 3	0.0 to 300.	0 s²/100 Hz	0.0 s²/1	00 Hz	RW	Num				US
02.045	Maximum Rate Of Change Of Acceleration 4	0.0 to 300.	0 s²/100 Hz	0.0 s²/1	00 Hz	RW	Num				US

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	OL LISTING


11.4 Menu 3: Frequency control

Figure 11-3 Menu 3 Open-loop logic diagram

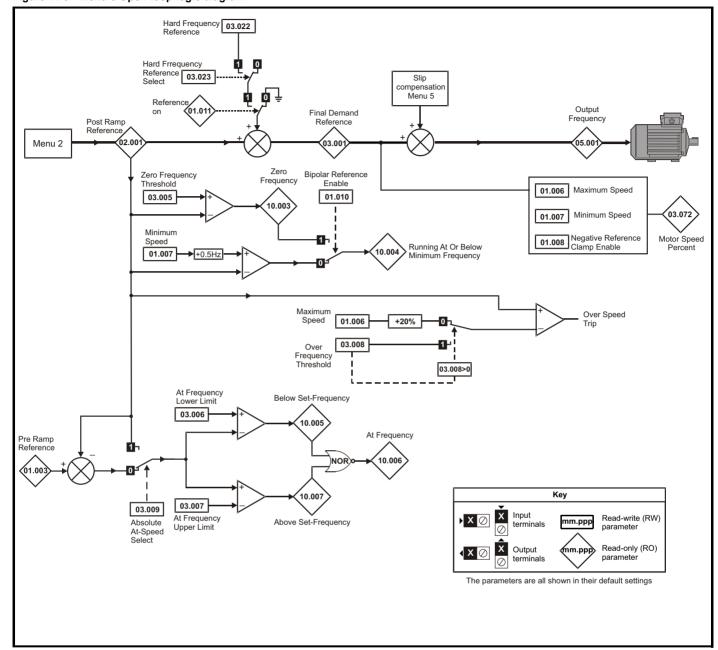


Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	III Liotina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

Figure 11-4 Menu 3 RFC-A logic diagram

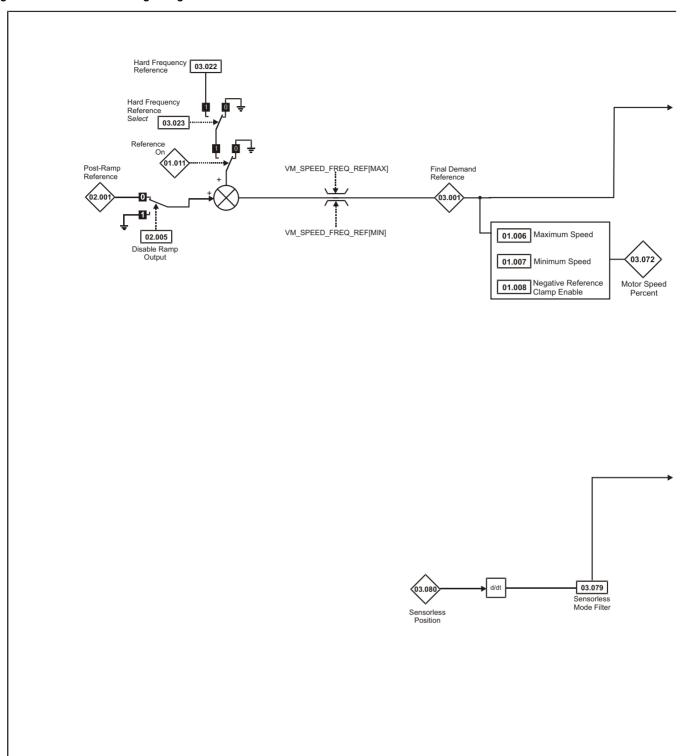


Safety Electrical Getting Basic NV Media Product Mechanical Running the Onboard Advanced **UL** Listing Optimization Diagnostics information information installation installation started parameters motor Card PLC parameters

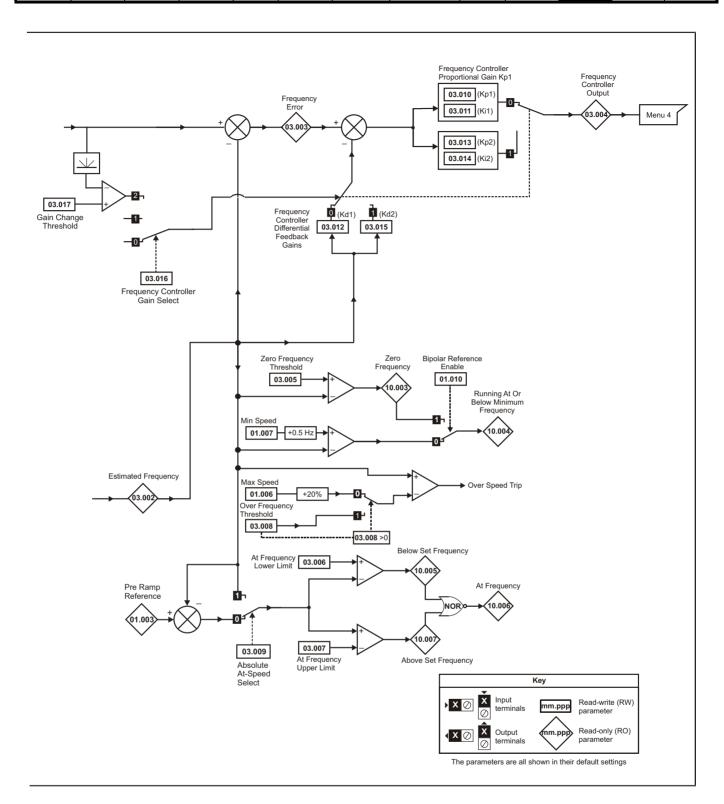

NV Media Safety Product Mechanical Electrical Getting Basic Running the Onboard Advanced UL Listing Diagnostics Optimization information information installation installation started parameters moto Card PLC parameters

Figure 11-5 Menu 3 logic diagram

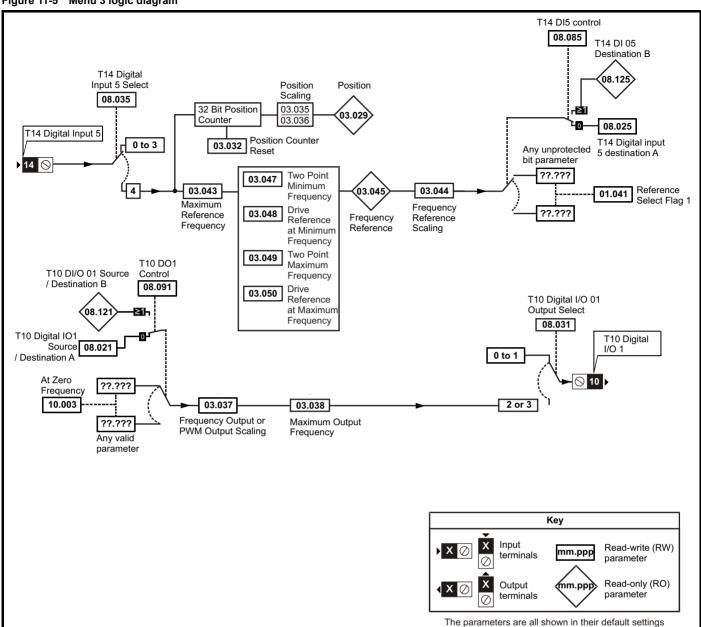

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	III Lieting
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing


	Parameter		Range (‡)	Defau	ılt (⇔)			т			
	Parameter	OL	RFC-A	OL	RFC-A			Тур	oe		
03.001	Final Demand Reference		Pr 01.006 or Pr 01.007 to Pr 01.006 Hz			RO	Num	ND	NC	PT	FI
03.002	Estimated Frequency		-Pr 01.006 to Pr 01.006 or Pr 01.007 to Pr 01.006 Hz			RO	Num	ND	NC	PT	FI
03.003	Frequency Error		-Pr 01.006 to Pr 01.006 or Pr 01.007 to Pr 01.006 Hz			RO	Num	ND	NC	PT	FI
03.004	Frequency Controller Output		VM_TORQUE_ CURRENT %			RO	Num	ND	NC	PT	FI
03.005	Zero Frequency Threshold	0.0	0 to 20.00 Hz	2.00) Hz	RW	Num				US
03.006	At Frequency Lower Limit	0.0	0 to 550.00 Hz	1.00) Hz	RW	Num				US
03.007	At Frequency Upper Limit	0.0	0 to 550.00 Hz	1.00) Hz	RW	Num				US
03.008	Over Frequency Threshold	0.0	0 to 550.00 Hz	0.00) Hz	RW	Num				US
03.009	Absolute At Frequency Select	Of	f (0) or On (1)	Off	(0)	RW	Bit				US
03.010	Frequency Controller Proportional Gain Kp1		0.000 to 200.000 s/rad		0.100 s/rad	RW	Num				US
03.011	Frequency Controller Integral Gain Ki1		0.00 to 655.35 s²/rad		0.10 s²/rad	RW	Num				US
03.012	Frequency Controller Differential Feedback Gain Kd1		0.00000 to 0.65535 1/rad		0.00000 1/ rad	RW	Num				US
03.013	Frequency Controller Proportional Gain Kp2		0.000 to 200.000 s/rad		0.100 s/rad	RW	Num				US
03.014	Frequency Controller Integral GainKi2		0.00 to 655.35 s²/rad		0.10 s²/rad	RW	Num				US
03.015	Frequency Controller Differential Feedback Gain Kd2		0.00000 to 0.65535 1/rad		0.00000 1/ rad	RW	Num				US
03.016	Frequency Controller Gain Select		0 to 2		0	RW	Num				US
03.017	Gain Change Threshold		0.00 to 550.00 Hz		0.00 Hz	RW	Num				FI
03.018	Motor and Load Inertia		0.00 to 1000.00 kgm ²		0.00 kgm²	RW	Num				US
03.022	Hard Frequency Reference	0.00	to Pr 01.006 Hz	0.00	Hz	RW	Num				US
03.023	Hard Frequency Reference Select	Of	f (0) or On (1)	Off	(0)	RW	Bit				US
03.029	Position (T14)		0 to 65535			RO	Num	ND	NC	PT	FI
03.032	Position Counter Reset (T14)	Of	f (0) or On (1)	Off	(0)	RW	Bit		NC		
03.035	Position Scaling Numerator (T14)	0.	000 to 1.000	1.0	000	RW	Num				US
03.036	Position Scaling Denominator (T14)	0.0	00 to 100.000	1.0	000	RW	Num				US
03.037	Frequency Output or PWM Output Scaling (T10)	0.	000 to 4.000	1.0	000	RW	Num				US
03.038	Maximum Output Frequency (T10)	1 (0), 2 (1), 5 (2), 10 (3) kHz	5 (2)	kHz	RW	Txt				US
03.042	Frequency Input High Precision	Of	f (0) or On (1)	Off	(0)	RW	Bit				US
03.043	Maximum Reference Frequency (T14)	0.00	to 100.00 kHz	10.00) kHz	RW	Num				US
03.044	Frequency Reference Scaling (T14)	0.	000 to 4.000	1.0	000	RW	Num				US
03.045	Frequency Reference (T14)	0.0	0 to 100.00 %			RO	Num	ND	NC	PT	FI
03.047	Two Point Minimum Frequency (T14)	0.0	0 to 100.00 %	0.0	0 %	RW	Num				US
03.048	Drive Reference at Minimum Frequency (T14)		0 to 100.00 %		0 %	RW	Num				US
03.049	Two Point Maximum Frequency (T14)	0.0	0 to 100.00 %	100.	00 %	RW	Num				US
03.050	Drive Reference at Maximum Frequency (T14)	0.00 to 100.00 %		100.	00 %	RW	Num				US
03.072	Motor Speed Percent	rcent ± 150.0 %				RO		ND	NC	PT	FI
03.079	Sensorless Mode Filter		4 (0), 5 (1), 6 (2), 8 (3), 12 (4), 20 (5) ms		4 (0) ms	RW	Txt				US
03.080	Sensorless Position		0 to 65535			RO	Num	ND	NC	PT	

RV	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
NE	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

11.5 Menu 4: Torque and current control

Figure 11-6 Menu 4 Open loop logic diagram

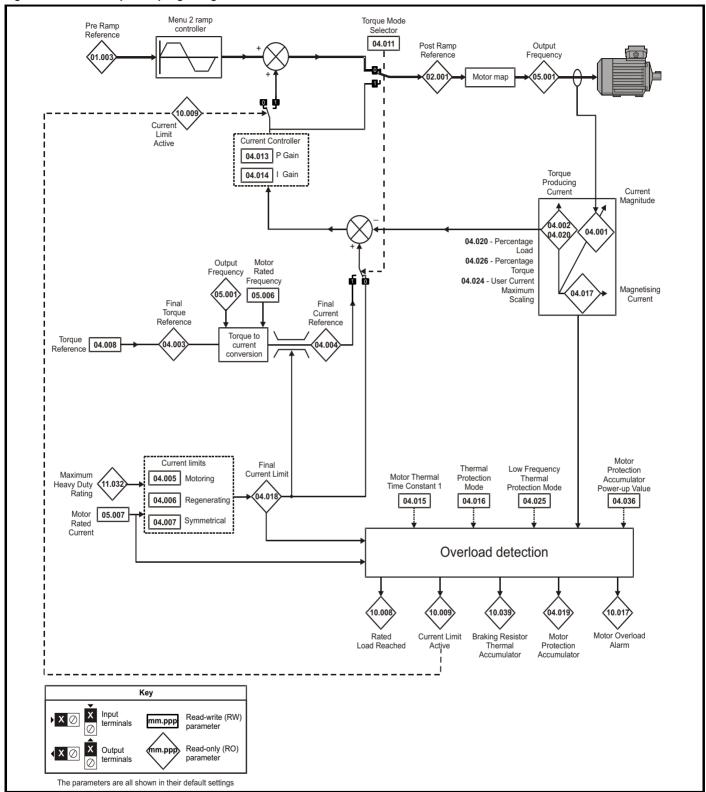


 


Figure 11-7 Menu 4 RFC-A logic diagram

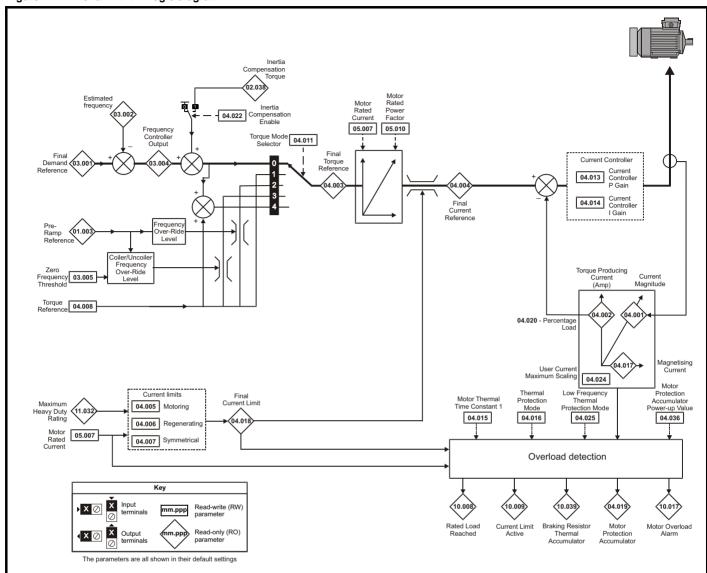

information information installation installation started parameters motor Optimization Card PLC parameters Diagnostics OLLis	Safety information	Product information	Mechanical installation	Electrical installation	Getting started		Running the motor	Optimization	NV Media Card	DI C	Advanced parameters	Diagnostics	UL Listing
---	--------------------	---------------------	-------------------------	-------------------------	--------------------	--	-------------------	--------------	------------------	------	---------------------	-------------	------------

	Paramatan.	Range	(\$)	Defau	lt (⇔)			T	_		
	Parameter	OL	RFC-A	OL	RFC-A			Тур	e		
04.001	Current Magnitude	0 to Drive Maxim	um Current A			RO	Num	ND	NC	PT	FI
04.002	Torque Producing Current	± Drive Maximu	m Current A			RO	Num	ND	NC	PT	FI
04.003	Final Torque Reference	VM_TORQUE_0	CURRENT %			RO	Num	ND	NC	PT	FI
04.004	Final Current Reference	VM_TORQUE_0	CURRENT %			RO	Num	ND	NC	PT	FI
04.005	Motoring Current Limit	0.0 to VM_MOTOR1_C	CURRENT_LIMIT %	165.0 %*	175.0 %**	RW	Num		RA		US
04.006	Regenerating Current Limit	0.0 to VM_MOTOR1_C	CURRENT_LIMIT %	165.0 %*	175.0 %**	RW	Num		RA	US	
04.007	Symmetrical Current Limit	0.0 to VM_MOTOR1_C	CURRENT_LIMIT %	165.0 %*	175.0 %**	RW	Num		RA		US
04.008	Torque Reference	VM_USER_CL	JRRENT %	0.0	%	RW	Num				US
04.011	Torque Mode Selector	0 to 1	0 to 5	C		RW	Num				US
04.013	Current Controller Kp Gain	0.00 to 40	00.00	20.	00	RW	Num				US
04.014	Current Controller Ki Gain	0.000 to 6	00.000	40.0	000	RW	Num				US
04.015	Motor Thermal Time Constant 1	1 to 300	00 s	179	9 s	RW	Num				US
04.016	Thermal Protection Mode	0 (0) to	3 (3)	0 (0)	RW	Bin				US
04.017	Magnetising Current	0 to Drive Maxim	um Current A			RO	Num	ND	NC	PT	FI
04.018	Final Current Limit	VM_TORQUE_0	CURRENT %			RO	Num	ND	NC	PT	
04.019	Motor Protection Accumulator	0.0 to 10	0.0 %			RO	Num	ND	NC	PT	PS
04.020	Percentage Load	VM_USER_CU	JRRENT %			RO	Num	ND	NC	PT	FI
04.022	Inertia Compensation Enable		Off (0) or On (1)		Off (0)	RW	Bit				US
04.024	User Current Maximum Scaling	0.0 t VM_TORQUE_CURRE	-	165.0 %*	175.0 %**	RW	Num		RA		US
04.025	Low Frequency Thermal Protection Mode	0 to	1	C		RW	Num				US
04.026	Percentage Torque	VM_USER_ CURRENT %			_	RO	Num	ND	NC	PT	FI
04.036	Motor Protection Accumulator Power- up Value	Pr.dn (0), 0 (1)	, rEAL t (2)	Pr.dr	າ (0)	RW	Txt				US
04.041	User Over Current Trip Level	0 to 10	0 %	100	1 %	RW	Num		RA		US

^{*} For size 9 the default is 141.9 %


^{**} For size 9 the default is 150.0 %

R\	/ Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
N	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

1	Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	ioanostico	UL Listina
	information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	iagnostics	OL LISTING


11.6 Menu 5: Motor control

Figure 11-8 Menu 5 Open-loop logic diagram

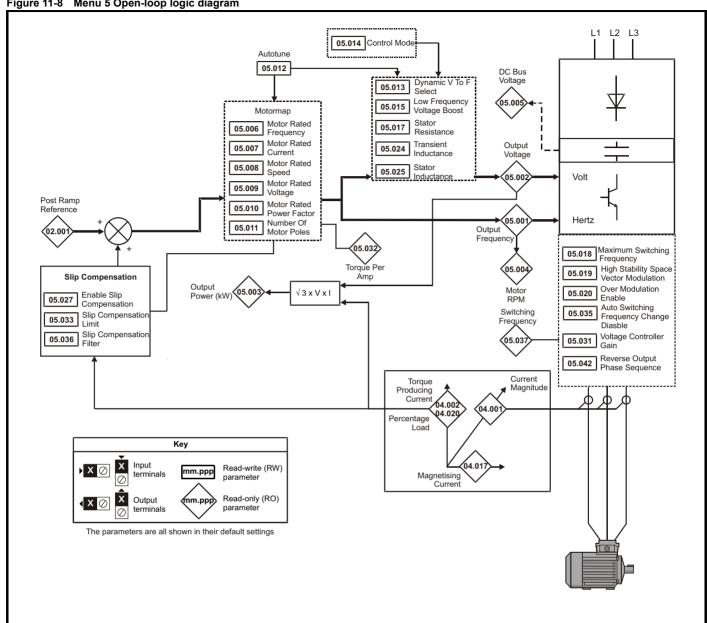


Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	III Liotina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

Figure 11-9 Menu 5 RFC-A, logic diagram

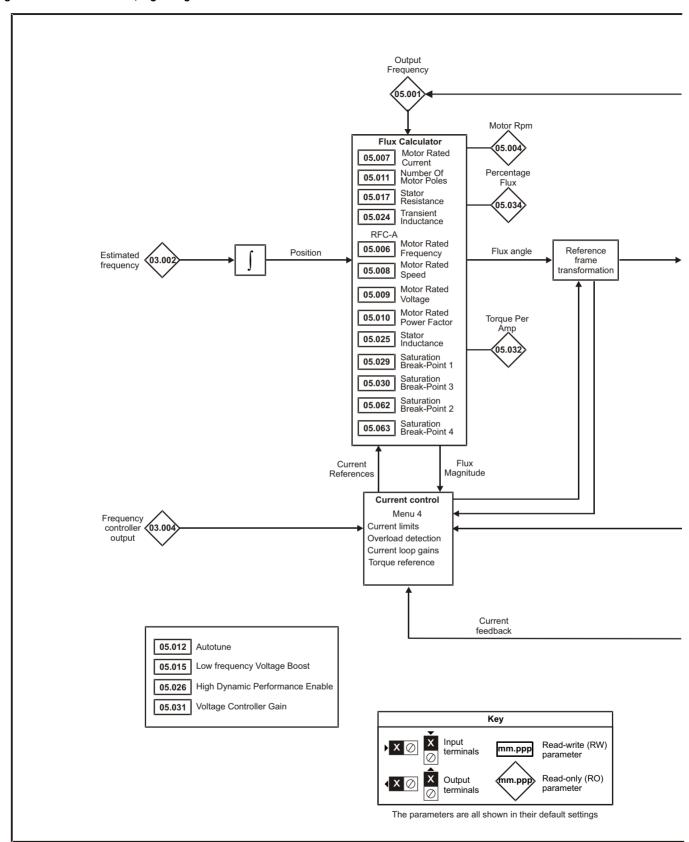

Running the motor Safety Product Electrical Getting Basic NV Media Mechanical Onboard Advanced UL Listing Optimization Diagnostics information information installation installation started parameters Card PLC parameters

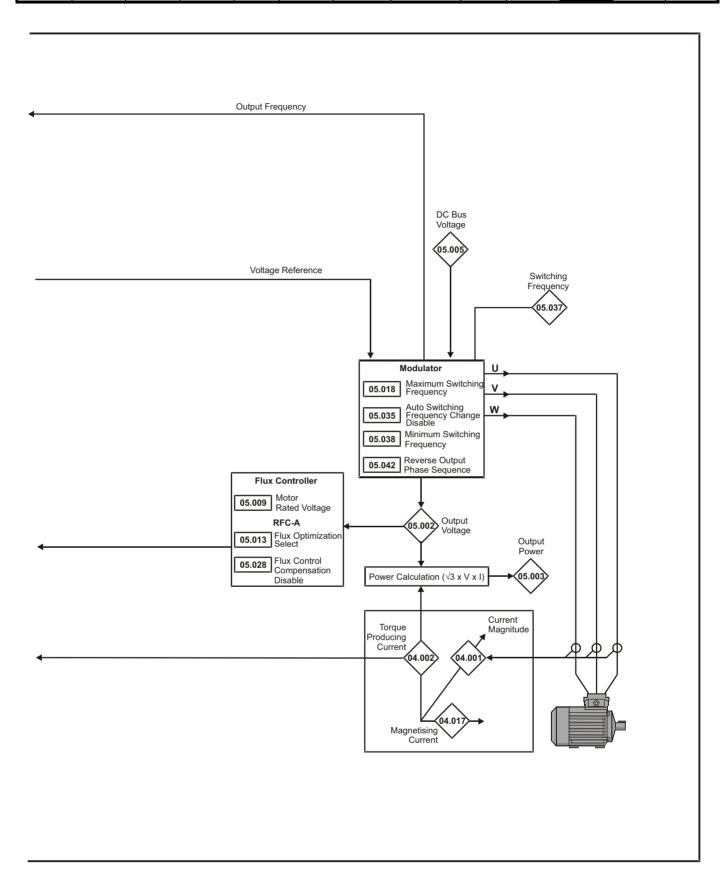

Optimization	Advanced parameters Diagnostics	UL Listing
--------------	---------------------------------	------------

05.002 Output Voltage	Num	O N N N N N N N N N N N N N N N N N N N	Jum	NE NE	NC R4 R4 R4 R4 R4 R4 R4 R	C PT C PT A A A A A A A A A A A A A A A A A A	FI FI
05.002 Output Voltage	Num	O N N N N N N N N N N N N N N N N N N N	Jum	NE NE	RA RA RA	C PT	US US US US US US US US US
05.003 Output Power OVM_POWER kW RO 105.004 Motor Rpm ± 33000.0 rpm RO 1 190 V RO 1 100 V 1 100 V RO 1 100 V RO 1 100 V 100 V	Num	O N N N N N N N N N N N N N N N N N N N	Jum	NE NE	RA RA RA	C PT C PT A A A A A A A A A A A A A A A A A A	US
\$\frac{1}{35,004} Motor Rpm	Num	O N N N N N N N N N N N N N N N N N N N	Jum	NE	RA RA RA	C PT C PT C PT A A	US U
05.005 D.C. Bus Voltage 0 to 1190 V 50.00 Hz 50 Hz: 50.00 Hz 60 Hz: 60.00 Hz 70.00 H	Num	O N N N N N N N N N N N N N N N N N N N	Jum	NE	RA RA RA	C PT A A A	US U
05.006 Motor Rated Frequency 0.00 to 550.00 Hz S0 Hz: 50.00 Hz RW RW Rotor Rated Current 0.00 to Drive Rating A Maximum Heavy Duty Rating (11.032) RW RW RW Rotor Rated Speed 0.0 to 33000.0 rpm RW Rotor Rated Speed 0.0 to 33000.0 rpm S0 Hz: 1500.0 S0 Hz: 1500.0 RW RW RW RW RW RW RW R	Num Num Num Num Num Num Num Num Txt Sum Num Sum Num Num Num Num Num Num Num Num Num N	V N N N N N N N N N N N N N N N N N N N	Jum		RA RA RA	A A A A A A A A A A A A A A A A A A A	US US US US US US US US US
05.007 Motor Rated Current 0.00 to Drive Rating A Maximum Heavy Duty Rating (11.032) RW 1 1 1 1 1 1 1 1 1	Num Num Num Num Num Num Num Txt Sum Num Sum Num Num Num Num Num Num Num Num Num N	V N N N N N N N N N N N N N N N N N N N	Jum		RA RA	A A A A A A A A A A A A A A A A A A A	US US US US US US US US US
05.008 Motor Rated Speed 0.0 to 33000.0 rpm Fig. 1800.0 Fig.	Num Num Num Num Num Num Txt Sum Num Sum Num Num Num Num Num Num Num Num Num N	V N N N N N N N N N N N N N N N N N N N	Jum Jum Jum Jum Jum Jum Jum Txt Jum Jum Jum Jum Jum		RA RA	A A	US US US US US US US
05.008 Motor Rated Speed 0.0 to 33000.0 rpm 60 Hz: 1800.0 Fpm Fpm 60 Hz: 1750.0 rpm Fpm F	Num Num Num Num Num Num Txt Num Sum Num Num Num Num Num Num Num Num Num	V N N N V N N N V N N N N V N	Jum Jum Jum Jum Jum Jum Jum Txt Txt		RA NC	A	US US US US US US US
05.009 Motor Rated Voltage 0 to 765 V 400 V drive 60Hz: 460 V 575 V drive: 590 V RW IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	Num Num Num Num Txt Num Sum Num Num Num Num Num Txt Bit Bit Bit Num	V N N V N N V N N V N N V N N V N N V N N V N N V N N V N N V N N V N V N V N V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V V V E E V	Jum Jum Jum Jum Txt Jum Jum		RA NC	A	US US US US US
O5.011 Number Of Motor Poles* Auto (0) to 32 (16) Auto (0) RW I	Num Num Txt Num Num Eit Bit Bit Num	V N N N N N N N N N N N N N N N N N N N	lum lum lum Txt lum lum		NC RA	A	US US US US US
05.012 Autotune 0 to 2 0 to 3 0 RW 1	Num Num Txt Num Num Txt Bit Bit Bit Num	V N N N N N N N N N N N N N N N N N N N	Jum Jum Txt Jum Jum Txt		RA	A	US US US
05.013 Dynamic V To F Select / Flux Optimization Select 0 to 1 0 RW I 05.014 Control Mode Ur.S (0), Ur (1), Fd (2), Ur.Auto (3), Ur.I (4), SrE (5), Fd.tAP (6) Ur.I (4) RW 05.015 Low Frequency Voltage Boost 0.0 to 25.0 % 3.0 % RW I 05.017 Stator Resistance 0.0000 to 99.9999 Ω 0.0000 Ω RW I 05.018 Maximum Switching Frequency 0.667 (0), 1 (1), 2 (2), 3 (3), 4 (4), 6 (5), 8 (6), 12 (7), 16 (8) kHz 2 (2), 3 (3), 4 (4), 6 (5), 8 (6), 12 (7), 16 (8) kHz RW 05.019 High Stability Space Vector Modulation Off (0) or On (1) Off (0) RW 05.020 Over Modulation Enable Off (0) or On (1) Off (0) RW 05.021 Mechanical Load Test Level 0 to 100 % 0 % RW 05.024 Transient Inductance 0.000 to 500.000 mH 0.00 mH RW 1 05.025 Stator Inductance 0.00 to 500.000 mH 0.00 mH RW 1 05.027 Enable Slip Compensation ±150.0 % 100.0 % RW 1 05.028	Num Txt Num Num Txt Bit Bit Bit Num	V N V 1 V N V N V N V N V E	Jum Txt Jum Jum		RA	A	US US US
O5.014 Control Mode	Txt Num Num Txt Bit Bit Bit Num	V N N N N N N N N N N N N N N N N N N N	Txt Jum Jum Txt				US US US
05.014 Control Mode Fd (2), Ur. Auto (3), Ur. I (4), SrE (5), Fd.tAP (6) Ur. I (4) RW 05.015 Low Frequency Voltage Boost 0.0 to 25.0 % 3.0 % RW N 05.017 Stator Resistance 0.0000 to 99.9999 Ω 0.00000 Ω RW N 05.018 Maximum Switching Frequency 0.667 (0), 1 (1), 2 (2), 3 (3), 4 (4), 6 (5), 8 (6), 12 (7), 16 (8) kHz 2 (2), 3 (3), 4 (4), 6 (5), 8 (6), 12 (7), 16 (8) kHz 3 (3) kHz RW 05.019 High Stability Space Vector Modulation Off (0) or On (1) Off (0) RW 05.020 Over Modulation Enable Off (0) or On (1) Off (0) RW 05.021 Mechanical Load Test Level 0 to 100 % 0 % RW 05.024 Transient Inductance 0.000 to 500.000 mH 0.00 mH 0.00 mH RW 05.025 Stator Inductance 0.00 to 500.000 mH 0.00 mH RW N 05.026 High Dynamic Performance Enable Off (0) or On (1) Off (0) RW N 05.028 Flux Control Compensation ±150.0 % 0.0 to 100.0 %	Num Num Txt Bit Bit Bit Num	V N V N V 1	lum lum Txt				US
05.017 Stator Resistance 0.0000 to 99.9999 Ω 0.0000 Ω RW N 05.018 Maximum Switching Frequency 0.667 (0), 1 (1), 2 (2), 3 (3), 4 (4), 6 (5), 8 (6), 12 (7), 16 (8) kHz 2 (2), 3 (3), 4 (4), 6 (5), 8 (6), 12 (7), 16 (8) kHz 3 (3) kHz RW 05.019 High Stability Space Vector Modulation Off (0) or On (1) Off (0) RW 05.020 Over Modulation Enable Off (0) or On (1) Off (0) RW 05.021 Mechanical Load Test Level 0 to 100 % 0 % RW 05.024 Transient Inductance 0.000 to 500.000 mH 0.000 mH RW N 05.025 Stator Inductance 0.00 to 500.000 mH 0.00 mH RW N 05.026 High Dynamic Performance Enable Off (0) or On (1) Off (0) RW N 05.027 Enable Slip Compensation ±150.0 % 100.0 % RW N 05.028 Flux Control Compensation Disable Off (0) or On (1) Off (0) RW N 05.030 Saturation Breakpoint 1 0.0 to 100.0 % 75.0 % RW	Num Txt Bit Bit Bit Num	V N V 1 V E	lum Txt				US
05.018 Maximum Switching Frequency 0.667 (0), 1 (1), 2 (2), 3 (3), 4 (4), 6 (5), 8 (6), 12 (7), 16 (8) kHz 2 (2), 3 (3), 4 (4), 6 (5), 8 (6), 12 (7), 16 (8) kHz 3 (3) kHz RW 05.019 High Stability Space Vector Modulation Off (0) or On (1) Off (0) RW 05.020 Over Modulation Enable Off (0) or On (1) Off (0) RW 05.021 Mechanical Load Test Level 0 to 100 % 0 % RW 05.024 Transient Inductance 0.000 to 500.000 mH 0.000 mH RW N 05.025 Stator Inductance 0.00 to 500.000 mH 0.00 mH RW N 05.026 High Dynamic Performance Enable Off (0) or On (1) Off (0) RW N 05.027 Enable Slip Compensation ±150.0 % 100.0 % RW N 05.028 Flux Control Compensation Disable Off (0) or On (1) Off (0) RW N 05.029 Saturation Breakpoint 1 0.0 to 100.0 % 50.0 % RW N 05.030 Saturation Breakpoint 3 0.0 to 100.0 % 75.0 % RW	Txt Bit Bit Bit Bit	V 1	Txt				
05.018 Maximum Switching Frequency 2 (2), 3 (3), 4 (4), 6 (5), 8 (6), 12 (7), 16 (8) kHz 2 (2), 3 (3), 4 (4), 6 (5), 8 (6), 12 (7), 16 (8) kHz 3 (3) kHz RW 05.019 High Stability Space Vector Modulation Off (0) or On (1) Off (0) RW 05.020 Over Modulation Enable Off (0) or On (1) Off (0) RW 05.021 Mechanical Load Test Level 0 to 100 % 0 % RW 05.024 Transient Inductance 0.000 to 500.000 mH 0.000 mH RW N 05.025 Stator Inductance 0.00 to 5000.00 mH 0.00 mH RW N 05.026 High Dynamic Performance Enable Off (0) or On (1) Off (0) RW N 05.027 Enable Slip Compensation ±150.0 % 100.0 % RW N 05.028 Flux Control Compensation Disable Off (0) or On (1) Off (0) RW N 05.029 Saturation Breakpoint 1 0.0 to 100.0 % 50.0 % RW N 05.030 Saturation Breakpoint 3 0.0 to 100.0 % 75.0 % RW N	Bit Bit Bit Num	V E				4	US
05.020 Over Modulation Enable Off (0) or On (1) Off (0) RW 05.021 Mechanical Load Test Level 0 to 100 % 0 % RW 05.024 Transient Inductance 0.000 to 500.000 mH 0.000 mH 0.000 mH RW 05.025 Stator Inductance 0.00 to 5000.00 mH 0.00 mH RW N 05.026 High Dynamic Performance Enable Off (0) or On (1) Off (0) RW 05.027 Enable Slip Compensation ±150.0 % 100.0 % RW N 05.028 Flux Control Compensation Disable Off (0) or On (1) Off (0) RW N 05.029 Saturation Breakpoint 1 0.0 to 100.0 % 50.0 % RW N 05.030 Saturation Breakpoint 3 0.0 to 100.0 % 75.0 % RW N	Bit Bit Num	V E			RA		
05.021 Mechanical Load Test Level 0 to 100 % 0 % RW 05.024 Transient Inductance 0.000 to 500.000 mH 0.000 mH 0.000 mH RW N 05.025 Stator Inductance 0.00 to 5000.00 mH 0.00 mH RW N 05.026 High Dynamic Performance Enable Off (0) or On (1) Off (0) RW 05.027 Enable Slip Compensation ±150.0 % 100.0 % RW N 05.028 Flux Control Compensation Disable Off (0) or On (1) Off (0) RW N 05.029 Saturation Breakpoint 1 0.0 to 100.0 % 50.0 % RW N 05.030 Saturation Breakpoint 3 0.0 to 100.0 % 75.0 % RW N	Bit Num		Bit				US
05.024 Transient Inductance 0.000 to 500.000 mH 0.000 mH RW N 05.025 Stator Inductance 0.00 to 5000.00 mH 0.00 mH RW N 05.026 High Dynamic Performance Enable Off (0) or On (1) Off (0) RW 05.027 Enable Slip Compensation ±150.0 % 100.0 % RW N 05.028 Flux Control Compensation Disable Off (0) or On (1) Off (0) RW N 05.029 Saturation Breakpoint 1 0.0 to 100.0 % 50.0 % RW N 05.030 Saturation Breakpoint 3 0.0 to 100.0 % 75.0 % RW N	Num	/ I F					US
05.025 Stator Inductance 0.00 to 5000.00 mH 0.00 mH RW N 05.026 High Dynamic Performance Enable Off (0) or On (1) Off (0) RW 05.027 Enable Slip Compensation ±150.0 % 100.0 % RW N 05.028 Flux Control Compensation Disable Off (0) or On (1) Off (0) RW 05.029 Saturation Breakpoint 1 0.0 to 100.0 % 50.0 % RW 05.030 Saturation Breakpoint 3 0.0 to 100.0 % 75.0 % RW					Ļ.	_	US
05.026 High Dynamic Performance Enable Off (0) or On (1) Off (0) RW 05.027 Enable Slip Compensation ±150.0 % 100.0 % RW N 05.028 Flux Control Compensation Disable Off (0) or On (1) Off (0) RW 05.029 Saturation Breakpoint 1 0.0 to 100.0 % 50.0 % RW 05.030 Saturation Breakpoint 3 0.0 to 100.0 % 75.0 % RW	Num			<u> </u>	RA		US
05.027 Enable Slip Compensation ±150.0 % 100.0 % RW N 05.028 Flux Control Compensation Disable Off (0) or On (1) Off (0) RW 05.029 Saturation Breakpoint 1 0.0 to 100.0 % 50.0 % RW 05.030 Saturation Breakpoint 3 0.0 to 100.0 % 75.0 % RW	D:-				RA	4	US
05.028 Flux Control Compensation Disable Off (0) or On (1) Off (0) RW 05.029 Saturation Breakpoint 1 0.0 to 100.0 % 50.0 % RW N 05.030 Saturation Breakpoint 3 0.0 to 100.0 % 75.0 % RW N	Bit Num				+	—	US
05.029 Saturation Breakpoint 1 0.0 to 100.0 % 50.0 % RW I 05.030 Saturation Breakpoint 3 0.0 to 100.0 % 75.0 % RW I	Bit				+	+	US
05.030 Saturation Breakpoint 3	Num				╁	+	US
	Num			1	+	+	US
TUDU I IVORQUE CONTURE CANT	Num				+	+	US
05.032 Torque Per Amp) NC	C PT	
	Num	_		_	+	+	US
05.034 Percentage Flux	Num	N	lum	NE	NC	C PT	+
05.035 Auto-switching Frequency Change Disable 0 to 1 0 RW	Num	V N	lum		\top	1	US
250 (2), 512 (3) ms	Txt	/ 1	Txt		L		US
6 (5), 8 (6), 12 (7), 16 (8) kHz	Txt) 1	Txt	NE) NC	C PT	
FREQUENCY KHZ	Txt				RA	4	
	Num				4	4	US
	Bit			1	NI/	_ DT	US
Current At Maximum Deadtime	Num			1		CPT	-
Compensation 0.00 to 100.00 %	Num Bit				NC	C PT	US
	Num			-	+	+	US
	Num			\vdash	+	+	US
· ·	Num				+	+	US
	Num			1	+	+	US
	Num			\vdash	+	+	US
· ·	Num				+	+	US
05.078 Third point voltage	N I	V N	lum		1	1	US
05.079 Third point frequency 0.0 to 100.0 % 75.0 % RW I	Num			+	+	\top	US

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	OL LISTING

	Parameter	Rang	je (‡)	Defau	lt (⇔)			Туре	
	Farameter	OL	RFC-A	OL	RFC-A			Type	
05.080	Low acoustic noise enable	Off (0) or On (1)		Off (0)		RW	Bit		US
05.081	Change to maximum drive switching frequency at low output current	Off (0) o	or On (1)	Off	(0)	RW	Bit		US
05.083	Voltage Shelving Disable	Off (0) or On (1)		Off (0)		RW	Bit		US
05.084	Low Frequency Slip Boost	0.0 to 100.0 %		0.0 %		RW	Num		US
03.004	Low Frequency Estimator Threshold		0.0 to 100.0 %		0.0 %	RW	Num		US
05.088	Ur Mode Pre-Flux Delay	0.0 to 0.7 s		0.1 s		RW	Num		US


^{*} If this parameter is read via serial communications, it will show pole pairs.

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

Safety Product Mechanical Electrical Getting Basic Running the NV Media Onboard Advanced Diagnostics **UL** Listing Optimization information information installation installation started parameters motor Card PLC parameters

11.7 Menu 6: Sequencer and clock

Figure 11-10 Menu 6 logic diagram

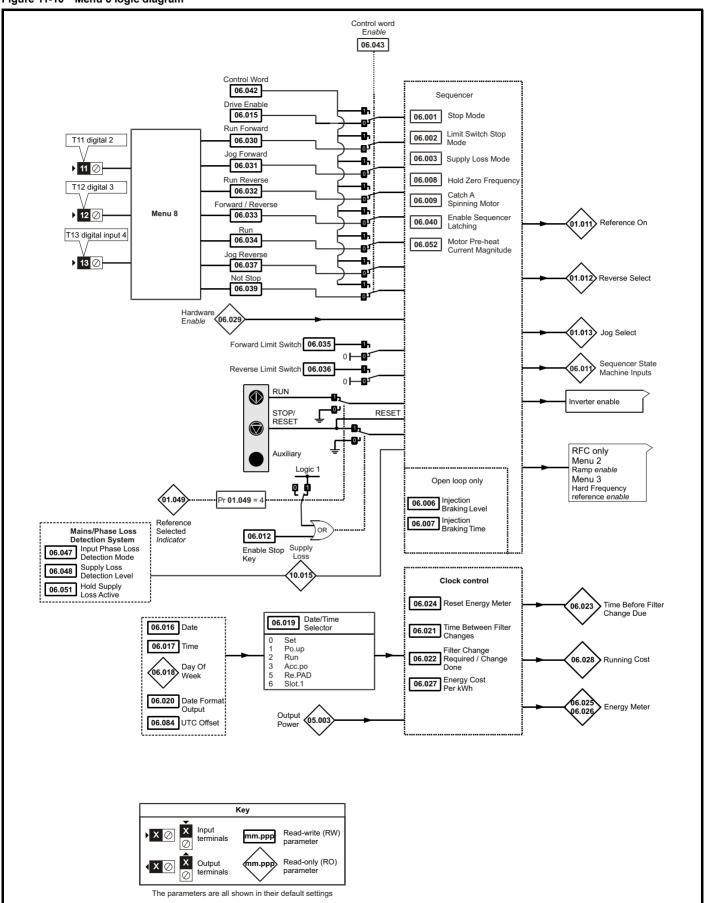

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISTING

		Rang	je (‡)	Defau	lt(⇔)			_			
	Parameter	OL	RFC-A	OL	RFC-A	-		Тур	е		
06.001	Stop Mode	CoASt (0), rP (1), rP.dc I (2), dc I (3), td.dc I (4), diS (5)	CoASt (0), rP (1), rP.dc I (2), dc I (3), td.dc I (4), diS (5), No.rP (6)	rP	(1)	RW	Txt				US
06.002	Limit Switch Stop Mode	StoP (0	,. , ,	rP	. ,	RW	Txt				US
06.003	Supply Loss Mode	diS (0), rP.StoP (1), r		diS	` '	RW	Txt				US
06.004	Start/Stop Logic Select		o 6	(RW	Num				US
06.006	Injection Braking Level		50.0 %	100.		RW	Num		RA		US
06.007	Injection Braking Time	0.0 to		1.0	-	RW	Num				US
06.008	Hold Zero Frequency	- (-)	or On (1)	Off	` '	RW	Bit				US
06.009	Catch A Spinning Motor		r.OnLy (2), rv.OnLy (3)	diS	(0)	RW	Txt				US
06.010	Enable Conditions		4087			RO	Bin	ND	NC	PT	<u> </u>
06.011	Sequencer State Machine Inputs		127	0,"	(0)	RO	Bin	ND	NC	PT	
06.012	Enable Stop Key	Off (0) o	` '	Off	· ,	RW	Bit				US
06.013	Enable Auxiliary Key	diS (0), Fd.r		diS	. ,	RW	Txt				US
06.014	Disable Auto Reset On Enable	Off (0) o	or On (1)	Off	. ,	RW	Bit				
06.015	Drive Enable	()	()	On	(1)	RW	Bit	ND	NO	DT	US
06.016	Date	00-00-00 t				RW	Date	ND	NC	PT	Ь—
06.017 06.018	Time Day Of Week	00:00:00 t Sun (0), Non (1), tuE Fri (5)				RW	Time	ND ND	NC NC	PT PT	
06.019	Date/Time Selector	SEt (0), Po.uP (1), rE.PAd (5)	run (2), Acc.Po (3),	Po.ul	P (1)	RW	Txt				US
06.020	Date Format	Std (0),	US (1)	Std	(0)	RW	Txt				US
06.021	Time Between Filter Changes	0 to 300	00 Hours	0 Hc	ours	RW	Num				US
06.022	Filter Change Required / Change Done		or On (1)			RW	Bit	ND	NC		
06.023	Time Before Filter Change Due	0 to 300	00 Hours			RO	Num	ND	NC	PT	PS
06.024	Reset Energy Meter	, ,	or On (1)	Off	(0)	RW	Bit				
06.025	Energy Meter: MWh	±999.9	9 MWh			RO	Num	ND	NC	PT	PS
06.026	Energy Meter: kWh	±99.9	9 kWh			RO	Num	ND	NC	PT	PS
06.027	Energy Cost Per kWh	0.0 to	600.0	0.	0	RW	Num				US
06.028	Running Cost	± 32				RO	Num	ND	NC	PT	
06.029	Hardware Enable	Off (0) o	or On (1)			RO	Bit	ND	NC	PT	
06.030	Run Forward	Off (0) o	` '	Off		RW	Bit		NC		
06.031	Jog Forward	Off (0) o	` '	Off	. ,	RW	Bit		NC		
06.032	Run Reverse	, ,	or On (1)	Off	. ,	RW	Bit		NC		
06.033	Forward/Reverse	` '	or On (1)	Off	. ,	RW	Bit		NC		
06.034	Run	Off (0) o	, ,	Off	. ,	RW	Bit		NC		
06.035	Forward Limit Switch	` '	or On (1)	Off	. ,	RW	Bit		NC		
06.036	Reverse Limit Switch	Off (0) o	` '	Off	. ,	RW	Bit		NC		<u> </u>
	Jog Reverse		or On (1)	Off		RW	Bit		NC		
06.038	User Enable	Off (0) o	, ,	Off	· ,	RW	Bit		NC		
06.039	Not Stop	` '	or On (1)	Off	. ,	RW	Bit		NC		
06.040	Enable Sequencer Latching	, ,	or On (1)	Off	` '	RW	Bit				US
06.041	Drive Event Flags		0 3	C		RW	Bin		NC		<u> </u>
06.042	Control Word	0 to 3		C		RW	Bin		NC		
06.043	Control Word Enable	0 t		C		RW	Num		<u> </u>		US
06.045 06.047	Cooling Fan control Input Phase Loss Detection Mode	0 t FuLL (0), rIPP	0 5	2 FuLl		RW	Num Txt				US US
06.048	Supply Loss Detection Level	0 to VM_SUPPLY		110 V driv 200 V driv 400 V driv 575 V driv 690 V driv	re: 205 V, ve: 205 V re: 410 V, ve: 540 V	RW	Num		RA		US
06.051	Hold Supply Loss Active	Off (0) o	or On (1)	Off	(0)	RW	Bit		NC		
06.052	Motor Pre-heat Current Magnitude		00 %	0 '		RW	Num				US
06.058	Output Phase Loss Detection Time	, ,	o 4 (3) s	0.5 (,	RW	Txt				US
06.059	Output Phase Loss Detection Enable	Off (0) o	, ,	Off	. ,	RW	Bit				US
06.060	Standby Mode Enable	, ,	or On (1)	Off	(0)	RW	Bit				US
06.061	Standby Mode Mask		15	C		RW	Bin				US
06.071	Slow Rectifier Charge Rate Enable	Off (0) o	or On (1)	Off		RW	Bit				US
06.073	Braking IGBT Lower Threshold	0 to VM_DC_V0	DLTAGE_SET V	110 V driv 200 V driv 400 V driv 575 V driv 690 V driv	ve: 390 V ve: 780 V, ve: 930 V	RW	Num		RA		US

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing


	Parameter	Rang	je (�)	Defa	ıult(⇔)			Turn			
	Parameter	OL	RFC-A	OL	RFC-A			Туре	•		
06.074	Braking IGBT Upper Threshold	0 to VM_DC_V0	DLTAGE_SET V	200 V dr 400 V dr 575 V dr	ive: 390 V, rive: 390 V ive: 780 V, rive: 930 V ive: 1120 V	RW	Num		RA		US
06.075	Low Voltage Braking IGBT Threshold	0 to VM_DC_V0	OLTAGE_SET V	() V	RW	Num		RA		US
06.076	Low Voltage Braking IGBT Threshold Select	Off (0) o	or On (1)	O	ff (0)	RW	Bit				
06.077	Low DC Link Operation	Off (0) o	or On (1)	O:	ff (0)	RW	Bit				US
06.084	UTC Offset	± 24.00) Hours	0.00	Hours	RW	Num				US
06.089	DC Injection Active	Off (0) or On (1)				RO	Bit	ND	NC	PT	US

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

Running the Safety Product Mechanical Electrical Getting Basic NV Media Onboard Advanced UL Listing Optimization Diagnostics informatio information installation installation parameters motor Card PLC parameters

11.8 Menu 7: Analog I/O

Figure 11-11 Menu 7 logic diagram

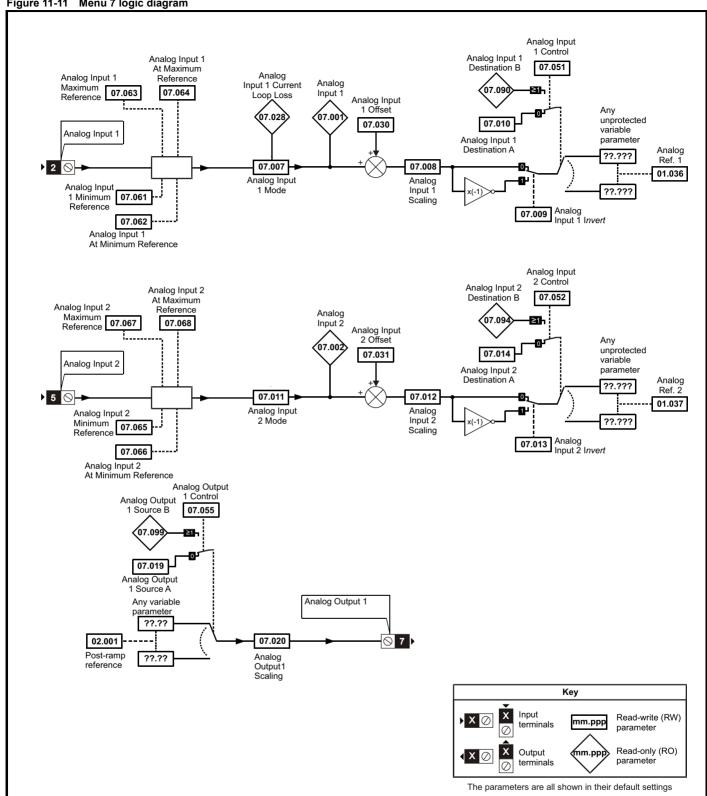

Basic NV Media Safety Product Mechanical Electrical Getting Running the Onboard Advanced parameters UL Listing Optimization Diagnostics information information installation installation started parameters motor Card PLC

Figure 11-12 Menu 7 logic diagram: Thermistor input 08.035 DI/O 05 Select Digital input 5 Digital Input 5 1,2 or 3 **⊘** 14 Thermistor 04 feedback Thermistor Input 07.047 {ThS} trip detect ⊘ 1 0V {Th} trip detect Menu 3 Frequency Input Thermistor Type (07.046) Thermistor Trip Threshold (07.048) Thermistor Reset Threshold (07.049) Thermistor Temperature 4 –0 07.050 Resistance to temperature conversion 0 to 3 07.046 Thermistor Type Key Input terminals Read-write (RW) mm.ppp Read-only (RO)

Output

m.pp

The parameters are all shown in their default settings

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISTING


	D	Ran	ge (\$)	Defa	ıult (⇔)			_			
	Parameter	OL	RFC-A	OL	RFC-A	1		Тур	е		
07.001	Analog Input 1 (T2)	0.00 to	100.00 %			RO	Num	ND	NC	PT	FI
07.002	Analog Input 2 (T5)	0.00 to	100.00 %			RO	Num	ND	NC	PT	FI
07.004	Stack Temperature	± 2	50 °C			RO	Num	ND	NC	PT	
07.005	Auxiliary Temperature	± 2	50 °C			RO	Num	ND	NC	PT	
07.007	Analog Input 1 Mode (T2)	20-4.L (-3), 4-20 0-20 (0), 20-0 (1),	I.S (-5), 4-20.L (-4), I.H (-2), 20-4.H (-1), 4-20.tr (2), 20-4.tr (3), I.H. (5), VoLt (6)	Vo	Lt (6)	RW	Txt				US
07.008	Analog Input 1 Scaling (T2)	0.000	to 10.000	1	.000	RW	Num				US
07.009	Analog Input 1 Invert (T2)	Off (0)	or On (1)	0	ff (0)	RW	Bit				US
07.010	Analog Input 1 Destination A (T2)	0.000	to 30.999	1	.036	RW	Num	DE		PT	US
07.011	Analog Input 2 Mode (T5)	VoLt (6	6), dlg (7)	Vo	Lt (6)	RW	Txt				US
07.012	Analog Input 2 Scaling (T5)	0.000	to 10.000	1	.000	RW	Num				US
07.013	Analog Input 2 Invert (T5)	Off (0)	or On (1)	0	ff (0)	RW	Bit				US
07.014	Analog Input 2 Destination A (T5)	0.000	to 30.999	1	.037	RW	Num	DE		PT	US
07.019	Analog Output 1 Source A (T7)	0.000	to 30.999	2	.001	RW	Num			PT	US
07.020	Analog Output 1 Scaling (T7)	0.000	to 40.000	1	.000	RW	Num				US
07.026	Analog Input 1 Preset on Current Loss (T2)	4.00	to 20.00	4	1.00	RW	Num				US
07.028	Analog Input 1 Current Loop Loss (T2)	Off (0)	or On (1)			RO	Bit	ND	NC	PT	
07.030	Analog Input 1 Offset (T2)	±10	0.00 %	0.	00 %	RW	Num				US
07.031	Analog Input 2 Offset (T5)	±10	0.00 %	0.	00 %	RW	Num				US
07.034	Inverter Temperature	±2	50 °C			RO	Num	ND	NC	PT	
07.035	Percentage Of d.c. Link Thermal Trip Level	0 to	100 %			RO	Num	ND	NC	PT	
07.036	Percentage Of Drive Thermal Trip Level	0 to	100 %			RO	Num	ND	NC	PT	
07.037	Temperature Nearest To Trip Level	0 to	1999			RO	Num	ND	NC	PT	
07.046	Thermistor Type		4 (1), Pt1000 (2), 3),othEr (4)	d44	081 (0)	RW	Txt				US
07.047	Thermistor Feedback	0 to	4000 Ω			RO	Num	ND	NC	PT	FI
07.048	Thermistor Trip Threshold	0 to	4000 Ω	33	00 Ω	RW	Num				US
07.049	Thermistor Reset Threshold	0 to	4000 Ω	18	00 Ω	RW	Num				US
07.050	Thermistor Temperature	-50 to	300 °C			RO	Num	ND	NC	PT	FI
07.051	Analog Input 1 Control (T2)	0	to 5		0	RW	Num				US
07.052	Analog Input 2 Control (T5)	0	to 5		0	RW	Num				US
07.055	Analog Output 1 Control (T7)	0	to 15		0	RW	Num				US
07.061	Analog Input 1 Minimum Reference (T2)	0.00 to	100.00 %	0.	00 %	RW	Num				US
07.062	Analog Input 1 At Minimum Reference (T2)	± 10	0.00 %	0.	00 %	RW	Num				US
07.063	Analog Input 1 Maximum Reference (T2)	0.00 to	100.00 %	100	0.00 %	RW	Num				US
07.064	Analog Input 1 At Maximum Reference (T2)	± 10	0.00 %	100	0.00 %	RW	Num				US
07.065	Analog Input 2 Minimum Reference (T5)	0.00 to	100.00 %	0.	00 %	RW	Num				US
07.066	Analog Input 2 At Minimum Reference (T5)	± 10	0.00 %	0.	00 %	RW	Num				US
07.067	Analog Input 2 Maximum Reference (T5)	0.00 to	100.00 %	100	0.00 %	RW	Num				US
07.068	Analog Input 2 At Maximum Reference (T5)	± 10	0.00 %	100	0.00 %	RW	Num				US
07.090	Analog Input 1 Destination B (T2)	0.000	to 30.999			RO	Num	DE	NC	PT	US
07.094	Analog Input 2 Destination B (T5)	0.000	to 30.999			RO	Num	DE	NC	PT	US
07.099	Analog Output 1 Source B (T7)	0.000	to 30.999			RO	Num		NC	PT	US

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination


Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced Diagnostics	III Liotina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	UL Listing

11.9 Menu 8: Digital I/O


Figure 11-13 Menu 8 logic diagram

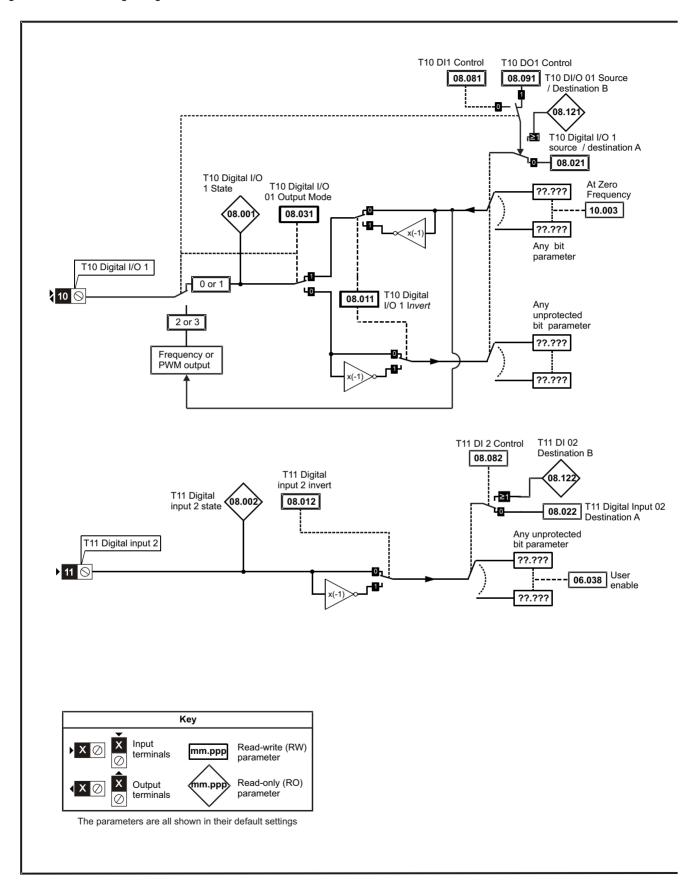


Safety NV Media Product Mechanical Electrical Getting Basic Running the Onboard Advanced Diagnostics **UL** Listing Optimization information information installation installation started parameters motor Card PLC parameters

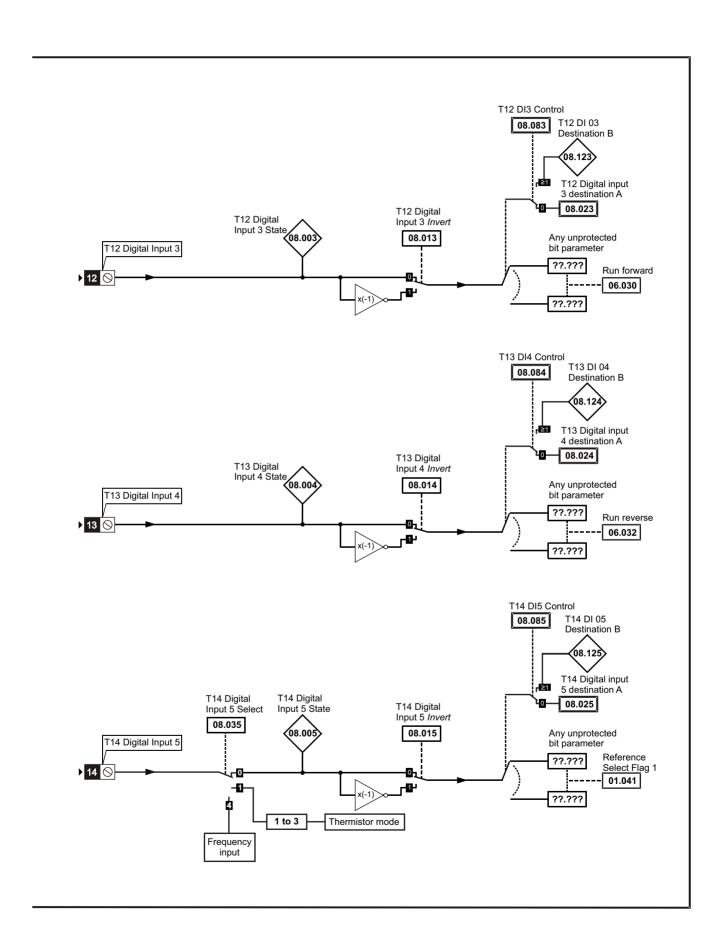



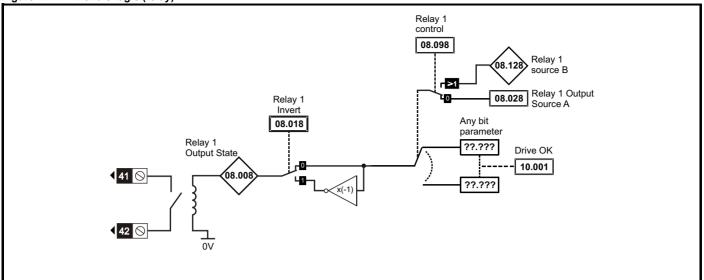

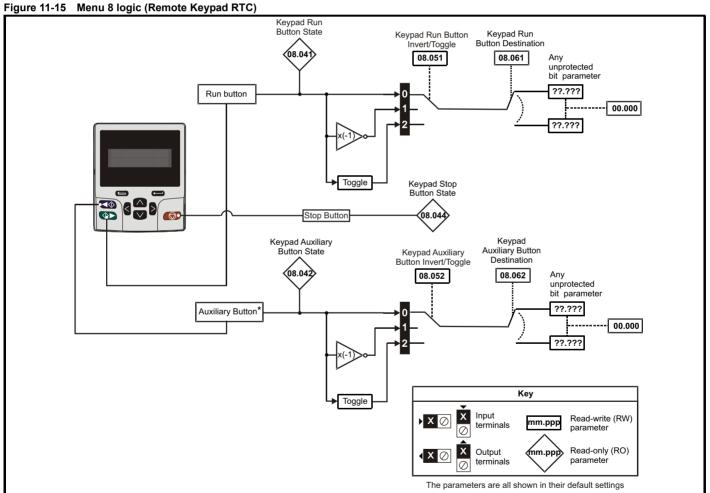

^{*} The auxiliary button is available with the Remote Keypad RTC.

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISTING


	P	Ran	ge (‡)	Defa	ult (⇔)	Time					
	Parameter	OL	RFC-A	OL	Туре						
08.001	Digital I/O 1 State (T10)	Off (0)	or On (1)			RO	Bit	ND	NC	PT	
08.002	Digital Input 2 State (T11)	Off (0)	or On (1)			RO	Bit	ND	NC	PT	
08.003	Digital Input 3 State (T12)	Off (0)	or On (1)			RO	Bit	ND	NC	PT	
08.004	Digital Input 4 State (T13)	Off (0)	or On (1)			RO	Bit	ND	NC	PT	
08.005	Digital Input 5 State (T14)	Off (0)	or On (1)			RO	Bit	ND	NC	PT	
800.80	Relay 1 Output State	Off (0)	or On (1)			RO	Bit	ND	NC	PT	
08.011	Digital I/O 1 Invert (T10)	Not.Inv (0)), InvErt (1)	Not.	Inv (0)	RW	Txt				US
08.012	Digital Input 2 Invert (T11)	Not.Inv (0)), InvErt (1)	Not.	Inv (0)	RW	Txt				US
08.013	Digital Input 3 Invert (T12)	Not.Inv (0)), InvErt (1)	Not.	Inv (0)	RW	Txt				US
08.014	Digital Input 4 Invert (T13)	Not.Inv (0)), InvErt (1)	Not.	Inv (0)	RW	Txt				US
08.015	Digital Input 5 Invert (T14)	Not.Inv (0)), InvErt (1)	Not.	Inv (0)	RW	Txt				US
08.018	Relay 1 Invert	Not.Inv (0)), InvErt (1)	Not.	Inv (0)	RW	Txt				US
08.020	Digital I/O Read Word	0 to	2048			RO	Num	ND	NC	PT	
08.021	Digital IO1 Source / Destination A (T10)	0.000 t	to 30.999	10	.003	RW	Num	DE		PT	US
08.022	Digital Input 02 Destination A (T11)	0.000 t	to 30.999	6.	038	RW	Num	DE		PT	US
08.023	Digital Input 03 Destination A (T12)	0.000 t	to 30.999	6.	030	RW	Num	DE		PT	US
08.024	Digital Input 04 Destination A (T13)	0.000 t	to 30.999	6.	032	RW	Num	DE		PT	US
08.025	Digital Input 05 Destination A (T14)		to 30.999	1.	041	RW	Num	DE		PT	US
08.028	Relay 1 Output Source A		to 30.999		.001	RW	Num			PT	US
08.031	Digital I/O 01 Output Mode (T10)		1), Fr (2), PuLSE (3)	Out	Put (1)	RW	Txt				US
08.035	Digital Input 5 Select (T14)		.Sct (1), th (2), (3), Fr (4)	InP	ut (0)	RW	Txt				US
08.041	Keypad Run Button State	Off (0)	or On (1)			RO	Bit	ND	NC	PT	
08.042	Keypad Auxiliary Button State	Off (0)	or On (1)			RO	Bit	ND	NC	PT	
08.043	24 V Supply Input State	Off (0)	or On (1)			RO	Bit	ND	NC	PT	
08.044	Keypad Stop Button State	Off (0)	or On (1)			RO	Bit	ND	NC	PT	
08.051	Keypad Run Button Invert / Toggle	• • • •	Ert (1), toggLE (2)	Not.	Inv (0)	RW	Txt				US
08.052	Keypad Auxiliary Button Invert / Toggle	Not.Inv (0), Invi	Ert (1), toggLE (2)	Not.	Inv (0)	RW	Txt				US
08.053	24 V Supply Input Invert	Not.Inv (0), InvErt (1),	Not.	Inv (0)	RW	Txt				US
08.061	Keypad Run Button Destination		to 30.999	0.	000	RW	Num	DE		PT	US
08.062	Keypad Auxiliary Button Destination		to 30.999	0.	000	RW	Num	DE		PT	US
08.063	24 V Supply Input Destination		to 30.999	0.	000	RW	Num	DE		PT	US
08.081	DI1 Control (T10)		to 26		0	RW	Num				US
08.082	DI2 Control (T11)	0 t	to 26		0	RW	Num				US
08.083	DI3 Control (T12)	0 t	to 26		0	RW	Num				US
08.084	DI4 Control (T13)	0 t	to 26		0	RW	Num				US
08.085	DI5 Control (T14)	0 t	to 26		0	RW	Num				US
08.091	DO1 Control (T10)	0 t	to 21		0	RW	Num				US
08.098	Relay 1 Control		to 21		0	RW	Num				US
08.121	DI/O 01 Source / Destination B (T10)		to 30.999			RO	Num	DE	NC	PT	US
08.122	DI 02 Destination B (T11)		to 30.999			RO	Num	DE	NC	PT	US
08.123	DI 03 Destination B (T12)		to 30.999			RO	Num	DE	NC	PT	US
08.124	DI 04 Destination B (T13)		to 30.999			RO	Num	DE	NC	PT	US
08.125	DI 05 Destination B (T14)		to 30.999			RO	Num	DE	NC	PT	US
08.128	Relay 01 Source B	0.000 t	to 30.999	0.	000	RO	Num		NC	PT	US

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

Safety Product Mechanical Electrical Getting Basic Running the NV Media Onboard Advanced Diagnostics UL Listing Optimization information information installation installation parameters motor Card PLC


11.10 Menu 9: Programmable logic, motorized pot, binary sum and timers

Figure 11-16 Menu 9 logic diagram: Programmable logic

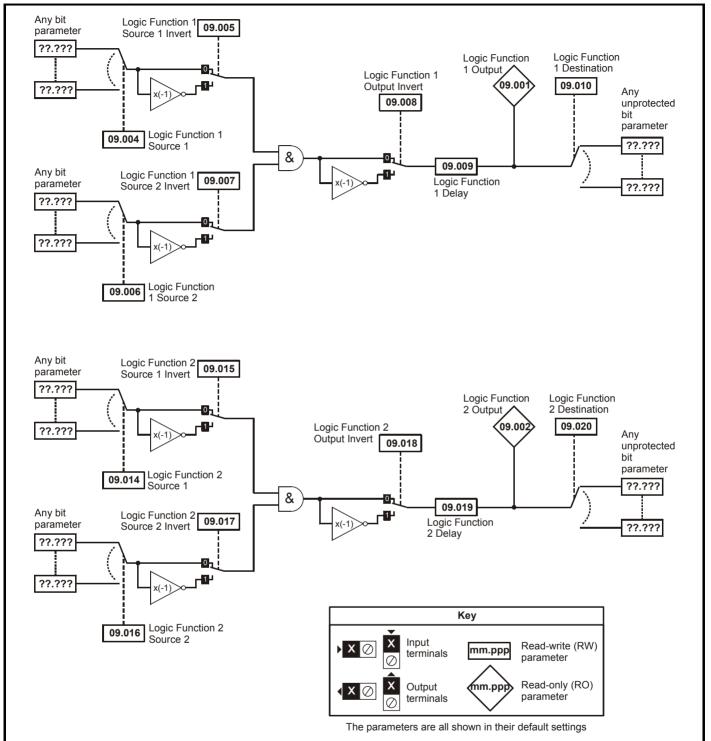

NV Media Safety Product Mechanical Electrical Getting Basic Running the Onboard Advanced **UL** Listing Optimization Diagnostics information information installation installation parameters motor Card PLC parameters

Figure 11-17

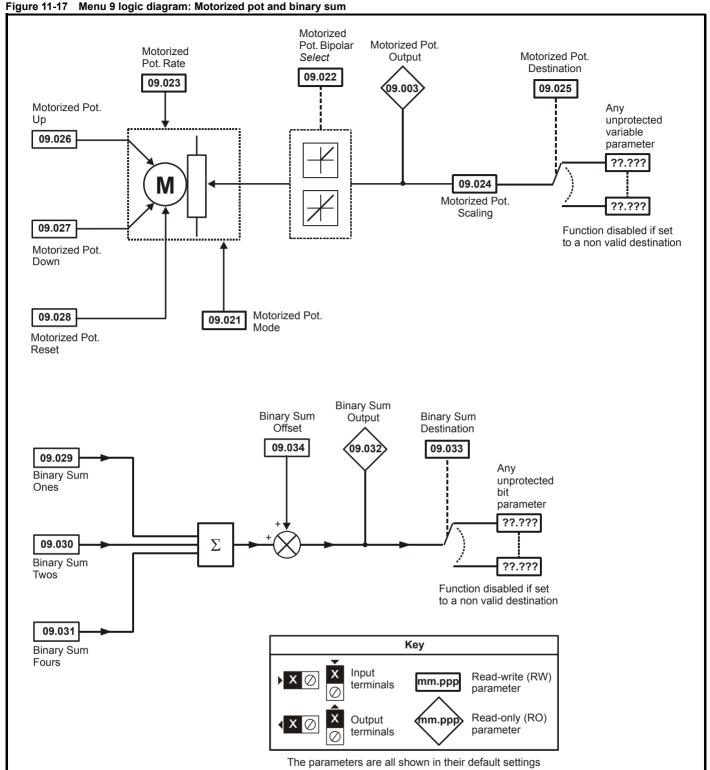


 


Figure 11-18 Menu 9 logic diagram: Timers

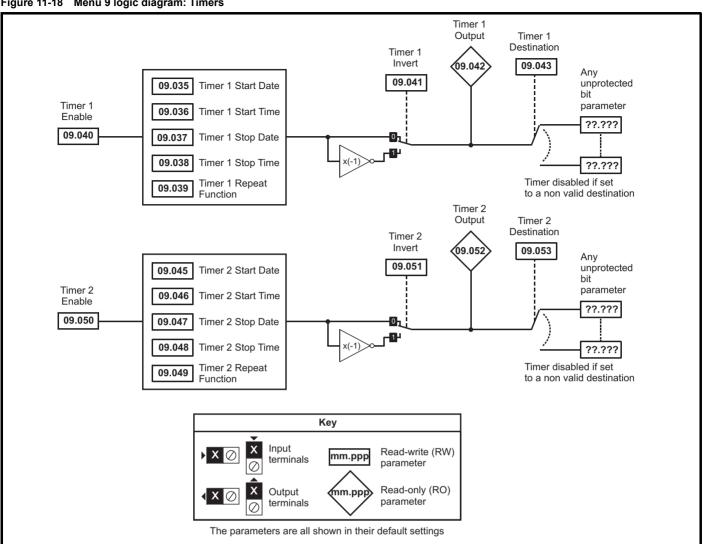

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	III Lieting
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

	_ ,	Rang	ge((‡)	De	fault(⇔)						
	Parameter	OL	RFC-A	OL	RFC-A			Тур	е		
09.001	Logic Function 1 Output	()	or On (1)			RO	Bit	ND	NC	PT	
09.002	Logic Function 2 Output	` ,	or On (1)			RO	Bit	ND	NC	PT	
09.003	Motorized Pot Output		.00 %			RO	Num	ND	NC	PT	PS
09.004	Logic Function 1 Source 1		30.999		0.000	RW	Num			PT	US
09.005	Logic Function 1 Source 1 Invert	` '	or On (1)		Off (0)	RW	Bit				US
09.006	Logic Function 1 Source 2		30.999		0.000	RW	Num			PT	US
09.007	Logic Function 1 Source 2 Invert	, ,	or On (1)		Off (0)	RW	Bit				US
09.008	Logic Function 1 Output Invert	` ,	or On (1)		Off (0)	RW	Bit				US
09.009	Logic Function 1 Delay		5.0 s		0.0 s	RW	Num				US
09.010	Logic Function 1 Destination		30.999		0.000	RW	Num	DE		PT	US
09.014	Logic Function 2 Source 1		30.999		0.000	RW	Num			PT	US
09.015	Logic Function 2 Source 1 Invert	, ,	or On (1)		Off (0)	RW	Bit				US
09.016	Logic Function 2 Source 2		30.999		0.000	RW	Num			PT	US
09.017	Logic Function 2 Source 2 Invert	. ,	or On (1)		Off (0)	RW	Bit				US
09.018	Logic Function 2 Output Invert	, ,	or On (1)		Off (0)	RW	Bit				US
09.019	Logic Function 2 Delay		5.0 s		0.0 s	RW	Num				US
09.020	Logic Function 2 Destination		30.999	(0.000	RW	Num	DE		PT	US
09.021	Motorized Pot Mode		o 4		0	RW	Num				US
09.022	Motorized Pot Bipolar Select	` ,	or On (1)		Off (0)	RW	Bit				US
09.023	Motorized Pot Rate		250 s		20 s	RW	Num				US
09.024	Motorized Pot Scaling		o 4.000		1.000	RW	Num				US
09.025	Motorized Pot Destination	0.000 to	30.999	(0.000	RW	Num	DE		PT	US
09.026	Motorized Pot Up	Off (0) o	or On (1)	(Off (0)	RW	Bit		NC		
09.027	Motorized Pot Down	Off (0) o	or On (1)	(Off (0)	RW	Bit		NC		
09.028	Motorized Pot Reset	` ,	or On (1)		Off (0)	RW	Bit		NC		
09.029	Binary Sum Ones	` ,	or On (1)		Off (0)	RW	Bit				
09.030	Binary Sum Twos	` '	or On (1)		Off (0)	RW	Bit				
09.031	Binary Sum Fours		or On (1)	(Off (0)	RW	Bit				
09.032	Binary Sum Output		255			RO	Num	ND	NC	PT	
09.033	Binary Sum Destination		30.999	(0.000	RW	Num	DE		PT	US
09.034	Binary Sum Offset		248		0	RW	Num				US
09.035	Timer 1 Start Date		o 31-12-99)-00-00	RW	Date				US
09.036	Timer 1 Start Time		o 23:59:59		0:00:00	RW	Time				US
09.037	Timer 1 Stop Date		o 31-12-99)-00-00	RW	Date				US
09.038	Timer 1 Stop Time		o 23:59:59	00	0:00:00	RW	Time				US
09.039	Timer 1 Repeat Function		1), 2 (2), 3 (3), , 6 (6), 7 (7)	No	onE (0)	RW	Txt				US
09.040	Timer 1 Enable	Off (0) o	or On (1)	(Off (0)	RW	Bit				US
09.041	Timer 1 Invert	Off (0) o	or On (1)	(Off (0)	RW	Bit				US
09.042	Timer 1 Output	Off (0) o	or On (1)			RO	Bit	ND	NC	PT	
09.043	Timer 1 Destination	0.000 to	30.999	(0.000	RW	Num	DE		PT	US
09.045	Timer 2 Start Date		o 31-12-99	00)-00-00	RW	Date				US
09.046	Timer 2 Start Time	00:00:00 t	o 23:59:59	00	0:00:00	RW	Time				US
09.047	Timer 2 Stop Date	00-00-00 t	o 31-12-99	00)-00-00	RW	Date				US
09.048	Timer 2 Stop Time		0 23:59:59	00	0:00:00	RW	Time				US
09.049	Timer 2 Repeat Function		2 (2), 3 (3), 4 (4), (6), 7 (7)		onE (0)	RW	Txt				US
09.050	Timer 2 Enable	Off (0) or On (1)			Off (0)	RW	Bit				US
09.051	Timer 2 Invert	Off (0) or On (1)		(Off (0)	RW	Bit				US
09.052	Timer 2 Output	Off (0) o	or On (1)			RO	Bit	ND	NC	PT	
09.053	Timer 2 Destination	0.000 to	30.999		0.000	RW	Num	DE		PT	US

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination
ΙP	IP address	Mac	Mac address	Date	Date parameter	Time	Time parameter	SMP	Slot,menu,parameter	Chr	Character parameter	Ver	Version number

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISTING

11.11 Menu 10: Status and trips

		Range (\$)	Default (⇒)			_			
	Parameter	OL RFC-A	OL RFC-A			Тур	oe		
10.001	Drive OK	Off (0) or On (1)		RO	Bit	ND	NC	PT	T
10.002	Drive Active	Off (0) or On (1)		RO	Bit	ND	NC	PT	
10.003	Zero Frequency	Off (0) or On (1)		RO	Bit	ND	NC	PT	
10.004	Running At Or Below Minimum Frequency	Off (0) or On (1)		RO	Bit	ND	NC	PT	
10.005	Below Set Frequency	Off (0) or On (1)		RO	Bit	ND	NC	PT	
10.006	At Frequency	Off (0) or On (1)		RO	Bit	ND	NC	PT	
10.007	Above Set Frequency	Off (0) or On (1)		RO	Bit	ND	NC	PT	
10.008	Rated Load Reached	Off (0) or On (1)		RO	Bit	ND	NC	PT	
10.009	Current Limit Active	Off (0) or On (1)		RO	Bit	ND	NC	PT	
10.010	Regenerating	Off (0) or On (1)		RO	Bit	ND	NC	PT	
10.011	Braking IGBT Active	Off (0) or On (1)		RO	Bit	ND	NC	PT	
10.012	Braking Resistor Alarm	Off (0) or On (1)		RO	Bit	ND	NC	PT	
10.013	Reverse Direction Commanded	Off (0) or On (1)		RO	Bit	ND	NC	PT	
10.014	Reverse Direction Running	Off (0) or On (1)		RO	Bit	ND	NC	PT	
10.015	Supply Loss	Off (0) or On (1)		RO	Bit	ND	NC	PT	
10.016	Under Voltage Active	Off (0) or On (1)		RO	Bit	ND	NC	PT	<u> </u>
10.017	Motor Overload Alarm	Off (0) or On (1)		RO	Bit	ND	NC	PT	<u> </u>
10.018	Drive Over-temperature Alarm	Off (0) or On (1)		RO	Bit	ND	NC	PT	<u> </u>
10.019	Drive Warning	Off (0) or On (1)		RO	Bit	ND	NC	PT	L
10.020	Trip 0	0 to 255		RO	Txt	ND	NC	PT	PS
10.021	Trip 1	0 to 255		RO	Txt	ND	NC	PT PT	PS PS
10.022	Trip 2	0 to 255		RO	Txt	ND	NC		
10.023	Trip 3	0 to 255		RO	Txt	ND	NC	PT PT	PS PS
10.024 10.025	Trip 4	0 to 255 0 to 255		RO RO	Txt Txt	ND ND	NC	PT	PS
10.025	Trip 5 Trip 6	0 to 255		RO	Txt	ND	NC NC	PT	PS
10.026	Trip 7	0 to 255		RO	Txt	ND	NC	PT	PS
10.027	Trip 8	0 to 255		RO	Txt	ND	NC	PT	PS
10.029	Trip 9	0 to 255		RO	Txt	ND	NC	PT	PS
10.029	Braking Resistor Rated Power	0.0 to 99999.9 kW	0.0 kW	RW	Num	IND	NC	FI	US
10.031	Braking Resistor Thermal Time Constant	0.00 to 1500.00 s	0.00 kV	RW	Num				US
10.032	External Trip	Off (0) or On (1)	Off (0)	RW	Bit		NC		-
10.033	Drive Reset	Off (0) or On (1)	Off (0)	RW	Bit		NC		1
		NonE (0), 1 (1), 2 (2), 3 (3), 4 (4),							
10.034	Number Of Auto-reset Attempts	5 (5),inF (6)	NonE (0)	RW	Txt				US
10.035	Auto-reset Delay	0.0 to 600.0 s	1.0 s	RW	Num				US
10.036	Auto-reset Hold Drive OK	Off (0) or On (1)	Off (0)	RW	Bit				US
10.037	Action On Trip Detection	0 to 31	0	RW	Num				US
10.038	User Trip	0 to 255		RW	Num	ND	NC		
10.039	Braking Resistor Thermal Accumulator	0.0 to 100.0 %		RO	Num	ND	NC	PT	
10.040	Status Word	0 to 32767		RO	Num	ND	NC	PT	D0
10.041	Trip 0 Date Trip 0 Time	00-00-00 to 31-12-99		RO	Date	ND	NC	PT	PS PS
10.042	'	00:00:00 to 23:59:59 00-00-00 to 31-12-99		RO RO	Time	ND ND	NC	PT PT	PS
10.043 10.044	Trip 1 Date Trip 1 Time	00:00:00 to 31-12-99 00:00:00 to 23:59:59		RO	Date Time	ND	NC NC	PT	PS
10.044	Trip 2 Date	00.00.00 to 23.59.59 00-00-00 to 31-12-99		RO	Date	ND	NC	PT	PS
10.045	Trip 2 Time	00:00:00 to 23:59:59		RO	Time	ND	NC	PT	PS
10.046	Trip 3 Date	00-00-00 to 31-12-99		RO	Date	ND	NC	PT	PS
10.047	Trip 3 Time	00:00:00 to 23:59:59		RO	Time	ND	NC	PT	PS
10.049	Trip 4 Date	00-00-00 to 31-12-99		RO	Date	ND	NC	PT	PS
10.050	Trip 4 Time	00:00:00 to 23:59:59		RO	Time	ND	NC	PT	PS
10.051	Trip 5 Date	00-00-00 to 31-12-99		RO	Date	ND	NC	PT	PS
10.052	Trip 5 Time	00:00:00 to 23:59:59		RO	Time	ND	NC	PT	PS
10.053	Trip 6 Date	00-00-00 to 31-12-99		RO	Date	ND	NC	PT	PS
10.054	Trip 6 Time	00:00:00 to 23:59:59		RO	Time	ND	NC	PT	PS
10.055	Trip 7 Date	00-00-00 to 31-12-99		RO	Date	ND	NC	PT	PS
10.056	Trip 7 Time	00:00:00 to 23:59:59		RO	Time	ND	NC	PT	PS
10.057	Trip 8 Date	00-00-00 to 31-12-99		RO	Date	ND	NC	PT	PS
10.058	Trip 8 Time	00:00:00 to 23:59:59		RO	Time	ND	NC	PT	PS
	'								

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostica	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISTING

	Devementer	Rang	ge (‡)	Defa	ult (⇔)			Typ			
	Parameter	OL	RFC-A	OL	RFC-A			ıyı	e		
10.059	Trip 9 Date	00-00-00 1	to 31-12-99		•	RO	Date	ND	NC	PT	PS
10.060	Trip 9 Time	00:00:00	to 23:59:59			RO	Time	ND	NC	PT	PS
10.061	Braking Resistor Resistance	0.00 to 1	0000.00 Ω	0.0	0 Ω	RW	Num				US
10.064	Remote Keypad Battery Low	Off (0)	or On (1)			RO	Bit	ND	NC	PT	
10.065	Autotune Active	Off (0)	or On (1)			RO	Bit	ND	NC	PT	
10.066	Limit Switch Active	Off (0)	or On (1)			RO	Bit	ND	NC	PT	
10.068	Hold Drive Healthy On Under Voltage	Off (0)	or On (1)	Of	f (0)	RW	Bit				US
10.069	Additional Status Bits	0 to	2047			RO	Num	ND	NC	PT	
10.070	Trip 0 Sub-trip Number	0 to (65535			RO	Num	ND	NC	PT	PS
10.071	Trip 1 Sub-trip Number	0 to (65535			RO	Num	ND	NC	PT	PS
10.072	Trip 2 Sub-trip Number	0 to (65535			RO	Num	ND	NC	PT	PS
10.073	Trip 3 Sub-trip Number	0 to (65535			RO	Num	ND	NC	PT	PS
10.074	Trip 4 Sub-trip Number	0 to (65535			RO	Num	ND	NC	PT	PS
10.075	Trip 5 Sub-trip Number	0 to (65535			RO	Num	ND	NC	PT	PS
10.076	Trip 6 Sub-trip Number	0 to (65535			RO	Num	ND	NC	PT	PS
10.077	Trip 7 Sub-trip Number	0 to (65535			RO	Num	ND	NC	PT	PS
10.078	Trip 8 Sub-trip Number	0 to (65535			RO	Num	ND	NC	PT	PS
10.079	Trip 9 Sub-trip Number	0 to (65535			RO	Num	ND	NC	PT	PS
10.080	Stop Motor	Off (0)	or On (1)			RO	Bit	ND	NC	PT	
10.081	Phase Loss	Off (0)	or On (1)			RO	Bit	ND	NC	PT	
10.090	Drive Ready	Off (0)	or On (1)			RO	Bit	ND	NC	PT	
10.101	Drive Status	rES (4), S.Los dc.inJ (7), rEs ActivE (10), rEs	StoP (2), rES (3), SS (5), rES (6), S (8), Error (9), S (11), rES (12), At (14), UU (15)			RO	Txt	ND	NC	PT	
10.102	Trip Reset Source	0 to	1023			RO	Num	ND	NC	PT	PS
10.103	Trip Time Identifier	-2147483648 to	2147483647 ms			RO	Num	ND	NC	PT	
10.104	Active Alarm	rES (3), d.OV.L LS (6), rES (7), rE rES (10) rES(12), Lo.AC	S (1), OV.Ld (2), d (4), tuning (5), ES (8), OPt.AL (9), , rES (11), (13), I.AC.Lt (14), St (15)			RO	Txt	ND	NC	PT	
10.106	Potential Drive Damage Conditions	0 to 3				RO	Bin	ND	NC	PT	PS
10.107	Low AC Alarm	` '	or On (1)			RO	Bit	ND	NC	PT	
10.108	Reversed cooling fan detected	Off (0)			RO	Bit	ND	NC	PT		

RV	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
NE	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination
IP	IP address	Mac	Mac address	Date	Date parameter	Time	Time parameter	SMP	Slot,menu,parameter	Chr	Character parameter	Ver	Version number

Safety Product Mechanical Electrical Getting Basic Running the information installation installation started parameters motor Optimization NV Media Onboard Card PLC Diagnostics UL Listing

11.12 Menu 11: General drive set-up

	Doromotor	Range (‡)	Default (⇔)			T			
	Parameter	OL RFC-A	OL RFC-A			Тур	e		
11.018	Status Mode Parameter 1	0.000 to 30.999	2.001	RW	Num			PT	US
11.019	Status Mode Parameter 2	0.000 to 30.999	4.020	RW	Num			PT	US
11.020	Reset Serial Communications	Off (0) or On (1)		RW	Bit	ND	NC		
11.021	Customer Defined Scaling	0.000 to 10.000	1.000	RW	Num				US
11.022	Parameter Displayed At Power-up	0.000 to 0.095	0.010	RW	Num			PT	US
11.023	Serial Address	1 to 247	1	RW	Num				US
11.024	Serial Mode	8.2NP (0), 8.1NP (1), 8.1EP (2), 8.1OP (3), 8.2NP E (4), 8.1NP E (5), 8.1EP E (6), 8.1OP E (7), 7.1EP (8), 7.1OP (9), 7.1EP E (10), 7.1OP E (11)	8.2NP (0)	RW	Txt				US
11.025	Serial Baud Rate	600 (1), 1200 (2), 2400 (3), 4800 (4), 9600 (5), 19200 (6), 38400 (7), 57600 (8), 76800 (9), 115200 (10)	19200 (6)	RW	Txt				US
11.026	Minimum Comms Transmit Delay	0 to 250 ms	2 ms	RW	Num				US
11.027	Silent Period	0 to 250 ms	0 ms	RW	Num				US
11.028	Drive Derivative	0 to 255		RO	Num	ND	NC	PT	
11.029	Software Version	00.00.00 to 99.99.99		RO	Ver	ND	NC	PT	
11.030	User Security Code	0 to 9999		RW	Num	ND		PT	US
11.031	User Drive Mode	OPEn.LP (1), rFC-A (2)		RW	Txt	ND	NC	PT	US
11.032	Maximum Heavy Duty Rating	0.00 to Drive HD Current Rating A		RO	Num	ND	NC	PT	
11.033	Drive Rated Voltage	110V (0), 200V (1), 400V (2), 575V (3), 690V (4)		RO	Txt	ND	NC	PT	
11.034	Drive Configuration	AV (0), AI (1), AV.Pr (2), AI.Pr (3), PrESEt (4), PAd (5), PAd.rEF (6), E.Pot (7), torquE (8), Pid (9)	AV (0)*	RW	Txt			РТ	US
11.035	Power Software Version	00.00.00 to 99.99.99		RO	Ver	ND	NC	PT	
11.036	NV Media Card File Previously Loaded	0 to 999	0	RO	Num		NC	PT	
11.037	NV Media Card File Number	0 to 999	0	RW	Num				
11.038	NV Media Card File Type	NonE (0), OPEn.LP (1), rFC-A (2)		RO	Txt	ND	NC	PT	
11.039	NV Media Card File Version	0 to 9999		RO	Num	ND	NC	PT	-
11.000	14V Media Gara File Version	NonE (0), rEAd (1), Prog (2),			IVaiii	IND			-
11.042	Parameter Cloning Load Defaults	Auto (3), boot (4) NonE (0), Std (1), US (2)	NonE (0)	RW	Txt Txt		NC NC		US
44.044	Lloor Coough, Status	LEVEL.1 (0), LEVEL.2 (1), ALL (2),	L EV/EL 4 (0)	DW	Tut	ND		PT	
11.044	User Security Status	StAtUS (3), no.Acc (4)	LEVEL.1 (0)	RW	Txt	ND		PI	
11.045	Select Motor 2 Parameters	1 (0), 2 (1)	1 (0)	RW	Txt				US
11.046	Defaults Previously Loaded	0 to 2000		RO	Num	ND	NC	PT	US
11.047	Onboard User Program: Enable	Stop (0), Run (1)	Run (1)	RW	Txt				US
11.048	Onboard User Program: Status	-2147483648 to 2147483647		RO	Num	ND	NC	PT	
11.049	Onboard User Program: Programming Events	0 to 65535		RO	Num	ND	NC	PT	
11.050	Onboard User Program: Freewheeling Tasks Per Second	0 to 65535		RO	Num	ND	NC	PT	
11.051	Onboard User Program: Clock Task Time Used	0.0 to 100.0 %		RO	Num	ND	NC	PT	
11.052	Serial Number LS	0 to 999999		RO	Num	ND	NC	PT	<u> </u>
11.053	Serial Number MS	0 to 999999		RO	Num	ND	NC	PT	<u> </u>
11.054	Drive Date Code Onboard User Program: Clock Task Schedule Rate	0 to 9999 0 to 262128		RO RO	Num Num	ND ND	NC NC	PT PT	
11.060	Maximum Rated Current	0.0 to 266.0 A		RO	Num	ND	NC	PT	-
11.061	Full Scale Current Kc	0.0 to 498.0 A		RO	Num	ND	NC	PT	
11.063	Product Type	0.0 to 490.0 A		RO	Num	ND	NC	PT	
11.063	Product Type Product Identifier Characters	200 / 201		RO	Chr	ND	NC	PT	
11.064		0 to 999		RO		ND	NC	PT	
	Frame size and voltage code				Num				<u> </u>
11.066	Power Stage Identifier	0 to 255		RO	Num	ND	NC	PT	<u> </u>
11.067	Control Board Identifier	0 to 255		RO	Num	ND	NC	PT	
11.068	Drive current rating	0 to 2240		RO	Num	ND	NC	PT	<u> </u>
11.070	Core Parameter Database Version	0.00 to 99.99		RO	Num	ND	NC	PT	
11.072	NV Media Card Create Special File	0 to 1	0	RW	Num		NC		
11.073	NV Media Card Type	NonE (0), rES (1), Sd.CArd (2)		RO	Num	ND	NC	PT	
11.075	NV Media Card Read-only Flag	Off (0) or On (1)		RO	Bit	ND	NC	PT	
11.076	NV Media Card Warning Suppression Flag	Off (0) or On (1)		RO	Bit	ND	NC	PT	
11.077	NV Media Card File Required Version	0 to 9999		RW	Num	ND	NC	PT	
11.079	Drive Name Characters 1-4	(-2147483648) to 0000 (-2147483647)	(757935405)	RW	Chr			PT	US
11.080	Drive Name Characters 5-8		(757935405)	RW	Chr			PT	US

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Оринидации	Card	PLC	parameters	Diagnostics	OL LIGHING


	Parameter	Rang	je (�)	Defa	ult (⇔)			Тур			
	Falametei	OL	RFC-A	OL	RFC-A			ıyı	Je		
11.081	Drive Name Characters 9-12		33648) to □□□□ 183647)	(75	7935405)	RW	Chr			PT	US
11.082	Drive Name Characters 13-16		33648) to □□□□ 183647)	(75	7935405)	RW	Chr			PT	US
11.084	Drive Mode	OPEn.LP (1), rFC-A (2)			RO	Txt	ND	NC	PT	
11.085	Security Status	NonE (0), r.onLy no.Ad	(//			RO	Txt	ND	NC	PT	PS
11.086	Menu Access Status	LEVEL.1 (0), LEV	/EL.2 (1), ALL (2)			RO	Txt	ND	NC	PT	PS
11.091	Additional Identifier Characters 1	(-2147483648) t	o (2147483647)			RO	Chr	ND	NC	PT	
11.092	Additional Identifier Characters 2	(-2147483648) t	o (2147483647)			RO	Chr	ND	NC	PT	
11.093	Additional Identifier Characters 3	(-2147483648) t	o (2147483647)			RO	Chr	ND	NC	PT	
11.094	Disable String Mode	Off (0) o	or On (1)	Of	f (0)	RW	Bit			PT	US
11.097	Al ID Code	NonE (0), Sd.CA boot (3),	rd (1), rS-485 (2), rS-485 (4)			RO	Txt	ND	NC	PT	
11.098	24V Alarm Loss Enable	Off (0) or On (1)			f (0)	RW	Bit				US
11.099	Modbus Parameter Conversion	0000 t	o 1111	00	000	RW	Bin				US

^{*} With Unidrive M201, the default is PAd (5).

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination
ΙP	IP address	Mac	Mac address	Date	Date parameter	Time	Time parameter	SMP	Slot,menu,parameter	Chr	Character parameter	Ver	Version number


Menu 12: Threshold detectors, variable selectors and brake control function 11.13

Figure 11-19 Menu 12 logic diagram

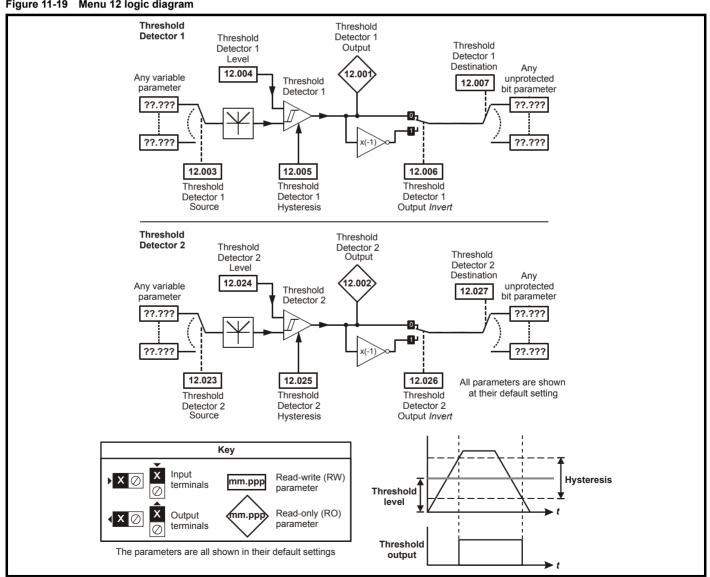

Safety Product Mechanical Electrical Getting Basic Running the NV Media Onboard Advanced UL Listing Diagnostics Optimization information information installation installation started parameters moto Card PLC

Figure 11-20 Menu 12 logic diagram (continued)

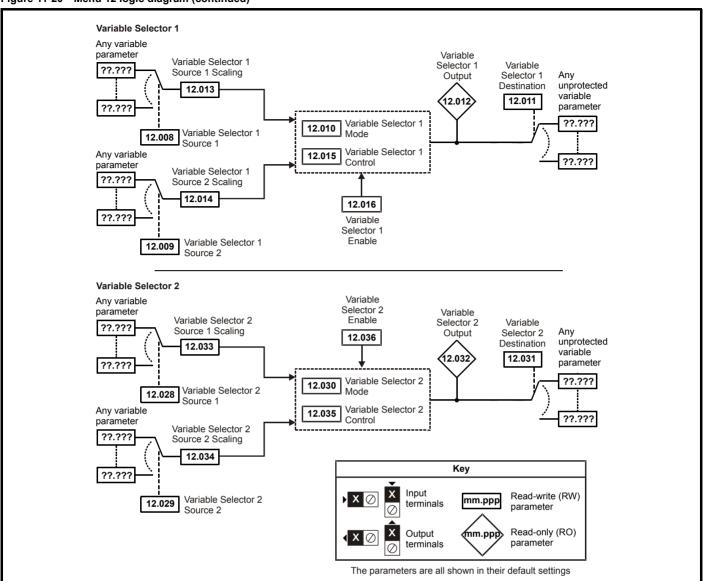

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	OL LISTING




The brake control functions are provided to allow well co-ordinated operation of an external brake with the drive. While both hardware and software are designed to high standards of quality and robustness, they are not intended for use as safety functions, i.e. where a fault or failure would result in a risk of injury. In any application where the incorrect operation of the brake release mechanism could result in injury, independent protection devices of proven integrity must also be incorporated.



The control terminal relay can be selected as an output to release a brake. If a drive is set up in this manner and a drive replacement takes place, prior to programming the drive on initial power up, the brake may be released.


When drive terminals are programmed to non default settings the result of incorrect or delayed programming must be considered. The use of an NV media card in boot mode can ensure drive parameters are immediately programmed to avoid this situation.


Figure 11-21 Open loop brake function

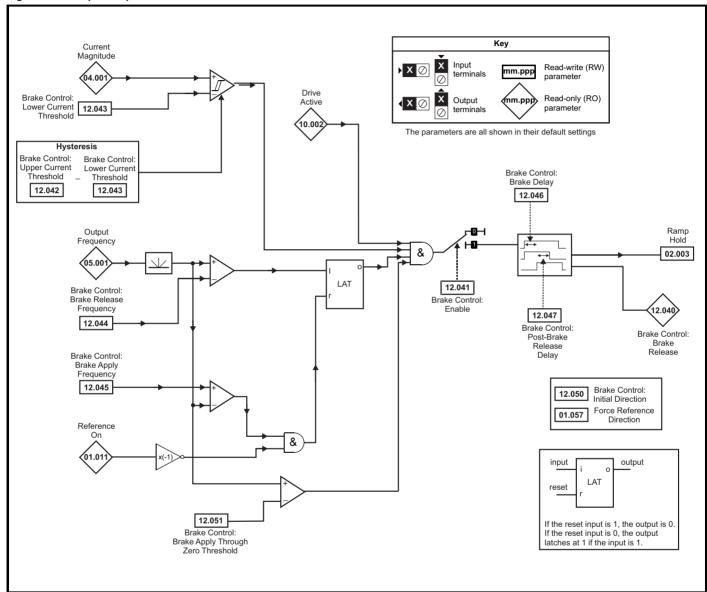

Safety Product Mechanical Electrical Getting Basic Running the NV Media Onboard Advanced Diagnostics **UL** Listing Optimization information information installation installation started parameters motor Card PLC parameters



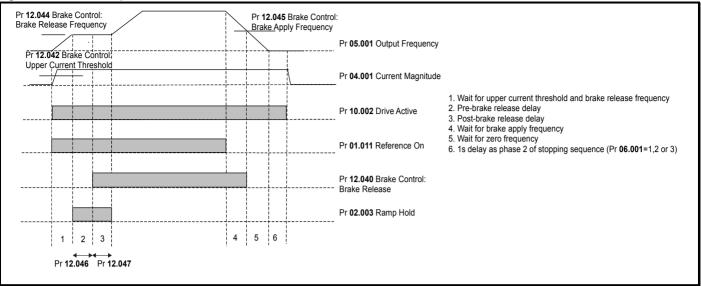

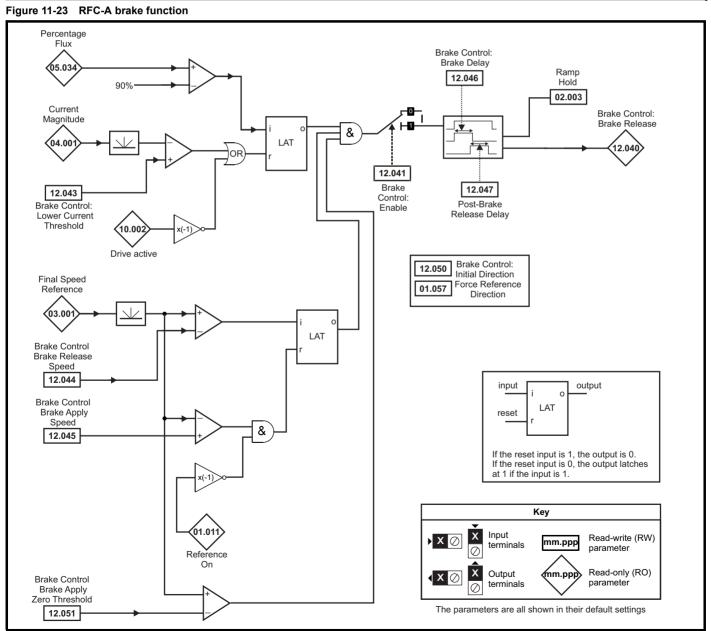

1	Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostica	III Lieting
	information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing


		Rang	je(�)	Defa	ult(⇔)			_			
	Parameter	OL	RFC-A	OL	RFC-A			Тур	е		
12.001	Threshold Detector 1 Output	Off (0) o	r On (1)			RO	Bit	ND	NC	PT	
12.002	Threshold Detector 2 Output	Off (0) o	r On (1)			RO	Bit	ND	NC	PT	
12.003	Threshold Detector 1 Source	0.000 to	30.999	0.	000	RW	Num			PT	US
12.004	Threshold Detector 1 Level	0.00 to 1	00.00 %	0.0	00 %	RW	Num				US
12.005	Threshold Detector 1 Hysteresis	0.00 to 2	25.00 %	0.0	00 %	RW	Num				US
12.006	Threshold Detector 1 Output Invert	Off (0) o	r On (1)	Of	f (0)	RW	Bit				US
12.007	Threshold Detector 1 Destination	0.000 to	30.999	0.	000	RW	Num	DE		PT	US
12.008	Variable Selector 1 Source 1	0.000 to	30.999	0.	000	RW	Num			PT	US
12.009	Variable Selector 1 Source 2	0.000 to	30.999	0.	000	RW	Num			PT	US
12.010	Variable Selector 1 Mode	0 (0), 1 (1), 2 (2), 6 (6), 7 (7),		0	(0)	RW	Txt				US
12.011	Variable Selector 1 Destination	0.000 to	30.999	0.	000	RW	Num	DE		PT	US
12.012	Variable Selector 1 Output	± 100	.00 %			RO	Num	ND	NC	PT	
12.013	Variable Selector 1 Source 1 Scaling	± 4.	000	1.	000	RW	Num				US
12.014	Variable Selector 1 Source 2 Scaling	± 4.	000	1.	000	RW	Num				US
12.015	Variable Selector 1 Control	0.00 to	100.00	0	.00	RW	Num				US
12.016	Variable Selector 1 Enable	Off (0) o	r On (1)	Oı	n (1)	RW	Bit				US
12.023	Threshold Detector 2 Source	0.000 to	30.999	0.	000	RW	Num			PT	US
12.024	Threshold Detector 2 Level	0.00 to 1	00.00 %	0.0	00 %	RW	Num				US
12.025	Threshold Detector 2 Hysteresis	0.00 to 2	25.00 %	0.0	00 %	RW	Num				US
12.026	Threshold Detector 2 Output Invert	Off (0) o	r On (1)	Ot	f (0)	RW	Bit				US
12.027	Threshold Detector 2 Destination	0.000 to	30.999	0.	000	RW	Num	DE		PT	US
12.028	Variable Selector 2 Source 1	0.000 to	30.999	0.	000	RW	Num			PT	US
12.029	Variable Selector 2 Source 2	0.000 to	30.999	0.	000	RW	Num			PT	US
12.030	Variable Selector 2 Mode	0 (0), 1 (1), 2 (5 (5), 6 (6), 7 (2), 3 (3), 4 (4), (7), 8 (8), 9 (9)	0	(0)	RW	Txt				US
12.031	Variable Selector 2 Destination	0.000 to	30.999	0.	000	RW	Num	DE		PT	US
12.032	Variable Selector 2 Output	± 100	.00 %			RO	Num	ND	NC	PT	
12.033	Variable Selector 2 Source 1 Scaling	± 4.	000	1.	000	RW	Num				US
12.034	Variable Selector 2 Source 2 Scaling	± 4.	000	1.	000	RW	Num				US
12.035	Variable Selector 2 Control	0.00 to	100.00	0	.00	RW	Num				US
12.036	Variable Selector 2 Enable	Off (0) o	r On (1)	Oı	n (1)	RW	Bit				US
12.040	BC Brake Release	Off (0) o	r On (1)			RO	Bit	ND	NC	PT	
12.041	BC Enable	diS (0), rELAy (1), o	dig IO (2), USEr (3)	dis	6 (0)	RW	Txt				US
12.042	BC Upper Current Threshold	0 to 2	00 %	5) %	RW	Num				US
12.043	BC Lower Current Threshold	0 to 2	00 %	1) %	RW	Num				US
12.044	BC Brake Release Frequency	0.00 to 2	20.00 Hz	1.0	0 Hz	RW	Num				US
12.045	BC Brake Apply Frequency	0.00 to 2	20.00 Hz	2.0	0 Hz	RW	Num				US
12.046	BC Brake Delay	0.0 to	25.0 s	1	0 s	RW	Num				US
12.047	BC Post-brake Release Delay	0.0 to	25.0 s	1	.0 s	RW	Num				US
12.050	BC Initial Direction	rEf (0), For	(1), rEv (2)	rE	f (0)	RW	Txt				US
12.051	BC Brake Apply Through Zero Threshold	0.00 to 2	25.00 Hz	1.0	0 Hz	RW	Num				US

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination


1	Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostics	III Licting
	information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

11.14 Menu 14: User PID controller

Figure 11-24 Menu 14 Logic diagram

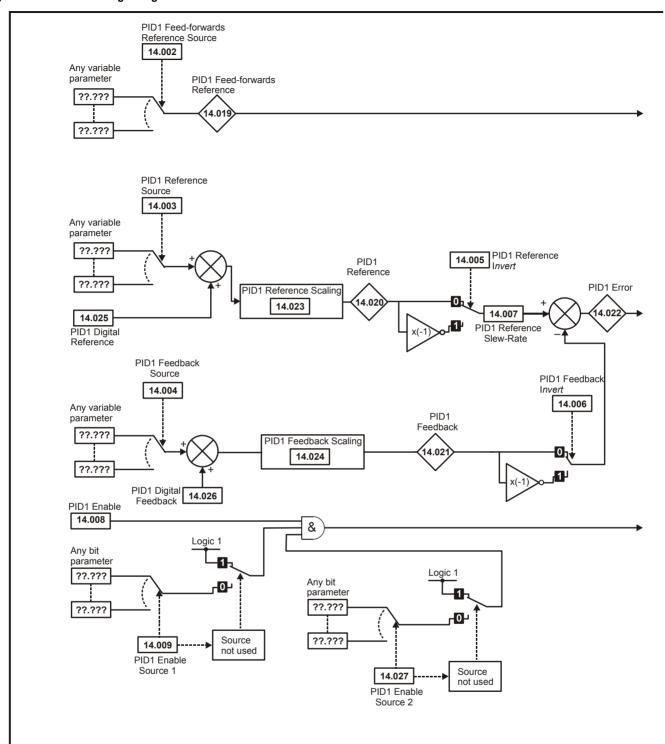

Safety information Running the motor Advanced parameters Product Mechanical Electrical Getting Basic NV Media Onboard **UL** Listing Optimization Diagnostics information installation installation started parameters Card PLC

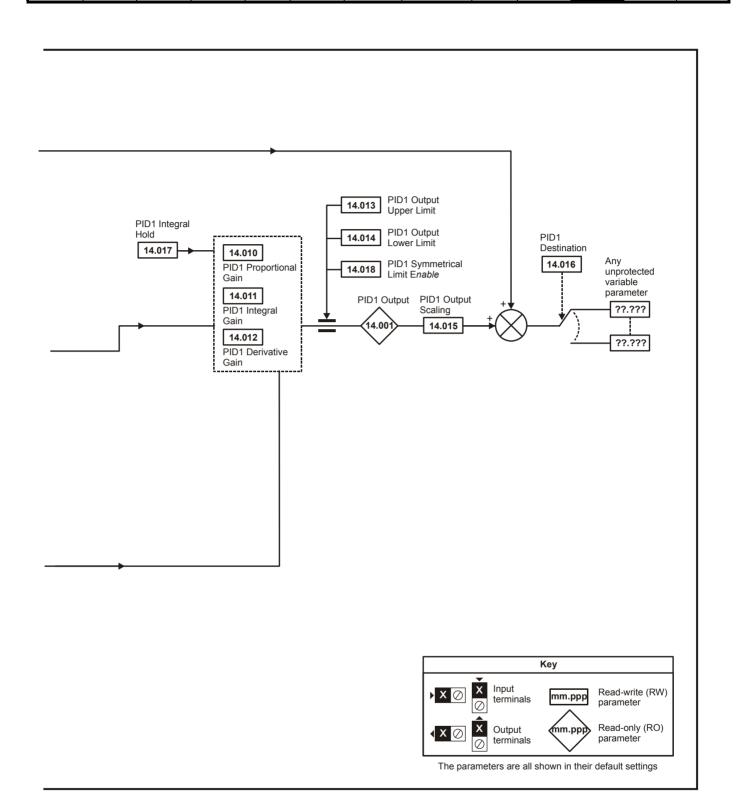


Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontingination	NV Media	Onboard	Advanced	Diamontina	III I indian
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

Deventer	Ran	ge (\$)	Defa	ult (⇔)			т			
Parameter	OL	RFC-A	OL	RFC-A	1		Ту	oe		
14.001 PID1 Output	± 10	0.00 %			RO	Num	ND	NC	PT	
14.002 PID1 Feed-forwards Reference Sou	rce 0.000	to 30.999	0.	000	RW	Num			PT	US
14.003 PID1 Reference Source	0.000	to 30.999	0.	000	RW	Num			PT	US
14.004 PID1 Feedback Source	0.000	to 30.999	0.	000	RW	Num			PT	US
14.005 PID1 Reference Invert	Off (0)	or On (1)	Of	f (0)	RW	Bit				US
14.006 PID1 Feedback Invert	Off (0)	or On (1)	Of	f (0)	RW	Bit				US
14.007 PID1 Reference Slew Rate	0.0 to	3200.0 s	0.	0 s	RW	Num				US
14.008 PID1 Enable	Off (0)	or On (1)	Of	f (0)	RW	Bit				US
14.009 PID1 Enable Source 1	0.000	to 30.999	0.	000	RW	Num			PT	US
14.010 PID1 Proportional Gain	0.000	to 4.000	1.	000	RW	Num				US
14.011 PID1 Integral Gain	0.000	to 4.000	0.	500	RW	Num				US
14.012 PID1 Differential Gain	0.000	to 4.000	0.	000	RW	Num				US
14.013 PID1 Output Upper Limit	0.00 to	0.00 to 100.00 %		.00 %	RW	Num				US
14.014 PID1 Output Lower Limit	± 10	0.00 %	-100	.00 %	RW	Num				US
14.015 PID1 Output Scaling	0.000	to 4.000	1.	000	RW	Num				US
14.016 PID1 Destination	0.000	to 30.999	0.	000	RW	Num	DE		PT	US
14.017 PID1 Integral Hold	Off (0)	or On (1)	Of	f (0)	RW	Bit				
14.018 PID1 Symmetrical Limit Enable	Off (0)	or On (1)	Of	f (0)	RW	Bit				US
14.019 PID1 Feed-forwards Reference	± 10	0.00 %			RO	Num	ND	NC	PT	
14.020 PID1 Reference	± 10	0.00 %			RO	Num	ND	NC	PT	
14.021 PID1 Feedback	± 10	0.00 %			RO	Num	ND	NC	PT	
14.022 PID1 Error	± 10	0.00 %			RO	Num	ND	NC	PT	
14.023 PID1 Reference Scaling	0.000	to 4.000	1.	000	RW	Num				US
14.024 PID1 Feedback Scaling	0.000	to 4.000	1.	000	RW	Num				US
14.025 PID1 Digital Reference	± 10	0.00 %	0.0	0 %	RW	Num				US
14.026 PID1 Digital Feedback	± 10	0.00 %	0.0	0 %	RW	Num				US
14.027 PID1 Enable Source 2	0.000	to 30.999	0.	000	RW	Num			PT	US

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostics	III Lietina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

11.15 Menu 15: Option module set-up
Figure 11-25 Location of option module slot and its corresponding menu number

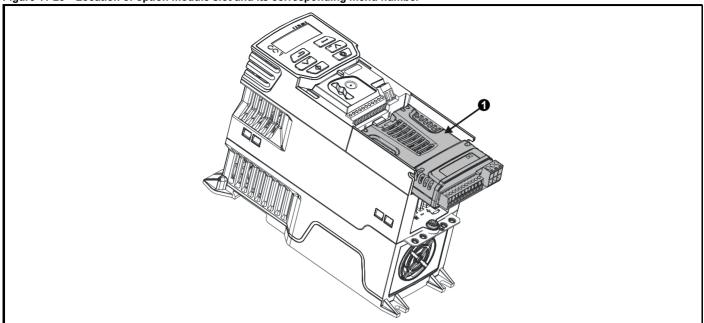

Option Module Slot 1 - Menu 15

11.15.1 Parameters common to all categories

Р	arameter	Range(↕)	Default(⇔)			Тур	эе	
15.001 Module	ID	0 to 65535		RO	Num	ND	NC	PT
15.002 Software	e Version	00.00.00 to 99.99.99		RO	Ver	ND	NC	PT
15.003 Hardwa	re Version	0.00 to 99.99		RO	Num	ND	NC	PT
15.004 Serial N	umber LS	0 to 999999		RO	Num	ND	NC	PT
15.005 Serial N	umber MS	0 10 999999		RO	Num	ND	NC	PT
15.006 Module	Status	-2 to 3		RO	Txt	ND	NC	PT
15.007 Module	Reset	Off (0) or On (1)	Off (0)	RW	Bit		NC	

The option module ID indicates the type of module that is installed in the corresponding slot. See the relevant option module user guide for more information regarding the module.

Option module ID	Module	Category
0	No module installed	
209	SI-I/O	Automation (I/O Expansion)
431	SI-EtherCAT	
433	SI-Ethernet	7
434	SI-PROFINET V2	Fieldbus
443	SI-PROFIBUS	- Tieldbus
447	SI-DeviceNet	
448	SI-CANopen	7

Safety Product Mechanical Electrical Getting Basic Formation installation installation installation started parameters motor Optimization Optimization NV Media Card PLC PLC Diagnostics UL Listing

11.16 Menu 18: Application menu 1

		Ran	ge (\$)	De	fault(⇔)			_		
	Parameter	OL	RFC-A	OL	RFC-A	1		Тур	е	
18.001	Application Menu 1 Power-down Save Integer	Ì	<u>l</u>		Ö	RW	Num			PS
18.002	Application Menu 1 Read-only Integer 2	1				RO	Num	ND	NC	
18.003	Application Menu 1 Read-only Integer 3					RO	Num	ND	NC	
18.004	Application Menu 1 Read-only Integer 4					RO	Num	ND	NC	
18.005	Application Menu 1 Read-only Integer 5					RO	Num	ND	NC	
18.006	Application Menu 1 Read-only Integer 6					RO	Num	ND	NC	
18.007	Application Menu 1 Read-only Integer 7					RO	Num	ND	NC	
18.008	Application Menu 1 Read-only Integer 8					RO	Num	ND	NC	
18.009	Application Menu 1 Read-only Integer 9					RO	Num	ND	NC	
18.010	Application Menu 1 Read-only Integer 10					RO	Num	ND	NC	
18.011	Application Menu 1 Read-write Integer 11					RW	Num			US
18.012	Application Menu 1 Read-write Integer 12					RW	Num			US
18.013	Application Menu 1 Read-write Integer 13					RW	Num			US
18.014	Application Menu 1 Read-write Integer 14					RW	Num			US
18.015	Application Menu 1 Read-write Integer 15	-32768	to 32767			RW	Num			US
18.016	Application Menu 1 Read-write Integer 16	-32100	10 02101			RW	Num			US
18.017	Application Menu 1 Read-write Integer 17					RW	Num			US
18.018	Application Menu 1 Read-write Integer 18					RW	Num			US
18.019	Application Menu 1 Read-write Integer 19					RW	Num			US
18.020	Application Menu 1 Read-write Integer 20				0	RW	Num			US
18.021	Application Menu 1 Read-write Integer 21				· ·	RW	Num			US
18.022	Application Menu 1 Read-write Integer 22					RW	Num			US
18.023	Application Menu 1 Read-write Integer 23					RW	Num			US
18.024	Application Menu 1 Read-write Integer 24					RW	Num			US
18.025	Application Menu 1 Read-write Integer 25					RW	Num			US
18.026	Application Menu 1 Read-write Integer 26					RW	Num			US
18.027	Application Menu 1 Read-write Integer 27					RW	Num			US
18.028	Application Menu 1 Read-write Integer 28					RW	Num			US
18.029	Application Menu 1 Read-write Integer 29					RW	Num			US
18.030	Application Menu 1 Read-write Integer 30					RW	Num			US
18.031	Application Menu 1 Read-write bit 31					RW	Bit			US
18.032	Application Menu 1 Read-write bit 32					RW	Bit			US
18.033	Application Menu 1 Read-write bit 33					RW	Bit			US
18.034	Application Menu 1 Read-write bit 34					RW	Bit			US
18.035	Application Menu 1 Read-write bit 35	_				RW	Bit			US
18.036	Application Menu 1 Read-write bit 36					RW	Bit			US
18.037	Application Menu 1 Read-write bit 37					RW	Bit			US
18.038	Application Menu 1 Read-write bit 38	_				RW	Bit			US
18.039	Application Menu 1 Read-write bit 39					RW	Bit			US
18.040	Application Menu 1 Read-write bit 40	Off (0)	or On (1)	(Off (0)	RW	Bit			US
18.041	Application Menu 1 Read-write bit 41	Sii (0)	J. J. (1)	I `	J (J)	RW	Bit			US
18.042	Application Menu 1 Read-write bit 42	_				RW	Bit			US
18.043	Application Menu 1 Read-write bit 43	_				RW	Bit			US
18.044	Application Menu 1 Read-write bit 44	_				RW	Bit			US
18.045	Application Menu 1 Read-write bit 45					RW	Bit			US
18.046	Application Menu 1 Read-write bit 46					RW	Bit			US
18.047	Application Menu 1 Read-write bit 47	_				RW	Bit			US
18.048	Application Menu 1 Read-write bit 48					RW	Bit			US
18.049	Application Menu 1 Read-write bit 49					RW	Bit			US
18.050	Application Menu 1 Read-write bit 50			I		RW	Bit			US

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing
--------------------	---------------------	-------------------------	-------------------------	--------------------	------------------	-------------------	--------------	------------------	----------------	---------------------	-------------	------------

11.17 Menu 20: Application menu 2

	Parameter	Rang	je (‡)	Defa	ult (⇔)		т.	/pe	
	r ai ainetei	OL	RFC-A	OL	RFC-A		(1	/pe	
20.021	Application Menu 2 Read-write Long Integer 21					RW	Num		
20.022	Application Menu 2 Read-write Long Integer 22	1			RW	Num			
20.023	Application Menu 2 Read-write Long Integer 23	1				RW	Num		
20.024	Application Menu 2 Read write Long Integer 24	1				RW	Num		
20.025	Application Menu 2 Read-write Long Integer 25	2147492649	to 2147483647		0	RW	Num		
20.026	Application Menu 2 Read-write Long Integer 26	-2147403040	10 2147403047		U	RW	Num		
20.027	Application Menu 2 Read-write Long Integer 27	1				RW	Num		
20.028	Application Menu 2 Read-write Long Integer 28	1				RW	Num		
20.029	Application Menu 2 Read-write Long Integer 29	1				RW	Num		
20.030	Application Menu 2 Read-write Long Integer 30					RW	Num		

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

0.11	5		F1 1: 1	0 "	- ·	D : "		N / N / I'	0 1 1			
Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	III Lictina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

11.18 Menu 21: Second motor parameters

	Devementer	Range	· (�)	Defaul	t (⇒)			T	_		
	Parameter	OL	RFC-A	OL	RFC-A			Тур	e		
21.001	M2 Maximum Speed	0.00 to 55	0.00 Hz	50Hz: 50 60Hz: 60		RW	Num				US
21.002	M2 Minimum Speed	0.00 to Pr 2	1.001 Hz	0.0	0	RW	Num				US
21.003	M2 Reference Selector	A1.A2 (0), A1.Pr (1), A PAd (4), rES (5)		A1.A2	! (0)	RW	Txt				US
21.004	M2 Acceleration Rate 1	0.0 to 32000.	0 s/100 Hz	5.0 s/10	00 Hz	RW	Num				US
21.005	M2 Deceleration Rate 1	0.0 to 32000.	0 s/100 Hz	10.0 s/1	00 Hz	RW	Num				US
21.006	M2 Motor Rated Frequency	0.00 to 55	0.00 Hz	50Hz: 50 60Hz: 60		RW	Num		RA		US
21.007	M2 Motor Rated Current	0.00 to Drive	e Rating A	Maximum Heavy Du	ty Rating (11.032)	RW	Num		RA		US
21.008	M2 Motor Rated Speed	0.0 to 3300	00.0 rpm	50 Hz: 1500.0 rpm 60 Hz: 1800.0 rpm	50 Hz: 1450.0 rpm 60 Hz 1750.0 rpm	RW	Num				US
21.009	M2 Motor Rated Voltage	0 to 76	65 V	110 V driv 200 V driv 400 V drive 5 400 V drive 6 575 V drive 690 V drive	e: 230 V 0Hz: 400 V 0Hz: 460 V e: 575 V	RW	Num		RA		US
21.010	M2 Motor Rated Power Factor	0.00 to	1.00	0.8	5	RW	Num		RA		US
21.011	M2 Number of Motor Poles*	Auto (0) to	32 (16)	Auto	(0)	RW	Num				US
21.012	M2 Stator Resistance	0.0000 to 9	9.9999 Ω	0.000	0 Ω	RW	Num		RA		US
21.014	M2 Transient Inductance	0.000 to 50	0.000 mH	0.000	mH	RW	Num		RA		US
21.015	Motor 2 Active	Off (0) or	On (1)			RO	Bit	ND	NC	PT	
21.016	M2 Motor Thermal Time Constant 1	1 to 30	00 s	179 s	179 s	RW	Num				US
21.017	M2 Frequency Controller Proportional Gain Kp1		0.000 to 200.000 s/rad		0.100 s/rad	RW	Num				US
21.018	M2 Frequency Controller Integral Gain Ki1		0.00 to 655.35 s²/rad		0.10 s²/rad	RW	Num				US
21.019	M2 Frequency Controller Differential Feedback Gain Kd1		0.00000 to 0.65535 1/rad		0.00000 1/rad	RW	Num				US
21.022	M2 Current Controller Kp Gain	0.00 to 4	000.00	20.0	00	RW	Num				US
21.023	M2 Current Controller Ki Gain	0.000 to 6	600.000	40.00	00	RW	Num				US
21.024	M2 Stator Inductance	0.00 to 500	0.00 mH	1 00.0	mH	RW	Num		RA		US
21.025	M2 Saturation Breakpoint 1		0.0 to 100.0 %		50.0 %	RW	Num				US
21.026	M2 Saturation Breakpoint 3		0.0 to 100.0 %		75.0 %	RW	Num				US
21.027	M2 Motoring Current Limit	0.0 to VM_MOTOR2_0	-	165.0 %**	175.0 %***	RW	Num		RA		US
21.028	M2 Regenerating Current Limit	0.0 to VM_MOTOR2_0	_	165.0 %**	175.0 %***	RW	Num		RA		US
21.029	M2 Symmetrical Current Limit	0.0 to VM_MOTOR2_0	CURRENT_LIMIT %	165.0 %**	175.0 %***	RW	Num		RA		US
21.033	M2 Low Frequency Thermal Protection Mode	0 to	0		RW	Num				US	
21.041	M2 Saturation Breakpoint 2			0.0 %	RW	Num				US	
21.042	M2 Saturation Breakpoint 4		0.0 to 100.0 %		0.0 %	RW	Num				US

^{*} When read via serial communications, this parameter will show pole pairs.

^{***} For size 9, the default is 150.0 %.

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

^{**} For size 9, the default is 141.9 %.

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	nostics	UL Listina
information	information	installation	installation	started	parameters	motor	Оршнігаціон	Card	PLC	parameters	HUSLICS	OL LISTING

11.19 Menu 22: Additional Menu 0 set-up

	Damanatan	Range(ᡎ)	Defau	lt(⇔)	T		T	_	
	Parameter	OL RFC-A	OL	RFC-A			Тур	e	
22.011	Parameter 00.011 Set-up	0.000 to 30.999	6.0	04	RW	Num		P	US
22.012	Parameter 00.012 Set-up	0.000 to 30.999	0.0	00	RW	Num		P	US
22.013	Parameter 00.013 Set-up	0.000 to 30.999	0.0	00	RW	Num		P	US
22.014	Parameter 00.014 Set-up	0.000 to 30.999	0.0	00	RW	Num		P	US
22.015	Parameter 00.015 Set-up	0.000 to 30.999	1.0	05	RW	Num		P	US
22.016	Parameter 00.016 Set-up	0.000 to 30.999	7.0	07	RW	Num		P	US
22.017	Parameter 00.017 Set-up	0.000 to 30.999	1.0	10	RW	Num		P	US
22.018	Parameter 00.018 Set-up	0.000 to 30.999	1.03	21	RW	Num		P	US
22.019	Parameter 00.019 Set-up	0.000 to 30.999	1.03	22	RW	Num		P	US
22.020	Parameter 00.020 Set-up	0.000 to 30.999	1.03	23	RW	Num		P	US
22.021	Parameter 00.021 Set-up	0.000 to 30.999	1.03	24	RW	Num		P	US
22.022	Parameter 00.022 Set-up	0.000 to 30.999	11.0	19	RW	Num		P	US
22.023	Parameter 00.023 Set-up	0.000 to 30.999	11.0	18	RW	Num		P	US
22.024	Parameter 00.024 Set-up	0.000 to 30.999	11.0	21	RW	Num		P	US
22.025	Parameter 00.025 Set-up	0.000 to 30.999	11.0	30	RW	Num		P	US
22.026	Parameter 00.026 Set-up	0.000 to 30.999	0.0	00	RW	Num		P	US
22.027	Parameter 00.027 Set-up	0.000 to 30.999	1.0	51	RW	Num		P	US
22.028	Parameter 00.028 Set-up	0.000 to 30.999	2.0	04	RW	Num		P	US
22.029	Parameter 00.029 Set-up	0.000 to 30.999	0.000	2.002	RW	Num		P	
22.030	Parameter 00.030 Set-up	0.000 to 30.999	11.0	42	RW	Num		P	US
22.031	Parameter 00.031 Set-up	0.000 to 30.999	6.0	01	RW	Num		P	
22.032	Parameter 00.032 Set-up	0.000 to 30.999	5.0	13	RW	Num		P	US
22.033	Parameter 00.033 Set-up	0.000 to 30.999	6.0	09	RW	Num		P	US
22.034	Parameter 00.034 Set-up	0.000 to 30.999	8.03	35	RW	Num		P	
22.035	Parameter 00.035 Set-up	0.000 to 30.999	8.09	91	RW	Num		P	
22.036	Parameter 00.036 Set-up	0.000 to 30.999	7.0	55	RW	Num		P	
22.037	Parameter 00.037 Set-up	0.000 to 30.999	5.0		RW	Num		P	
22.038	Parameter 00.038 Set-up	0.000 to 30.999	5.0		RW	Num		P	
22.039	Parameter 00.039 Set-up	0.000 to 30.999	5.0		RW	Num		P	
22.040	Parameter 00.040 Set-up	0.000 to 30.999	5.0		RW	Num		P	
22.041	Parameter 00.041 Set-up	0.000 to 30.999	5.0		RW	Num		P	
22.042	Parameter 00.042 Set-up	0.000 to 30.999	5.0		RW	Num		P	
22.043	Parameter 00.043 Set-up	0.000 to 30.999	11.0		RW	Num		P	
22.044	Parameter 00.044 Set-up	0.000 to 30.999	11.0		RW	Num		P	
22.045	Parameter 00.045 Set-up	0.000 to 30.999	11.0		RW	Num		P	
22.046	Parameter 00.046 Set-up	0.000 to 30.999	12.0		RW	Num		P	
22.047	Parameter 00.047 Set-up	0.000 to 30.999	12.0		RW	Num		P	
22.048	Parameter 00.048 Set-up	0.000 to 30.999	12.0		RW	Num		P	
22.049	Parameter 00.049 Set-up	0.000 to 30.999	12.0		RW	Num		P	
22.050	Parameter 00.050 Set-up Parameter 00.051 Set-up	0.000 to 30.999 0.000 to 30.999	12.0 12.0		RW	Num		P ¹	
22.051	Parameter 00.051 Set-up Parameter 00.052 Set-up	0.000 to 30.999	0.0		RW	Num		P	
22.052	Parameter 00.053 Set-up	0.000 to 30.999	12.0		RW	Num		P	
22.054	Parameter 00.053 Set-up	0.000 to 30.999	12.0		RW	Num		P	
22.055	Parameter 00.055 Set-up	0.000 to 30.999	12.0		RW	Num		P	
22.056	Parameter 00.056 Set-up	0.000 to 30.999	10.0		RW	Num		P	
22.057	Parameter 00.057 Set-up	0.000 to 30.999	10.0		RW	Num		P	_
22.058	Parameter 00.058 Set-up	0.000 to 30.999	10.0		RW	Num		P	
22.059	Parameter 00.059 Set-up	0.000 to 30.999	11.0		RW	Num		P	
22.060	Parameter 00.060 Set-up	0.000 to 30.999	11.0		RW	Num		P	
22.061	Parameter 00.061 Set-up	0.000 to 30.999	0.0		RW	Num		P	
22.062	Parameter 00.062 Set-up	0.000 to 30.999	0.0		RW	Num		P	
22.063	Parameter 00.063 Set-up	0.000 to 30.999	0.0	00	RW	Num		P	US
22.064	Parameter 00.064 Set-up	0.000 to 30.999	0.000			Num		P	US
22.065	Parameter 00.065 Set-up	0.000 to 30.999	0.000 3.010			Num		P	US
22.066	Parameter 00.066 Set-up	0.000 to 30.999	0.000 3.011			Num		P	US
22.067	Parameter 00.067 Set-up	0.000 to 30.999	0.000	3.079	RW	Num		P	US
	· · · · · · · · · · · · · · · · · · ·			l		1			

Safety informatio	Product n information	Mechar installa		ectrical tallation	Getting started	Basic parameters		nning the motor	Optimiza	ation	NV Media Card	Onboard PLC	Adva param		Diagno	ostics	UL Li	sting
	Parar	motor				Range	(\$)				Default(⇔)				Тур			
	Faiai	netei			OL			RFC-A		OL		RFC-A			ıyı	Je		
22.068	Parameter 00.	.068 Set-	-up			0.000 to	30.999)		0.000)	0.000	RW	Num			PT	US
22.069	Parameter 00.	.069 Set-	-up			0.000 to	30.999)			5.040		RW	Num			PT	US
22.070	Parameter 00.	.070 Set-	-up			0.000 to	30.999)			14.001		RW	Num			PT	US
22.071	Parameter 00.	.071 Set-	-up			0.000 to	30.999)			14.010		RW	Num			PT	US
22.072	Parameter 00.	.072 Set-	-up			0.000 to	30.999)			14.011		RW	Num			PT	US
22.073	Parameter 00.	.073 Set-	-up			0.000 to	30.999)			14.006		RW	Num			PT	US
22.074	Parameter 00.			0.000 to	30.999)			14.013		RW	Num			PT	US		
22.075	Parameter 00.	.075 Set-	-up			0.000 to	30.999)			14.014		RW	Num			PT	US
22.076	Parameter 00.	.076 Set-	-up			0.000 to	30.999)			10.037		RW	Num			PT	US
22.077	Parameter 00.	.077 Set-	-up			0.000 to	30.999)			11.032		RW	Num			PT	US
22.078	Parameter 00.	.078 Set-	-up			0.000 to	30.999)			11.029		RW	Num			PT	US
22.079	Parameter 00.	.079 Set-			0.000 to	30.999)			11.031		RW	Num			PT	US	
22.080	2.080 Parameter 00.080 Set-up					0.000 to	30.999)			0.000		RW	Num			PT	US
															•		٠	
RW Rea	N Read / Write RO Read only Num				Number pa	rameter	Bit	Bit paran	neter	Txt	Text string	Bin	Binary p	aramet	er	FI	Filtere	b
ND No	default value	NC No	ot copied	PT	Protected p	parameter	RA	Rating de	ependent	US	User save	PS	Power-d	own sa	ive	DE	Destina	ation

11.20 Menu 24: Option Module Application

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing
--------------------	---------------------	-------------------------	-------------------------	--------------------	------------------	-------------------	--------------	------------------	----------------	---------------------	-------------	------------

12 **Diagnostics**

The keypad display on the drive gives various information about the status of the drive. The keypad display provides information on the following categories:


- Trip indications
- Alarm indications
- Status indications



Users must not attempt to repair a drive if it is faulty, nor carry out fault diagnosis other than through the use of the diagnostic features described in this chapter. If a drive is faulty, it must be returned to an authorized Control Techniques distributor for repair.

Status modes (Keypad and LED status) 12.1

Figure 12-1 Keypad status modes

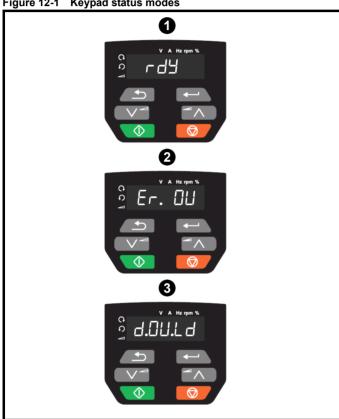

- Drive OK status
- 2 Trip status
- Alarm status

12.2 Trip indications

The output of the drive is disabled under any trip condition so that the drive stops controlling the motor. If the motor is running when the trip occurs it will coast to a stop.

During a trip condition, the display indicates that a trip has occurred and the keypad will display the trip string. Some trips have a sub-trip number to provide additional information about the trip. If a trip has a sub-trip number, the sub-trip number is flashed alternately with the trip string.

Trips are listed alphabetically in Table 12-2 based on the trip indication shown on the drive display. Alternatively, the drive status can be read in Pr 10.001 'Drive OK' using communication protocols. The most recent trip can be read in Pr 10.020 providing a trip number. It must be noted that the hardware trips (HF01 to HF23) do not have trip numbers. The trip number must be checked in Table 12-2 to identify the specific trip.

Example

- 1. Trip code 2 is read from Pr 10.020 via serial communications.
- 2. Checking Table 12-3 shows Trip 2 is an OV trip.



- Look up OV in Table 12-2.
- Perform checks detailed under Diagnosis.

Identifying a trip / trip source 12.3

Some trips only contain a trip string whereas some other trips have a trip string along with a sub-trip number which provides the user with additional information about the trip.

A trip can be generated from a control system or from a power system. The sub-trip number associated with the trips listed in Table 12-1 is in the form xxyzz and used to identify the source of the trip.

Table 12-1 Trips associated with xxyzz sub-trip number


OV	PH.Lo
PSU	OI.Sn
Oht.I	tH.Fb
Oht.P	P.dAt
Oh.dc	

The digits xx are 00 for a trip generated by the control system. For a drive, if the trip is related to the power system then xx will have a value of 01, when displayed the leading zeros are suppressed.

For a control system trip (xx is zero), the y digit where relevant is defined for each trip. If not relevant, the y digit will have a value of zero.

The zz digits give the reason for the trip and are defined in each trip description.

Figure 12-2 Key to sub-trip number

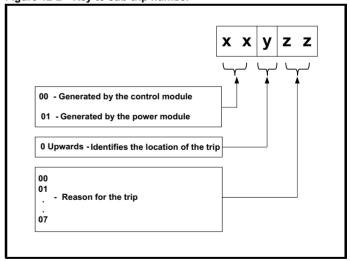

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	UL Listing
information	information	installation	installation	started	parameters	motor	- p	Card	PLC	parameters		

12.4 Trips, Sub-trip numbers

Table 12-2 Trip indications

Trip	Diagnosis							
C.Acc	NV Media Card Write fail							
185	The C.Acc trip indicates that the drive was unable to access the NV Media Card. If the trip occurs during the data transfe the card then the file being written may be corrupted. If the trip occurs when the data being transferred to the drive then data transfer may be incomplete. If a parameter file is transferred to the drive and this trip occurs during the transfer, th parameters are not saved to non-volatile memory, and so the original parameters can be restored by powering the drive down and up again.	the e						
	Recommended actions: • Check NV Media Card is installed / located correctly							
	Replace the NV Media Card							
C.by	NV Media Card cannot be accessed as it is being accessed by an option module The C.by trip indicates that an attempt has been made to access a file on NV Media Card, but the NV Media Card is already	adv						
178	being accessed by an option module. No data is transferred.	auy						
	Recommended actions:							
O - D::	Wait for the option module to finish accessing the NV Media Card and re-attempt the required function NVM at is Card file (late) in different to the area in the driver. NVM at is Card file (late) in different to the area in the driver.							
C.cPr	NV Media Card file/data is different to the one in the drive							
	A compare has been carried out between a file on the NV Media Card and the drive, a <i>C.cPr</i> trip is initiated if the parameters on the NV Media Card are different to the drive.							
188	Recommended actions:							
	 Set Pr 00 to 0 and reset the trip Check to ensure the correct data block on the NV Media Card has been used for the compare 							
C.d.E	NV Media Card data location already contains data							
	The C.d.E trip indicates that an attempt has been made to store data on a NV Media Card in a data block which alread contains data.	у						
179	Recommended actions:							
	Erase the data in data location							
C.dAt	Write data to an alternative data location NV Media Card data not found							
C.uAt	The <i>C.dAt</i> trip indicates that an attempt has been made to access a non-existent file on the NV Media Card.							
	No data is transferred.							
183	Recommended actions:							
	Ensure data file number is correct							
C.Err	NV Media Card data structure error							
O.E.I	The <i>C.Err</i> trip indicates that an attempt has been made to access the NV Media Card but an error has been detected in data structure on the card. Resetting the trip will cause the drive to erase and create the correct folder structure. On an card, whilst trip is present, missing directories will be created and if the header file is missing it will be created. The cause of the trip can be identified by the sub-trip.	SD						
	Sub-trip Reason							
	1 The required folder and file structure is not present							
182	2 The 000.DAT file is corrupted							
	Two or more files in the <mcdf\> folder have the same file identification number</mcdf\>							
	Recommended actions:							
	Erase all the data block and re-attempt the process							
	Ensure the card is located correctly							
	Replace the NV Media Card							
C.FuL	NV Media Card full							
	The C.FuL trip indicates that an attempt has been made to create a data block on a NV Media Card, but there is not enough space left on the card. No data is transferred.	· · · · · · · · · · · · · · · · · · ·						
184	Recommended actions:							
	 Delete a data block or the entire NV Media Card to create space Use a different NV Media Card 							

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing	
T	rip						Diagnosis						
C.	OPt	The C.OF	Pt trip indica	ites that p	arameter d	ata is being t		m the NV	Media Ca	rd to the dr	ive, but the op		
		warning t	module category is different between the source and destination drives. This trip does not stop the data transfer, but is a warning that the data for the option module that is different will be set to the default values and not the values from the card. This trip also applies if a compare is performed between the data block on the card and the drive, and the option module fitted is different between the source and target.										
1	80	EnsuPressdefau	Recommended actions: Ensure the correct option module is installed. Press the red reset button to acknowledge that the parameters for the option module installed will be at their default values. This trip can be suppressed by setting Pr 00 to 9666 and recetting the drive.										
C	.Pr		This trip can be suppressed by setting Pr 00 to 9666 and resetting the drive. V Media Card data blocks are not compatible with the drive derivative										
	•	The C.Pr (11.063) a direction	The C.Pr trip is initiated either at power-up or when the card is accessed, If Drive Derivative (11.028) or Product Type 11.063) are different between the source and target drives. This trip can be reset and data can be transferred in either lirection between the drive and the card.										
		Sub-t	If Di at po	ower-up c er directio	or when the	SD card is a the drive and	between the ccessed. This the card.	trip can b	e reset ar	nd data can	trip is initiated be transferred	d in	
1	75	2	If <i>Product Type</i> (11.063) is different between the source and target drives or the file is corrupted or incompatible. This trip is initiated either at power-up or when the SD card is accessed. This trip can be reset but no data are transferred in either direction between the drive and the card.										
		Use aThis f	 Recommended actions: Use a different NV Media Card This trip can be suppressed by setting Pr 00 to 9666 and resetting the drive Choose a file compatible between the source and target drives, if sub-trip 2. 										
C.	rdo		a Card has										
	81	only data	•	√ Media C	•		e to modify daded and the earth of the earth		•	IV Media Ca	ard or to modi	fy a read-	
		• Clear		nly flag by	setting Pr (00 to 9777 aı	nd reset the d	rive. This	will clear t	he read-onl	y flag for all da	ata blocks	
C.	.rtg										are different		
1	86	or voltage 8yyy) is p but is a w	e ratings are erformed b	e different etween th rating spe	between so e data block	ource and des k on a NV Me	stination drive edia Card and	s. This trip the drive.	also appl The <i>C.rtg</i>	lies if a com trip does n	re, but the currepare (using Proof of stop the dat destination dri	r 00 set to a transfer	
		ReseEnsu	t the drive t	o clear the	g depender		s have transfe 36 and resetti						
C.	.SL					transfer ha							
1	74		•	-		•					the option module s		
C.	tyP	NV Media	a Card para	ameter se	et not comp	oatible with	current drive	mode					
		current di	rive mode.	This trip is	also produ	iced if an atte	empt is made	to transfer	r paramete	ers from a N	ard is differen IV Media Card ne target drive	to the	
1	87		ended acti										
		• Clear	the value i	n Pr 00 ar	nd reset the	drive	erating mode me as the sou			e .			

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimiz	ation	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing
Т	rip						Diagn	osis					
cL	A1	Analog i	nput 1 curr	ent loss									
:	28	20-4 mA Recomm Chec Chec	modes loss ended acti k control wi k control wi k the <i>Analo</i>	of input ons: ring is co ring is ur g Input 1	is detected i	f the current				Analog inp	ut 1 (Termin	al 2). In 4-20	mA and
C	L.bt			_	_								
;	35	The CL.b On). Recomm • Chec • Disab	Recommended actions:									06.043 =	
Cı	ur.c	Current	calibration	range									
2	31	Recomm	Current calibration range error. Recommended actions: Hardware fault - contact the supplier of the drive										
Cı	ır.O		feedback o		- '	J. 1.10 U.110							
2	25	Recomm • Ensu	The Cur.O trip indicates that the current offset is too large to be trimmed. Recommended actions: Ensure that there is no possibility of current flowing in the output phases of the drive when the drive is not enabled Hardware fault – contact the supplier of the drive									nabled	
d	.Ch		Drive parameters are being changed										
	9 7	A user ac enable, i. The user memory of transfer a the drive Recomm • Ensu Loa Ch	etion or a file e. Drive Act actions that card to the of and is writing is active, an aended action re the drive ading defaut anging drive	e system tive (10.0 t change drive. The g a paran nd so the ons: is not en lts e mode	write is active 02) = 1. drive parameter of macetrip only occurred.	actions that actions that cro file to the curs if the ac	ading de will cau drive. It tion is st	faults, se this shoul tarted	changing s trip to be d be note and then	drive mo initiated d that non the drive i	de, or transf if the drive is se of these a	been common erring data fr s enabled du ctions can be	rom an NV ring the
d	cct	dcct refe	rence out	of range	for size 5 u	pwards onl	у						
	10	Recomm	nended acti ware fault -	ons: contact t	s the DCCT	that has cau	sed the	trip.					
dE	Er.E		e file error										
2	46	Sub-t 1 2 3	The The cont	derivativ derivativ rol board derivativ vith a diff	Reasor e file is miss e file does n hardware e file has be	n ing or is inva ot match the en changed tive number.	for a	file ma Occurs file ma Occurs	atching the s when the atching the s when the	e drive po e control b e drive po e control b e drive po	oard hardwa	ad valid derivare. The file is	
		• Conta	Contact the supplier of the drive.										

Safety Product Mechanical Electrical Getting Basic parameters Mechanical installation installation installation of the parameters of the p

dEr.I	The dEr.I t	product image error trip indicates that an error has been detected in the derivative by the sub-trip number. Reason Divide by zero	product image. The reason for the trip can be Comments			
	Sub-trip 1 2	by the sub-trip number. Reason				
	Sub-trip 1 2	Reason	Comments			
	1 2		Comments			
	2	Divide by zero				
	3	Undefined trip				
		Attempted fast parameter access set-up with non-existent parameter				
	4	Attempted access to non-existent parameter				
	5	Attempted write to read-only parameter				
	6	Attempted an over-range write				
	7	Attempted read from write-only parameter				
	30	The image has failed because either its CRC is incorrect, or there are less than 6 bytes in the image or the image header version is less than 5	Occurs when the drive powers-up or the image is programmed. The image tasks will not run			
248	31	The image requires more RAM for heap and stack than can be provided by the drive.	As 30			
	32	The image requires an OS function call that is higher than the maximum allowed.	As 30			
	33	The ID code within the image is not valid	As 30			
	34	The derivative image has been changed for an image with a different derivative number	As 30			
	40	The timed task has not completed in time and has been suspended	Reduce code in timed task or power down repeat rate.			
	41	Undefined function called, i.e. a function in the host system vector table that has not been assigned	As 40			
	51	Core menu customization table CRC check failed	As 30			
	52	Customizable menu table CRC check failed	As 30			
	53	Customizable menu table changed	Occurs when the drive powers-up or the image is programmed and the table has changed. Defaults are loaded for the derivative menu and the trip wil keep occurring until drive parameters are saved.			
	61	The option module installed in slot 1 is not allowed with the derivative image	As 30			
	80	Image is not compatible with the control board	Initiated from within the image code			
	81	Image is not compatible with the control board serial number	As 80			
	Recomme	ended actions:				
	• Conta					
dESt	Two or me	ore parameters are writing to the same destination param	eter			
		rip indicates that destination parameters of two or more function	ons (Menus 7, 8, 9, 12 or 14) within the drive ar			
199	_	he same parameter.				
	Recomme	ended actions:				

Safety Production information												
Trip		Diagnosis										
dr.CF	Drive configura	tion										
	The hardware ID	does not match the user software ID.										
	Sub-trip	Reason										
	1	The hardware ID does not match the user software ID (size 5 upwards only).										
232	2	nvalid hardware ID.										
	3	The hardware ID does not match the user software ID (Size 1-4)										
	Recommended • Hardware fac	actions: ult – Contact the supplier of the drive										
EEF		ers have been loaded										
	The <i>EEF</i> trip indi	cates that default parameters have been loaded. The exact cause/reason of the trip can be identified from										
	Sub-trip	Reason										
		ne most significant digit of the internal parameter database version number has changed										
	11 2 1	e CRC's applied to the parameter data stored in internal non-volatile memory indicate that a valid set parameters cannot be loaded										
		e drive mode restored from internal non-volatile memory is outside the allowed range for the product the derivative image does not allow the previous drive mode										
		e drive derivative image has changed										
		e power stage hardware has changed										
	 											
	7 Re	Reserved										
	8 Th	e control board hardware has changed										
31	9 Th	e checksum on the non-parameter area of the EEPROM has failed										
	occurs the paran requested by the non-volatile mem If both banks of a conditions given has been saved mm.000 (mm.000) Recommended Default the default the default state of the control of the parameters of the p	user save parameters or both banks of power down save parameters are corrupted or one of the other in the table above occurs <i>EEF</i> .xxx trip is produced. If this trip occurs it is not possible to use the data that previously, and so the drive will be loaded with default parameters. The trip can only be reset if <i>Parameter</i> 0) is set to 10, 11, 1233 or 1244 or if <i>Load Defaults</i> (11.043) is set to a non-zero value.										
		sists - return drive to supplier										
Et	An External trip											
	An Et trip has oc	curred. The cause of the trip can be identified from the sub trip number displayed after the trip string. See										
		external trip can also be initiated by writing a value of 6 in Pr 10.038.										
	Sub-trip	Reason										
6	3 Ex	tternal Trip (10.032) = 1										
	Recommended	actions:										
	Check the value	alue of Pr 10.032.										
	Select 'dest'	(or enter 12001) in Pr mm.000 and check for a parameter controlling Pr 10.032.										
		Ensure Pr 10.032 or Pr 10.038 (= 6) is not being controlled by serial comms										
FAn.F	Fan fail											
	· ·	pe reset until 10s after the trip was initiated.										
173	Recommended a											
1/3		at the fan is fitted and connected correctly. at the fan is not obstructed.										
		the supplier of the drive to replace the fan.										
Fi.Ch	File changed											
	Recommended a	action:										
247	Power cy											
<u> </u>	. 51151 09											

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing
Ti	rip						Diagnosis					
F	.ln	Firmware	Incompat	ibility								
					user firmw	are is incom	patible with th	ne power fi	rmware.			
2	37	Recomme	ended acti	ions:								
		Re-progra	m the drive	e with the	latest versi	on of the driv	e firmware fo	r Unidrive	M200. us	ina Unidrive	e M Connect.	
HE	- 01				hardware f				,	J		
							occurred. Thi	is trip indic	ates that	the control I	PCB on the dr	ive has
		failed.										
		Recomme	ended acti	ions:								
		Hardw	vare fault –	Contact f	the supplier	of the drive						
HF	-02	Data prod	essing en	ror: CPU	memory m	anagement	fault					
		The HF02	trip indicat	tes that a	DMAC add	ress error ha	s occurred. T	his trip ind	licates tha	t the contro	I PCB on the	drive has
		failed.										
		Recomme	ended acti	ons:								
						of the drive						
HF	- 03	-	_			ed a bus fau						
			•		us fault has	occurred. This	s trip indicates	that the co	ontrol PCB	on the drive	has failed.	
			ended acti		ha aunalian	of the drive						
HE	- 04					ed a usage	fault					
	V- 1	_						licates that	t the contr	ol PCB on t	the drive has f	ailed
			ended acti		acago .aa		apo			002 0		
					ho cupplior	of the drive						
HE	-05	Reserved		Contact	irie suppliei	or the drive						
- '''	00	TCSCI VCC										
HE	-06	Reserved										
HF	-07	Data prod	essing en	ror: Watc	hdog failu	re						
		The HF07	trip indicat	tes that a	watchdog fa	ailure has oc	curred. This to	rip indicate	s that the	control PCE	3 on the drive	has failed.
		Recomme	ended acti	ons:								
		 Hardw 	vare fault –	Contact t	the supplier	of the drive						
HF	=08	-	_		Interrupt c							
								nis trip indi	cates that	the control	PCB on the d	rive has
					ated by the	sub-trip num	ber.					
			ended acti									
	-00					of the drive						
HI	-09	_			store over		accurred Thi	a trip india	ataa that t	ha control [OCD on the dri	ivo boo
		failed.	trip iriuicat	les mai a	ilee stole t	verilow rias	occurred. Thi	s trip maic	ales mai i	ile control r	PCB on the dri	verias
			ended acti	ions:								
					the supplier	of the drive						
HF	- 10		Hardware fault – Contact the supplier of the drive Reserved									
H	F11	-	-			mory comm						
			•			•			. The cras	sh level is in	ndicated by the	e sub-trip
				icates tha	t the contro	PCB on the	drive has fai	led.				
		Sub-trip)		Reaso	n			Recom	mended a	ction	
		1			ory comms						oplier of the dr	
		2	EEPRO	M size is i	ncompatible	e with the use	er firmware.	Re-progra	m drive w	ith compatit	ole user firmwa	are.

be identified by the sub-trip										
be identified by the sub-trip										
be identified by the sub-trip										
number. This trip indicates that the control PCB on the drive has failed. Sub-trip Reason										
Reason Derivative background stack overflow										
Main system background stack overflow										
ons: tact the supplier of the drive.										
PCB on the drive has failed.										
mmended actions: lardware fault – Contact the supplier of the drive										
Reserved										
le parameter data. The reason										
ow in its bootloader mode and is downloaded, the drive can run										
t.										
If this trip occurs - contact the supplier of the drive.										
007) and Motor Thermal Time										
007) and <i>Motor Thermal Time</i> ximum value. The drive will trip										
le										

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing		
Т	rip						Diagnosis							
lt	.br	Braking r	esistor ov	erload tin	ned out (l ²	t)								
1	19	(10.039) is Braking R reaches 1 Recomme Ensure Check	one of realister value and power rating											
LF	Er.	Communi	communication has been lost / errors detected between power, control and rectifier modules											
		communic	This trip is initiated if there is no communications between power, control or the rectifier module or if excessive communication errors have been detected. The reason for the trip can be identified by the sub-trip number.											
		Soi	urce	XX	у	ZZ			Des	scription				
		Contro	l system	00	0	01	No com power s		ns betwee	en the contro	ol system and	the		
٤	90	Contro	l system	00	0	02		sive communication errors between the con n and power system.						
		Power	Power system 01 1 00 Excessive communications errors detected by the rectifier module.									ctifier		
			ended action		e supplier o	of the drive.								
no	.PS	No power												
					e power an	d control boa	ards.							
2	36		ended acti											
	Ld1		vare fault - o otput overl		e supplier o	of the drive.								
0.	Lui	•	•		current dra	awn from the	Al Adaptor 2	4 V or fror	n the digit	tal output ha	s exceeded th	ne limit.		
		Sub-tr					Reaso					7		
		1		al output	or 24 V sur	nly load on	control termin		iah			-		
		2			V load is to				.3			-		
2	26											_		
			ended acti			10414								
			c total loads c control wil	-	l outputs ar rect	nd 24 V								
			output wir	•										
0.9	SPd		<u> </u>			<u> </u>								
	7	(03.008) ir Over Freq is then equ	Motor frequency has exceeded the over frequency threshold In open-loop mode, if the <i>Post-ramp Reference</i> (02.001) exceeds the threshold set in the <i>Over Frequency Threshold</i> (03.008) in either direction, an O.SPd trip is produced. In RFC-A mode, if the <i>Estimated Frequency</i> (03.002) exceeds the Over Frequency Threshold in Pr 03.008 in either direction, an O.SPd trip is produced. If Pr 3.008 is set to 0.00 the threshold is then equal to 1.2 x the value set in Pr 1.006.									eeds the		
	-		ended acti			,, , , -	. (00.610):				. /DEG :			
		 Check 	that a med	chanical lo		riving motor.	` ,	reduce th	e frequen	cy overshoo	ot (RFC-A mod	de only)		

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics ULL	Listing		
Т	rip						Diagnosis							
Oł	h.dc	DC bus	over tempe	rature										
		thermal p and DC b reaches stop in 10	The <i>Oh.dc</i> trip indicates a DC bus component over temperature based on a software thermal model. The drive includes a thermal protection system to protect the DC bus components within the drive. This includes the effects of the output current and DC bus ripple. The estimated temperature is displayed as a percentage of the trip level in Pr 07.035 . If this parameter reaches 100 % then an <i>Oh.dc</i> trip is initiated. The drive will attempt to stop the motor before tripping. If the motor does not stop in 10 seconds the drive trips immediately. Source xx y zz Description											
							DC hua	thormal m			uh trin O	_		
		Contro	Control system 00 2 00 DC bus thermal model gives trip with sub-trip 0											
2	27	Recommended actions: Check the AC supply voltage balance and levels Check DC bus ripple level Reduce duty cycle Reduce motor load Check the output current stability. If unstable; Check the output current stability. If unstable; Check the motor map settings with motor nameplate (Pr 05.006, Pr 05.007, Pr 05.008, Pr 05.009, Pr 05.010) Pr 05.011) – (All Modes) Disable slip compensation (Pr 05.027 = 0) – (Open loop) Disable dynamic V to F operation (Pr 05.013 = 0) - (Open loop) Select fixed boost (Pr 05.014 = Fixed) – (Open loop) Select high stability space vector modulation (Pr 05.019 = 1) – (Open loop) Disconnect the load and complete a rotating autotune (Pr 05.012)									05.009 , Pr 05.010 ,			
Ol	ht.C	Control	stage over-	temperatu	re									
2	219	This trip of	causes the cended action	option mod ns:	ule to go to	•			Ū	,	06.045) = 0. 6) bit 1 to be set.			
0	ht.l	Inverter	over tempe	rature bas	sed on the	rmal model								
					•	•					nermal model.The omperature is 139 °o			
		Sc	ource	хх	У	ZZ			Desc	ription				
		Contro	ol system	00	1	00	Inverter	thermal m	nodel give	s {Oht.I} trip	with sub-trip 100			
2	Recommended actions: Reduce the selected drive switching frequency Ensure Auto-switching Frequency Change Disable (05.035) is set to OFF Reduce duty cycle Increase acceleration / deceleration rates Reduce motor load Check DC bus ripple Ensure all three input phases are present and balanced													

Safety Product Mechanical Electrical Gettina Basic Running the NV Media Onboard Advanced Diagnostics UL Listing Optimization information information installation installation parameters motor **PLC** parameters Trip Diagnosis Oht.P Power stage over temperature This trip indicates that a power stage over-temperature has been detected. From the sub-trip 'xxyzz', the Thermistor location is identified by 'zz'. Source Description ХX У Power system 01 0 77 Thermistor location in the drive defined by zz Drive size Trip temperature (°C) Trip reset temperature (°C) 1 to 4 95 90 5 115 110 06200XXX 115 110 125 120 06400XXX 06500XXX 120 115 22 Recommended actions: Check enclosure / drive fans are still functioning correctly Force the heatsink fans to run at maximum speed Check enclosure ventilation paths Check enclosure door filters Increase ventilation Reduce the drive switching frequency Reduce duty cycle Increase acceleration / deceleration rates Use S ramp (Pr 02.006) Reduce motor load Check the derating tables and confirm the drive is correctly sized for the application. Use a drive with larger current / power rating OI.A1 Analog input 1 over-current 189 Current input on analog input 1 exceeds 24mA. OI.AC Instantaneous output over current detected The instantaneous drive output current has exceeded VM_DRIVE_CURRENT_MAX. This trip cannot be reset until 10s after the trip was initiated. Recommended actions/checks:

- Increase acceleration/deceleration rate
 - If seen during autotune reduce the voltage boost
 - · Check for short circuit on the output cabling
 - · Check integrity of the motor insulation using an insulation tester
 - · Is the motor cable length within limits for the frame size?
 - Reduce the values in the frequency loop gain parameters (Pr 03.010, 03.011, 03.012) or (Pr 03.013, 03.014, 03.015)
 - Reduce the values in the current loop gain parameters

Ol.br Braking IGBT over current detected: short circuit protection for the braking IGBT activated

The *OI.br* trip indicates that over current has been detected in braking IGBT or braking IGBT protection has been activated. This trip cannot be reset until 10s after the trip was initiated.

Recommended actions:

3

- · Check brake resistor wiring
- · Check braking resistor value is greater than or equal to the minimum resistance value
- Check braking resistor insulation

Safety nformation	Product information		Electrical nstallation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics U	JL Listing
Т	rip						Diagnosis					
OI	l.Sn	Snubber ov	ver-curre	nt detec	ted							
		This trip ind trip can be i					een detected	in the rect	ifier snubl	oing circuit,	The exact cause	e of the
		Source	•	хх	у	ZZ	Description					
ç	92	Power system 01 1 00 Rectifier snubber over-current trip detected.										
		Recommended actions:										
 Ensure the internal EMC filter is installed Ensure the motor cable length does not exceed the maximum for selected switching frequency Check for supply voltage imbalance Check for supply disturbance such as notching from a DC drive Check the motor and motor cable insulation with an insulation tester. Install a output line reactor or sinusoidal filter 										,		
OI	l.SC	Output pha										
		Over-curren	nt detecte	d on drive	e output whe	en enabled.	Possible moto	or earth fai	ult.			
2	228	Check in	for short contegrity of	ircuit on f the mot			sulation tester e size?	-				
Oı	ut.P	Output pha	ase loss o	detected								
		The Out.P to	rip indicat	es that p	hase loss h	as been dete	ected at the di	rive output				
		Sub-trip)				Reason					
		1					en drive enab					
		2	V pha	se detec	ted as disco	nnected wh	en drive enab	led to run.				
		W phase detected as disconnected when drive enabled to run.										
9	98	4					Hz and a pha tion Time (06		onnected f	or the time		
		refers to phy	If Pr 05.042 = 1, the physical output phases are reversed, and so sub-trip 3 refers to physical output phase V and sub-trip 2 refers to physical output phase W. Recommended actions:									
			Check motor and drive connections To disable the trip and Output Rivers I are Detection French (00.050)									

To disable the trip set *Output Phase Loss Detection Enable* (06.059) = 0

Safety information Running the Product Mechanical Electrical Getting Basic NV Media Onboard Advanced Diagnostics UL Listing Optimization information installation installation parameters motor Card PLC parameters

Trip Diagnosis OV DC bus voltage has exceeded the peak level or maximum continuous level for 15 seconds

The OV trip indicates that the DC bus voltage has exceeded the VM_DC_VOLTAGE[MAX] or

VM_DC_VOLTAGE_SET[MAX] for 15 s. The trip threshold varies depending on voltage rating of the drive as shown below.

Voltage rating	VM_DC_VOLTAGE[MAX] Frame 1 to 4	Frame 1 to 4 Frame 5 to 9					
100	510	415	400				
200	510	415	400				
400	870	830	800				
575	N/A	990	955				
690	N/A	1190	1150				

Sub-trip Identification

2

220

Source	xx	у	ZZ
Control system	00	0	01: Instantaneous trip when the DC bus voltage exceeds VM_DC_VOLTAGE[MAX].
Control system	00	0	02: Time delayed trip indicating that the DC bus voltage is above VM_DC_VOLTAGE_SET[MAX].
Power system	01	0	00: Instantaneous trip when the DC bus voltage exceeds VM_DC_VOLTAGE[MAX].

Recommended actions:

- Increase deceleration ramp (Pr 04)
- · Decrease the braking resistor value (staying above the minimum value)
- · Check nominal AC supply level
- · Check for supply disturbances which could cause the DC bus to rise
- Check motor insulation using an insulation tester

P.dAt Power system configuration data error

The *P.dAt* trip indicates that there is an error in the configuration data stored in the power system. This trip can be generated from either the drive control system or from the power system. The trip is related to the table uploaded from the power system at power-up.

Source	xx	у	ZZ	Description				
Control system	00	0	01	No data was obtained from the power board.				
Control system	00	0	02	There is no data table.				
Control system	00	0	03	The power system data table is bigger than the space available in the control pod to store it.				
Control system	00	0	04	The size of the table given in the table is incorrect.				
Control system	00	0	05	Table CRC error.				
Control system	00	0	06	The version number of the generator software that produced the table is too low.				
Control system	0	0	07	The power data table failed to be stored in the power board.				
Power system	01	0	00	The power data table used internally by the power module has an error.				
Power system	01	0	01	The power data table that is uploaded to the control system on power up has an error.				
Power system	01	0	02	The power data table used internally by the power module does not match the hardware identification of the power module.				

Recommended actions:

Hardware fault – Contact the supplier of the drive

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing		
Т	rip						Diagnosis							
P	Ad	Keypad h	nas been re	emoved w	hen the di	rive is receiv	ing the refe	rence fror	n the key	pad				
3	34	removed Recomm • Re-in:	The PAd trip indicates that the drive is in keypad mode [Reference Selector (01.014) = 4 or 6] and the keypad has been removed or disconnected from the drive. Recommended actions: Re-install keypad and reset Change Reference Selector (01.014) to select the reference from another source											
Pl	o.bt		oard is in b											
2	45	Recomm	Power board is in bootloader mode Recommended actions: Send power board firmware file to reprogram the power board using Unidrive M Connect and power cycle drive.											
Pk	o.Er	Commun	Communication has been lost / errors detected between control and power processor											
		processor Sub-	The <i>Pb.Er</i> trip is initiated if there is no communications between the control board processor and the power board processor. The reason for the trip can be identified by the sub-trip number. Sub-trip Reason											
		1			g region out									
,	93	2				inication with								
		4	3 User board lost communication with power board 4 Communication CRC error											
		 												
			ended acti											
				Contact t	he supplier	of the drive								
Pb	.HF	Power bo			. The	tala assault as	:- 4b - 1.05							
2	35	Recomme	ended actio	n:		of the drive	is the HF cod	ie.						
P	d.S	Power do	own save e	rror										
		The Pd.S	trip indicat	es that an	error has b	een detecte	d in the powe	r down sa	ve parame	eters saved	in non-volatile	e memory.		
3	37	Recomm	nended act	ions:										
		 Perfo 	rm a 1001 :	save in Pr	00 to ensu	re that the tri	p doesn't occ	cur the nex	t time the	drive is po	wered up.			
PH	l.Lo	Supply p	hase loss											
		stop the n PH.Lo trip drive will	notor before works by r	e this trip i monitoring _o. Potent	s initiated. the ripple v	If the motor o	cannot be sto e DC bus of the	pped in 10 ne drive, if	seconds the DC bu	the trip occurs ripple exc	The drive will curs immediate ceeds the thre npedance and	ely. The shold, the		
		Source	е	xx	у				ZZ					
		Contro		00	0	attempts t		ive before		•	back. The dri of <i>Action On T</i>			
	32	Power system		01	0	00: Phase	e loss has bee	en detecte	d by the r	ectifier mod	ule.			
			Input phase loss detection can be disabled when the drive is required to operate from the DC supply or from a single phase supply in <i>Input Phase Loss Detection Mode</i> (06.047).											
		Recomm	ended acti	ons:										
		Recommended actions: Check the AC supply voltage balance and level at full load Check the DC bus ripple level with an isolated oscilloscope Check the output current stability Check for mechanical resonance with the load Reduce the duty cycle Reduce the motor load Disable the phase loss detection, set Pr 06.047 to 2.												

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing

ormation information		stallation start		rs motor	Optimization	Card	PLC	parameters	iagnostics U			
Trip		Diagnosis										
PSU		wer supply fa										
	The PSU trip	o indicates tha	t one or more	more internal power supply rails are outside limits or overloaded.								
	Source	хх	у	ZZ	Desc			cription				
	Control system	00	0	00	lata mad man							
5	Power system	01	1	- 00	Internal pow	er supply (ovenoad.					
	Recommen	Recommended actions:										
		 Remove the option module and perform a reset There is a hardware fault within the drive – return the drive to the supplier 										
r.All	RAM alloca	tion error										
	RAM allocat	ion is checked	in order of re lated as (par	odule derivative esulting sub-tri rameter size) +	p numbers, ar	nd so the f	ailure with	the highest s				
		eter size	Value	-		ameter typ	e	Value	_			
	1 bit 1			4		Volatile		0				
	8 bit 2 16 bit 3			4		Jser save	1/0	1 2	_			
			4	_ L	Power-down save							
227	32 bit 4 64 bit 5											
	Application		-array		Men :		Value 1					
	Derivative i				29		2					
	Option slot				15	i	4					
	Option slot	1 applications			25			5				
r.b.ht	Hot rectifier											
			d on input red	ctifier or braking	g IGBT.							
250		Recommended action:										
			setting Cool	ing Fan Contro	o/ (06.045) > 0).						
Reserved	Reserved tr	•										
01	These trip numbers are reserved trip numbers for future use.											
09 12	Т	rip Number			Description							
14 - 17	01, 09, 12,	14-17, 23, 29,	38, 39 Res	erved resettab	le trip							
23, 29	91	1, 94 -96, 99	Res	erved resettab	le trip							
38 - 39	10)1 - 109, 111	Res	erved resettab	le trip		Ĭ					
91, 94 - 96 99	168	- 172, 176-177	Res	Reserved resettable trip								
101 - 109 190 – 198 Reserved resettable trip												
111	205 - 217 Reserved resettable trip											
168 - 172	222 - 224 Reserved non-resettable trip											
176 - 177 190 - 198		229-230, 233 Reserved non-resettable trip										
205 - 217		238 - 244, 249 Reserved non-resettable trip										
222 - 224		251-254		served non-res	•							
229 - 230, 233		201 207										

229 - 230, 233 238 - 244 249

251 - 254

Safety Product information	Mechanical Electinstallation install		Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics UL Listing			
Trip					Diagnosis							
rS	Measured resi	stance has ex	ceeded the	parameter	range							
	The rS trip indicates that the measured stator resistance of the motor during an autotune test has exceeded the maximum possible value of Stator Resistance (05.017). If the measured value or a value written to this parameter by the user exceeds $(V_{FS}/\sqrt{2})$ / Full Scale Current Kc (11.061), where V_{FS} is the full scale DC bus voltage then this trip is initiated. The stationary autotune is initiated using the autotune function (Pr 05.012) or in open loop vector mode (Pr 05.014) on the first run command after power up in mode 4 (Ur_l) or on every run command in modes 0 (Ur_S) or 3 (Ur_Auto). This trip can occur if the motor is very small in comparison to the rating of the drive. If the value is the result of a measurement made by the drive then sub-trip 0 is applied, or if it is because the parameter has been changed by the user then sub-trip 3 is applied. During the stator resistance section of auto-tuning an additional test is performed to measure the drive inverter characteristics to provide the compensation necessary for dead-times. If the inverter characteristic measurement fails then sub-trip 2 is applied. The reason for the trip can be identified by the sub-trip number. Sub-trip Reason Stator resistance (5.017/21.012) is greater than $(V_{FS}/\sqrt{2})$ / Full Scale Current Kc (11.061), where V_{FS} is the full scale d.c. bus voltage; or the result is = 100 ohms. The measured Transient Inductance (5.024/21.014) is greater than 500 mH or the measured Stator											
33	3	A resistance value entered by the user is greater than (V _{FS} / √2) / Full Scale Current Kc (11.061), where V _{FS} is the full scale d.c. bus voltage. Clear this trip by setting Stator Resistance (05.017) to a value that is in range and resetting the drive. The measured stator resistance is not greater than the sub-trip 0 check but is outside the firmware.										
	Recommended actions: Ensure the stator resistance of the motor falls within the range of the drive model. The most likely cause of this trip is trying to measure a motor much smaller than the drive rating. Ratio's of drive size to motor size of greater than 15:1 a likely to lead to a problem. Check that a value has not been entered in the stator resistance for the presently selected motor map that exceeds the allowed range. Check the motor cable / connections Check the integrity of the motor stator winding using an insulation tester Check the motor phase to phase resistance at the drive terminals Check the motor phase to phase resistance at the motor terminals Ensure the stator resistance of the motor falls within the range of the drive model Select fixed boost mode (Pr 05.014 = Fd) and verify the output current waveforms with an oscilloscope Replace the motor											
SCL	The SCL trip in Recommender	dicates that the		rd has been	enabled and l	has timed	out					
30	trip will be i reset.	nitiated. The w	atchdog is d	lisabled whe					ated every 1s or a <i>SCL</i> equired when the trip is			
SL.dF	Option module			_								
	The SL.dF trip parameters were					n be identi		• •	t installed when mber.			
	• • • • • • • • • • • • • • • • • • •	N			i NGa	5011						
	2	changed, and so default parameters have been loaded for this menu.										
204	3	changed, and A module with	nged, and so default parameters have been loaded for this menu. Dedule with the same identifier is installed, but the set-up and applications menu for this option slot be been changed, and so default parameters have been loaded for these menus.									
	>99						au c u IUi 1	inese menus	5.			
	Recommender Turn off the Confirm that	· ·										

	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing		
Trip						Diagnosis							
SL.Er	Option mo	odule in o	ption slot	1 has dete	ected a fault								
202	can be ide is possible available. Recomme	e <i>SL.Er</i> trip indicates that the option module in option slot 1 on the drive has detected an error. The reason for the error in be identified by the sub-trip number. As default, the sub-trip number is shown as a number on the display. However, it possible for the option module to supply sub-trip number strings which will be displayed instead of the number if ailable. commended actions: See relevant <i>Option Module User Guide</i> for details of the trip											
SL.HF	Option mo				de foi detaile	or the trip							
	-				The possible	causes of the	e trip can b	oe identifi	ed by the su	ıb-trip numbeı	r.		
	Sub-trip	•											
	1	The mod	lule catego	ory cannot	be identified								
	2	2 All the required customized menu table information has not been supplied or the tables supplied are con											
	3	There is insufficient memory available to allocate the comms buffers for this module											
	4	4 The module has not indicated that it is running correctly during drive power-up											
	5	Module I	nas been i	removed af	ter power-up	or it has stop	ped worki	ng					
200	6	6 The module has not indicated that it has stopped accessing drive parameters during a drive mode change									hange		
200	7												
	8	·											
	9	The drive	e failed to	upload me	nu tables froi	n the module	and timed	l-out (5s)					
	10												
	 Replace 		n module i	is installed	correctly								
SL.nF				1 has bee	n removed								
203	The sub-tri Recomme • Ensure • Re-ins	ip number Inded active the option Itali the option	gives the ons: n module ition module	ID code of is installed le.	the option m	odule that ha	s been ren	noved.		e the last pow	er up.		
SL.tO				nction serv		nger required	а репогт а	a save ful	nction in Pr	JU.			
201	The SL.tO service the Recomme	trip indicate watchdog	tes that the g correctly.	e option mo		l in Slot 1 has	started the	e option v	vatchdog fun	nction and the	n failed to		
So.St	Replace the option module Soft start relay failed to close, soft start monitor failed												
Color	The So.St	The <i>So. St</i> trip indicates that the soft start relay in the drive failed to close or the soft start monitoring circuit has failed. The cause of the trip can be identified by the sub-trip number.											
	Sub-trip Reason												
226	1		-start failu										
	Recomme	2 DC bus capacitor failure on 110 V drive (size 2 only) Recommended actions:											
					of the drive								
St.HF				_	power dow		urrod and 44	ao drivo h	as bosn no	ver cycled. Th	ao cub trin		
221	number ide	entifies the	HF trip.	nardware tri	ір (нғот –нғ	· 18) nas occu	irred and tr	ne arive r	ias been pow	ver cycled. Tr	ie sub-trip		
	• Enter	1299 in Pr	00 and pr	ess reset to	clear the tri	ρ							

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing	
Т	rip						Diagnosis						
S	Sto	No Safe	Torque Off	board fit	ted								
		Internal S	STO board r	not fitted o	correctly								
2	234	Recomm	ended acti	ons:									
		Hardware	e fault – Cor	ntact the s	supplier of the	ne drive							
1	th	Motor the	ermistor o	ver-temp	erature								
2	24	indicated higher that Recomm	a motor over an <i>Thermist</i> anded acti	er temper tor Trip Th ions:	ature. If <i>Dig</i> areshold (07	ital Input 5 N		` •	. ,		ol connection he feedback		
		 Chec 	k threshold k motor ten k thermisto	nperature	,								
th	n.br	Brake res	sistor over	tempera	ture								
	10	If the brake this trip.	he <i>th.br</i> trip is initiated if the hardware based braking resistor thermal monitoring is connected and the resistor overheats. the braking resistor is not used, then this trip must be disabled with bit 3 of Action <i>On Trip Detection</i> (10.037) to prevent lis trip. ecommended actions:										
	10												
		• Chec	Check brake resistor wiring Check braking resistor value is greater than or equal to the minimum resistance value Check braking resistor insulation										
tH	l.Fb	Internal t	hermistor	has faile	d								
			The <i>tH.Fb</i> trip indicates that an internal thermistor has failed in the drive (i.e. open circuit or short circuit). The thermistor ocation can be identified by the sub-trip number.										
		Sour	rce	х	х	у				ZZ			
		Power s	ystem	0	1	0	Th	ermistor lo	cation de	fined by zz			
2	218	Power s	ystem	0	1	1	Th	ermistor lo	cation de	fined by zz	in the rectifier		
		• Hard		Contact t		of the drive							
t	hS		ermistor sl					1.4.4.7.11.11	1: (5)				
			rip indicates low impeda			listor connec	tea to termina	ai 14 (digita	ai input 5)	on the cont	rol connectior	is, is snort	
	25		ended acti	`	/-								
-			k thermisto		v								
			ace motor /		,								
tu	ın.S	Autotune	e test stop	oed befor	e completi	on							
		The drive	was preve	nted from	completing	an autotune	test, because	e either the	e drive en	able or the	drive run were	e removed.	
	18	Recomm	ended acti	ons:									
	-	• Chec	k the run co	ommand v	vas active ir		ctive during to t 3 or 4 state			004) during	the autotune		
tu	ın.1	•	speed co										
		The drive	has tripped	d during a	n autotune.	The cause of	of the trip can	be identifi	ed from th	ne sub-trip n	iumber.		
		Sub-t	rip				Re	ason					
	11	2	2 The motor did not reach the required speed during rotating autotune or mechanical load measurement										
		Recomm	Recommended actions:										
			Ensure the motor is free to turn i.e. mechanical brake is released										
						05.021) is se		J u					
tu	ın.3	Measure	d inertia ha	as exceed	ded the par	ameter ranç	je (RFC-A m	ode only)					
			The drive has tripped during a rotating autotune or mechanical load measurement test. The cause of the trip can be identified from the associated sub-trip number.										
		Sub-t	rip				Re	ason					
1	13	1	Mea	sured ine	rtia has exc	eeded the p	arameter ran	ge during a	mechan	ical load me	asurement		
		3	The	mechani	cal load test	has been u	nable to ident	tify the mot	or inertia				
		Recomm	ended acti	ons:									
		• Chec	k motor cat	ole wiring	is correct								

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card	Onboard PLC	Advanced parameters	Diagnostics	UL Listing

Trip	Diagnosis
U.OI	User OI ac
8	The <i>U.OI</i> trip is initiated if the output current of the drive exceeds the trip level set by <i>User Over Current Trip Level</i> (04.041).
U.S	User Save error / not completed
	The <i>U.S</i> trip indicates that an error has been detected in the user save parameters saved in non-volatile memory. For example, following a user save command, If the power to the drive was removed when the user parameters were being saved.
36	Recommended actions:
	 Perform a user save in Pr 00 to ensure that the trip doesn't occur the next time the drive is powered up. Ensure that the drive has enough time to complete the save before removing the power to the drive.
UP.uS	Trip generated by an onboard user program
	This trip can be initiated from within an onboard user program using a function call which defines the sub-trip number.
96	Recommended actions:
	Check the user program

Safety Product Mechanical Electrical Getting Basic Running the NV Media Advanced Onboard Diagnostics UL Listing Ontimization information information installation installation started parameters moto Card PLC parameters Trin Diagnosis **UPrG** Onboard user program error An error has been detected in the onboard user program image. The sub-trip indicated the reason for the trip. Comments trip Divide by zero. Undefined trip 3 Attempted fast parameter access set-up with non-existent parameter 4 Attempted access to non-existent parameter. 5 Attempted write to read-only parameter. 6 Attempted an over-range write Attempted read from write-only parameter The image has failed because either its CRC is incorrect, or there are less than 6 bytes in the image Occurs when the drive powers-up or 30 or the image header version is less than 5. is programmed. The image tasks will not run. As 30 31 The image requires more RAM for heap and stack than can be provided by the drive. The image requires an OS function call that is higher than the maximum allowed. As 30 32 33 The ID code within the image is not valid As 30 34 The user program image has been changed for an image with a different user program number As 30 Onboard User Program: Enable (11.047) is reset to zero when the trip is initiated. The timed task has not completed in time and has been suspended Undefined function called, i.e. a function in the host system vector table that has not been assigned. Occurs when the drive powers-up or the image is programmed and the table has changed. 53 Customizable menu table changed Defaults are loaded for the user program menu and the trip will keep occurring until drive parameters are saved *Image is not compatible with the control board Initiated from within the image code *Image is not compatible with the control board serial number 81 100 Image has detected and prevented attempted pointer access outside of the IEC task's heap area 101 Image has detected and prevented misaligned pointer usage 102 Image has detected an array bounds violation and prevented its access 249 Image has attempted to convert a data type to or from an unknown data type, has failed and has shut 103 itself down 104 Image has attempted to use an unknown user service function. User program has invoked a "divide" service with a denominator of zero. (Note that this is raised by the downloaded image and has therefore been given a distinct error code despite being the same 200 fundamental problem as sub-trip 1.) 201 Parameter access is not supported. An attempt to read database other than the host drive 202 Parameter does not exist. Database was host drive but the specified parameter does not exist. 203 Parameter is read-only 204 Parameter is write-only 205 Unknown parameter error 206 Invalid bit present in parameter. The parameter does not contain the specified bit. Parameter format lookup failed. Failed to get parameter information data An over-range write has been attempted The following table shows the differences when compared to the derivative product image. 40 41 Onboard User Program: Enable (11.047) is reset to zero when the trip is initiated. 51 Not applicable as core menu Customization not allowed 6x Not applicable as option module restrictions not allowed 7x Not applicable as option module restrictions not allowed 100 Image has detected and prevented attempted pointer access outside of the IEC task's heap area. 101 Image has detected and prevented misaligned pointer usage 102 Image has detected an array bounds violation and prevented its access Image has attempted to convert a data type to or from an unknown data type, has failed and has shut itself down.

104

Image has attempted to use an unknown user service function

been given a distinct error code despite being the same fundamental problem as sub-trip 1)

User program has invoked a "divide" service with a denominator of zero. (Note that this is raised by the downloaded image and has therefore

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostics	III Lietina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

Table 12-3 Serial communications look up table

No	mmunications look up ta	No	Trip	No	Trip
1	rES	90	LF.Er	199	dESt
2	OV	91	rES	200	SL.HF
3	OI.AC	92	OI.Sn	201	SL.tO
4	Ol.br	93	Pb.Er	202	SL.Er
5	PSU	94 - 95	rES	203	SL.nF
6	Et	96	UP.uS	204	SL.dF
7	O.SPd	97	d.Ch	205 - 214	rES
8	U.OI	98	Out.P	215	rES
9	rES	99	rES	216 - 217	rES
10	th.br	100	rESEt	218	tH.Fb
11	tun.1	101	rES	219	Oht.C
12	rES	102	rES	220	P.dAt
13	tun.3	103 - 108	rES	221	St.HF
14 - 17	rES	109	rES	222	rES
18	tun.S	110	dcct	223 - 224	rES
19	lt.br	111	rES	225	Cur.O
20	It.Ac	112 - 167	t112 - t167	226	So.St
21	Oht.I	168 - 172	rES	227	r.All
22	Oht.P	173	FAn.F	228	OI.SC
23	rES	174	C.SL	229	rES
24	th	175	C.Pr	230	rES
25	thS	176	rES	231	Cur.c
26	O.Ld1	177	rES	232	dr.CF
27	Oh.dc	178	C.by	233	rES
28	cL.A1	179	C.d.E	234	Sto
29	rES	180	C.OPt	235	Pb.HF
30	SCL	181	C.rdo	236	no.PS
31	EEF	182	C.Err	237	Fl.In
32	PH.Lo	183	C.dAt	238 - 244	rES
33	rS	184	C.FuL	245	Pb.bt
34	PAd	185	C.Acc	246	dEr.E
35	CL.bt	186	C.rtg	247	Fi.Ch
36	U.S	187	C.tyP	248	dEr.l
37	Pd.S	188	C.cPr	249	UPrG
38	rES	189	OI.A1	250	r.b.ht
39	rES	190	rES	251 - 254	rES
40 - 89	t040 - t089	191 - 198	rES	255	rSt.L

The trips can be grouped into the following categories. It should be noted that a trip can only occur when the drive is not tripped or is already tripped but with a trip with a lower priority number.

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization	NV Media	Onboard	Advanced	Diagnostics	UL Listina
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISTING

Table 12-4 Trip categories

Priority	Category	Trips	Comments
1	Internal faults	HFxx	These indicate internal problems and cannot be reset. All drive features are inactive after any of these trips occur.
1	Stored HF trip	{St.HF}	This trip cannot be cleared unless 1299 is entered into <i>Parameter</i> (00) and a reset is initiated.
2	Non-resettable trips	Trip numbers 218 to 247, {SL.HF}	These trips cannot be reset.
3	Volatile memory failure	{EEF}	This can only be reset if Parameter 00 is set to 1233 or 1244, or if <i>Load Defaults</i> (11.043) is set to a non-zero value.
4	NV Media Card trips	Trip numbers 174, 175 and 177 to 188	These trips are priority 5 during power-up.
4	Internal 24V	{PSU}	Rectifier 24 V
5	Trips with extended reset times	{OI.AC}, {OI.br}, and FAn.F	These trips cannot be reset until 10 s after the trip was initiated.
5	Phase loss and d.c. link power circuit protection	{PH.Lo} and {Oh.dc}	The drive will attempt to stop the motor before tripping if a {PH.Lo} trip occurs unless this feature has been disabled (see <i>Action On Trip Detection</i> (10.037). The drive will always attempt to stop the motor before tripping if an {Oh.dc} occurs.
5	Standard trips	All other trips	

12.5 Internal / Hardware trips

Trips {HF01} to {HF23} are internal faults that do not have trip numbers except HF08, HF11, HF12 and HF18. If one of these trips occurs, the main drive processor has detected an irrecoverable error. All drive functions are stopped and the trip message will be displayed on the drive keypad. If a non permanent trip occurs this may be reset by power cycling the drive. On power up after it has been power cycled the drive will trip on St.HF (the sub-trip number indicates the HF fault code). Enter 1299 in Pr **00** to clear the Stored HF trip.

12.6 Alarm indications

In any mode, an alarm is an indication given on the display by alternating the alarm string with the drive status string display. If an action is not taken to eliminate any alarm except "tuning", "LS" or "24.LoSt" the drive may eventually trip. Alarms are not displayed when a parameter is being edited.

Table 12-5 Alarm indications

Alarm string	Description
br.res	Brake resistor overload. <i>Braking Resistor Thermal Accumulator</i> (10.039) in the drive has reached 75.0 % of the value at which the drive will trip.
OV.Ld	Motor Protection Accumulator (04.019) in the drive has reached 75.0 % of the value at which the drive will trip and the load on the drive is >100 %.
d.OV.Ld	Drive over temperature. Percentage Of Drive Thermal Trip Level (07.036) in the drive is greater than 90 %.
tuning	The autotune procedure has been initialized and an autotune in progress.
LS	Limit switch active. Indicates that a limit switch is active and that is causing the motor to be stopped.
Opt.Al	Option slot alarm.
Lo.AC	Low voltage mode. See Low AC Alarm (10.107).
I.AC.Lt	Current limit active. See Current Limit Active (10.009).
24.LoSt	24V backup not present. See 24V Alarm Loss Enable (11.098)

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Ontimization	NV Media	Onboard	Advanced	Diagnostics	III Lieting
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	UL Listing

12.7 Status indications

Table 12-6 Status indications

String	Description	Drive output stage
inh	The drive is inhibited and cannot be run. Either the drive enable signal is not applied to the drive enable terminals or Pr 06.015 is set to 0.	Disabled
rdy	The drive is ready to run. The drive enable is active, but the drive inverter is not active because the final drive run is not active.	Disabled
StoP	The drive is stopped / holding zero speed.	Enabled
S.Loss	Supply loss condition has been detected.	Enabled
dc.inJ	The drive is applying dc injection braking.	Enabled
Er	The drive has tripped and no longer controlling the motor. The trip code appears in the display.	Disabled
UV	The drive is in the under voltage state either in low voltage or high voltage mode.	Disabled
HEAt	The motor pre-heat function is active	Enabled

Table 12-7 Option module and NV Media Card and other status indications at power-up

String	Status
PS.LOAD	Waiting for power stage
The drive is waiting for the	ne processor in the power stage to respond after power-up.
LOAD OPtion	Waiting for an option module
The drive is waiting for the	ne Option Module to respond after power-up.
UPLOAD	Loading parameter database
	cessary to update the parameter database held in the drive because an option module has changed. This may involve data re and option module. During this period 'UPLOAD' is displayed.
LOAD.I	Bootloading drive firmware
The drive is waiting for the	ne bootloader file to be transferred to the processor.

12.8 Displaying the trip history

The drive retains a log of the last ten trips that have occurred. *Trip 0* (10.020) to *Trip 9* (10.029) store the most recent 10 trips that have occurred where *Trip 0* (10.020) is the most recent and *Trip 9* (10.029) is the oldest. When a new trip occurs it is written to *Trip 0* (10.020) and all the other trips move down the log, with oldest being lost. The date and time when each trip occurs are also stored in the date and time log, i.e. *Trip 0 Date* (10.041) to *Trip 9 Time* (10.060). The date and time are taken from *Date* (06.016) and *Time* (06.017). Some trips have sub-trip numbers which give more detail about the reason for the trip. If a trip has a sub-trip number its value is stored in the sub-trip log, i.e. *Trip 0 Sub-trip Number* (10.070) to *Trip 9 Sub-trip Number* (10.079). If the trip does not have a sub-trip number then zero is stored in the sub-trip log.

If any parameter between Pr 10.020 and Pr 10.029 inclusive is read by serial communication, then the trip number in Table 12-2 is the value transmitted.

NOTE

The trip logs can be reset by writing a value of 255 in Pr 10.038 (via serial communications only).

Safety	Product	Mechanical	Electrical	Getting	Basic	Running the	Optimization NV Media Onboard	Advanced	Diagnostics	UL Listina		
information	information	installation	installation	started	parameters	motor	Optimization	Card	PLC	parameters	Diagnostics	OL LISTING

12.9 Behaviour of the drive when tripped

If the drive trips, the output of the drive is disabled so the load coasts to a stop. If any trip occurs, the following read only parameters are frozen until the trip is cleared. This is to help diagnose the cause of the trip.

Parameter	Description				
01.001	Frequency reference				
01.002	Pre-skip filter reference				
01.003	Pre-ramp reference				
01.069	Reference in rpm				
01.070	Clamped reference				
02.001	Post-ramp reference				
03.001	Final demand ref				
03.002	Estimated frequency				
03.003	Frequency error				
03.004	Frequency controller output				
03.045	Frequency reference				
04.001	Current magnitude				
04.002	Active current				
04.017	Reactive current				
05.001	Output frequency				
05.002	Output voltage				
05.003	Power				
05.005	DC bus voltage				
07.001	Analog input 1				
07.002	Analog input 2				

If the parameters are not required to be frozen then this can be disabled by setting bit 4 of Pr 10.037.

Safety Product Mechanical Electrical Gettina Basic Running the NV Media Onboard Advanced Ontimization Diagnostics **UL Listing** information information installation parameter moto PLC parameters

13 UL Listing

13.1 UL file reference

All models are UL Listed to both Canadian and US requirements. The UL file reference is: NMMS/7.E171230.

13.2 Option modules, kits and accessories

Option Modules, Control Pods, Installation Kits and other accessories for use with these drives are UL Listed.

13.3 Enclosure ratings

All models are Open Type as supplied.

The drive enclosure is not classified as a fire enclosure. A separate fire enclosure must be provided. A UL/ NEMA Type 12 enclosure is suitable.

When fitted with a conduit box the drives meet the requirements for UL Type 1. Type 1 enclosures are intended for indoor use, primarily to provide a degree of protection against limited amounts of falling dirt.

The drives meet the requirements for UL Type 12 when installed inside a Type 12 enclosure and through-hole mounted using the sealing kit and the high-IP insert (where provided).

When through-hole mounted, the drives have been evaluated as suitable for use in surrounding air temperatures up to 40 $^{\rm o}$ C.

Remote Keypads are UL Type 12 when installed with the sealing washer and fixing kit provided.

When installed in a Type 1 or Type 12 enclosure, the drives may be operated in a compartment handling conditioned air.

13.4 Mounting

Drives may be surface, through-panel or tile mounted using the appropriate brackets. Drives may be mounted singly or side by side with suitable space between them (bookcase mounting).

13.5 Environment

Drives must be installed in a Pollution Degree 2 environment or better (dry, non-conductive pollution only).

The drives have been evaluated for use at ambient temperatures up to 40 °C. The drives have additionally been evaluated for 50 °C and 55 °C ambient air temperatures with a derated output.

13.6 Electrical Installation

OVERVOLTAGE CATEGORY

OVC III

SUPPLY

The drives are suitable for use on a circuit capable of delivering not more than 100,000 RMS symmetrical amperes, 600 Volts AC Maximum.

TERMINAL TORQUE

Terminals must be tightened to the rated torque as specified in the Installation Instructions.

WIRING TERMINALS

Drives must be installed using cables rated for 75 °C operation, copper wire only.

Where possible, UL Listed closed-loop connectors sized according to the field wiring shall be used for all field power wiring connections.

GROUND CONNECTION INSTRUCTIONS

UL Listed closed-loop connectors sized according to the field wiring shall be used for grounding connections.

BRANCH CIRCUIT PROTECTION

The fuses and circuit breakers required for branch circuit protection are specified in the Installation Instructions.

OPENING OF BRANCH CIRCUIT

Opening of the branch-circuit protective device may be an indication that a fault has been interrupted. To reduce the risk of fire or electric shock, the equipment should be examined and replaced if damaged. If burnout of the current element of an overload relay occurs, the complete overload relay must be replaced.

Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the National Electrical Code (NEC), The Canadian Electrical Code, and any additional local codes.

DYNAMIC BRAKING

M100, M101, M200, M201, M300 or M400, frame sizes 1 to 4 have been evaluated for dynamic braking applications. Other drive models have not been evaluated for dynamic braking.

13.7 Motor overload protection and thermal memory retention

All drives incorporate internal overload protection for the motor load that does not require the use of an external or remote overload protection device.

The protection level is adjustable and the method of adjustment is provided in section 8.4 *Motor thermal protection* on page 54. Maximum current overload is dependent on the values entered into the current limit parameters (motoring current limit, regenerative current limit and symmetrical current limit entered as percentage) and the motor rated current parameter (entered in amperes).

The duration of the overload is dependent on motor thermal time constant. The maximum programmable time constant depends on the drive model. The method of adjustment of the overload protection is provided.

The drives are provided with user terminals that can be connected to a motor thermistor to protect the motor from high temperature, in the event of a motor cooling fan failure.

13.8 External Class 2 supply

The external power supply used to power the 24 V control circuit shall be marked: "UL Class 2". The power supply voltage shall not exceed 24 Vdc.

13.9 Modular Drive Systems

Drives with DC+ and DC- supply connections, rated 230 V or 480 V have been investigated for use in Modular Drive Systems as inverters when supplied by the converter sections from the Unidrive-M range. In these applications the inverters are required to be additionally protected by supplemental fuses.

Alternatively, the inverters may be supplied by converter models: Mentor MP25A, 45A, 75A, 105A, 155A or 210A.

Contact the supplier of the drive for more information.

Running the Safety Product Mechanical Electrical Getting Basic NV Media Onboard Advanced **UL Listing** Optimization Diagnostics information information installation installation parameters Card PLC parameters

13.10 Requirement for Transient Surge Suppression

This requirement only applies to Frame Size 7 drives with rated input voltage = 575 V.

TRANSIENT SURGE SUPPRESSION SHALL BE INSTALLED ON THE LINE SIDE OF THIS EQUIPMENT AND SHALL BE RATED 575 Vac (PHASE TO GROUND), 575 Vac (PHASE TO PHASE), SUITABLE FOR OVERVOLTAGE CATEGORY III, AND SHALL PROVIDE PROTECTION FOR A RATED IMPULSE VOLTAGE TO WITHSTAND VOLTAGE PEAK OF 6 kV AND A CLAMPING VOLTAGE OF MAXIMUM 2400 V.

Index

A		М	
Acceleration	46, 47	Magnetising current	73
Advanced menus	,	Maximum frequency	
Advanced parameters	67	Mechanical Installation	
Alarm		Menu 0	25
Alarm Indications	150	Menu 01 - Frequency / speed reference	78
Autotune	49	Menu 02 - Ramps	82
В		Menu 03 - Slave frequency, speed feedback and speed control	85
Basic requirements	41	Menu 04 - Torque and current control	
·		Menu 05 - Motor control	
C		Menu 06 - Sequencer and clock	98
Cautions	7	Menu 07 - Analog I/O	101
Control connections	20	Menu 08 - Digital I/O	104
Control terminal specification	21	Menu 09 - Programmable logic, motorized pot and binary	
Current limits	54	sum	108
_		Menu 10 - Status and trips	112
D		Menu 11 - General drive set-up	114
Deceleration	46, 47	Menu 12 - Threshold detectors and variable selectors	115
Defaults (restoring parameter)	27	Menu 14 - User PID controller	120
Destination parameter	20	Menu 18 - Application menu 1	124
Diagnostics	129	Menu 19 - Application menu 2	125
Display	23	Menu 20 - Application menu 3	
Display messages	26	Menu 21 - Second motor parameters	
_		Menu 22 - Additional Menu 0 set-up	
F		Menu structure	25
Field weakening (constant power) operation	55	Minimum connections to get the motor running in any	
Fixed V/F mode	11	operating mode	42
		Mode parameter	20
G		Motor (running the motor)	
Getting Started	23	Motor number of poles	48
17		Motor rated current	
K		Motor rated current (maximum)	54
Keypad	23	Motor rated frequency	
		Motor rated power factor	,
		Motor rated speed	
		Motor rated voltage	
		Motor thermal protection	54
		N	7
		Notes	/
		Onen leen mede	44
		Open loop wester mode	
		Open loop vector mode	
		Operating mode (changing)	-
		Operating modes	
		Optimization	
		Options	13
		Parameter access level	27
		Parameter access level	
		Parameter ranges	
		Parameter security	
		Product information	9
		Q	
		Quick start commissioning	
		Quick start commissioning / Start-up	
		Quick start connections	41

R

Relay contacts	22
RFC-A mode	11
S	
Safety Information	7, 65
Saving parameters	
Serial comms lead	
Serial communications connections	
Serial communications look-up table	
Single line descriptions	
Status	
Status Indications	
Switching frequency	5
Т	
Trip	129
Trip History	
Trip Indications	
U	
User Security	27
V	
Voltage mode	49, 50
w	
Warnings	7

